 


George.

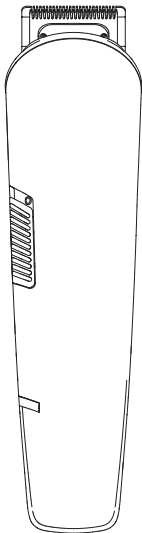

GHMG09B4Z **GH MULTIGROOM GIFT**

User Guide

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We've written this manual to help you get the most from your multi-groom hair clippers. Please keep hold of it for future reference.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS THAT YOU SHOULD BE AWARE OF. READ ALL INSTRUCTIONS BEFORE USING.

- 1. KEEP AWAY FROM WATER**
- 2. WARNING:** Keep the appliance dry.
- 3.** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 4.** Children shall not play with the appliance.
- 5.** Cleaning and user maintenance shall not be made by children without supervision.
- 6.** This appliance is not suitable for use in a bath or shower.

- 7. This appliance is designed for household use only.**
- 8. Indoor use only.**
- 9. Do not leave the appliance unattended when it is switched on, as this may be a source of danger.**
- 10. Place the appliance on a table or flat surface.**
- 11. Do not place the appliance on any surface when it is switched on.**
- 12. Do not use this appliance near water contained in basins, bathtubs or other vessels.**
- 13. The appliance must not be immersed in any liquid.**
- 14. Do not use the appliance with wet hands or if there is water dripping on the appliance.**
- 15. Switch off and unplug the appliance before cleaning or when not in use.**
- 16. Do not attempt to repair or disassemble the appliance.**
- 17. Do not use this appliance if there is any damage to the appliance or the power cord.**
- 18. Never use an extension cord.**
- 19. Do not bend the supply cord.**
- 20. Do not place the power cord across or near a heating source.**
- 21. Do not drop or hit the appliance.**
- 22. Do not use where aerosol spray products are used or where oxygen is being administered.**
- 23. Do not operate the appliance in the presence of explosive and/or flammable fumes and/or**

liquids.

24. Do not use flammable substances to clean the appliance.

25. Do not use the hair clipper if you have any open wounds, cuts, sunburn or blisters.

26. The batteries are not intended to be replaced by the user.

27. The product is built with an internal rechargeable battery: Do not expose the product to excessive heat such as sunshine, fire or the like.

28. The battery must be removed from the appliance before disposal.

29. The appliance must be disconnected from the power supply when removing the battery.

30. The battery is to be disposed of safely.

31. WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with the appliance.


32. The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

33. Please refer to the 'Cleaning and maintenance' section of the these instructions before cleaning the product.


Attention: The product should be cordless use. The product has built in over voltage protection. Do not charge the product at 6V to 18V or there would be unable to charge.

What's in the box

USB cable

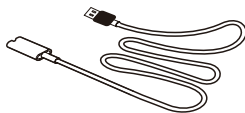

Clipper body

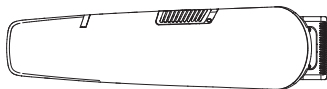

T-shaped cutting head

 


U-shaped cutting head




Detail cutting head

Foil shaver



Nose/ear hair trimmer




 


U-shaped blade combs



U-shaped cutting head adjustable comb (0.5-10mm comb)

    
T-shaped blade combs




Oil bottle



 
Cleaning brush




Bag

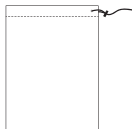 

User Guide

 

Features

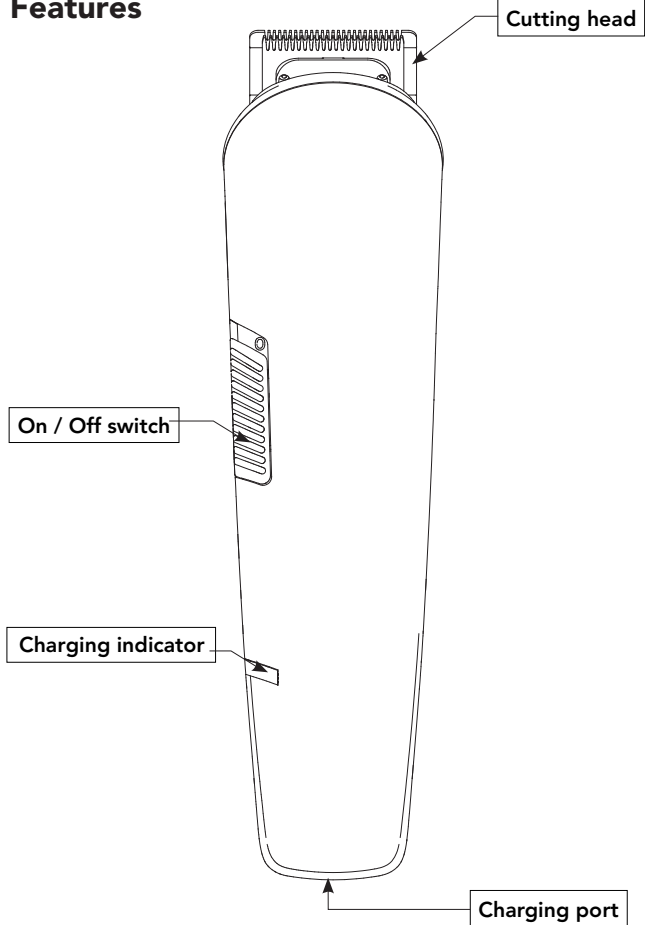 

Charging


Before you can use your device, make sure to charge it for at least 2 hours, so the lithium battery is fully loaded for optimum performance before first use. The electric shaver can be charged in two ways: by means of an external device with a USB port (e.g. computer, USB hub, power bank, etc.). By means of a standard USB adaptor connected to power socket. Note: The selected power source must have an output of 5V DC.

The red LED indicator will flash when the device is correctly connected to the mains and the charging is in process.

- When the battery is fully charged, the green LED indicator will constantly light up.
- Fully charged, the cordless operation time will be about 60 minutes
- To maintain optimum capacity and performance of the rechargeable battery, we highly recommend to fully charge your device for min. 2 hours at least every 3 months.


Cutting heads

Your clipper comes with five different cutting heads; the list below shows what they are used for.

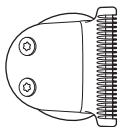


T-shaped cutting head:

Use this cutting head to trim large areas of hair on your head or body.

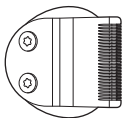


U-shaped cutting head:

This cutting head is specially designed for cutting beards and moustaches.

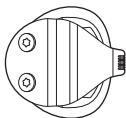


Detail cutting head:

Use this cutting head to cut fine details and trim edges and hair lines.

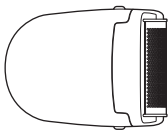

Foil shaver:

Use to shave facial or body hair. You will have to cut the longer hair short before using the foil shaver to finish it off.

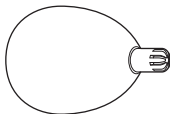

Nose / ear hair trimmer:

Use to trim long nasal and ear hair.

Fitting and removing the cutting heads

Fitting


1. Slot the tab on the cutting head into the slot on the back of the body.
2. Check the cutting head is flush against the back of the body
3. Push the cutting head down until it locks in place with a click.

Removing


4. Press the blade of the cutting head upwards until the cutting head pops off the top of the clippers body.

Combs


U-shaped

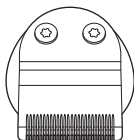


4mm

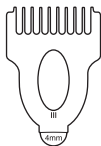


6mm

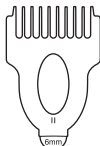


8mm

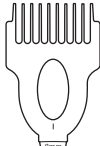


Adjustable comb

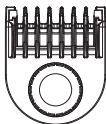


T-shaped

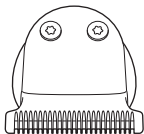


3mm

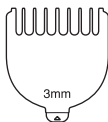


6mm

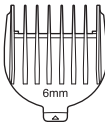

9mm

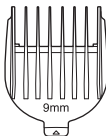

12mm

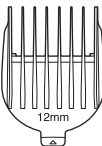

Fitting and removing a comb

Fitting a comb:


1. Slot the front of the comb over the blades of the cutting head.
2. Push the back of the comb down over the back of the cutting head until it locks in place.

Removing a comb:

3. Place your thumb under the tab on the back of the comb and push upwards until the comb comes off.

Using the U-shaped cutting head adjustable comb

To adjust the comb by rotating the knob

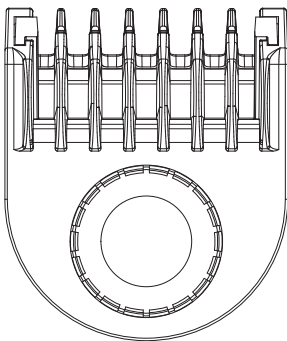

Using the T & U shaped cutting heads

- After you have charged the clippers and fitted the correct cutting head and comb you are ready to use your clippers.
- Press the on/off button to turn the clippers on.
- Lower the clippers against the area you want to remove hair from. Rotate the clippers until the cutting comb is flat against your skin and slowly push over the hair you want to remove.
- Do not press too hard against the skin while trimming.
- For best results, start cutting at a longer hair length than you want and slowly reduce down to the desired length.
- Always cut from the neck towards the top of your head and from your forehead towards the top of your head.
- Only trim small sections at a time.

Using the detail cutting head

- Use for accurate lines and detailed effects, attach the detail trimmer head.
- Switch the clippers on and gently move the blade through the hair you need to trim.
- Allow the blades to cut through the hair at their own speed. Do not force the cutting blades through the hair.

Using the foil shaver

- For a smooth finish, use the foil shaver.
- Check to ensure the foil is not damaged before using.
- Switch the clippers on and move the shaver gently over the skin, apply minimal pressure and shave in the direction of hair growth.
- Make sure to be particularly careful when trimming sensitive areas of skin.
- Never switch the appliance off whilst shaving.

Using the nose/ear hair trimmer

- Use to trim nose hair and outer ear hair.
- Never insert the tip more than 5mm into your nostril.
- Always clean the attachment after each use.
- Trim nose hair by gently moving the tip in and out of the nose while rotating around to remove the unwanted hairs.
- Slowly move the tip around the ear to remove hairs that stick out beyond the rim of the ear.

Oiling the blades of the U & T shaped cutting heads

If you are using the clippers regularly, the U & T shaped cutting heads will occasionally need to be oiled. Only use acid free oil such as sewing machine or a light lubricating oil.

1. Remove the cutting head and clean.
2. Apply 2 drops of the supplied oil to the teeth of the blades of the clipper.
3. Replace the blade assembly back into the clipper head .
4. Switch the clippers on and off a few times to distribute the oil.
5. Wipe any excess oil off the blades with a cloth.

Cleaning & maintenance

1. Switch off the clippers and remove the cable.
2. Remove the cutting comb, if fitted and rinse it under running water to remove any hair clippings. Allow to dry completely before using again.
3. Wipe the case of the clippers with a damp cloth or sponge if required then dry with a soft cloth. Never use abrasive cleaning agents.
4. Use the cleaning brush to remove any hair clippings from the cutting heads after using the clippers.
5. Ensure all parts are completely dry before storing your clippers.

100 DAY **SATISFACTION GUARANTEE**

If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

Need something else?

www.GEORGE.com

We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number



ASDA 
technical support
0333 600 7700

Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product name.

Call
0800 952 0101

Write
ASDA, Leeds LS11 5AD

Product name:
GH MULTIGROOM GIFT

Product site code: 15B.09.24.137

Copyright

© 2024 ASDA Stores Limited.
All other trademarks appearing herein are the property of their representative owners.
Specifications are subject to change without notice.
Manufactured for:
ASDA, Leeds LS11 5AD/
ASDA, Antrim BT41 4GY

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

