

## **GHAMON1171B4M 23L Digital Microwave Oven with AirFry**

### **User Guide**

230-240V~50Hz,  
1350-1450W microwave input power,  
900-1000W grill input power,  
1600-1700W Convection

**IMPORTANT: RETAIN FOR FUTURE REFERENCE**



# About this guide

We're here to help you get the most from your microwave, so please keep hold of this manual for future use.

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

## ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

# IMPORTANT SAFETY INSTRUCTIONS

## WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.  
Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Keep the appliance and its cord out of reach of children less than 8 years.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
6. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
7. **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.

8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. Only use utensils that are suitable for use in microwave ovens.
10. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
11. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
12. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
14. The oven should be cleaned regularly and any food deposits removed.
15. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
16. The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)
17. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
18. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
19. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
20. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;

- by clients in hotels, motels and other residential type environments;
- farm houses;
- bed and breakfast type environments.

21. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
22. Metallic containers for food and beverages are not allowed during microwave cooking.
23. The appliance shall not be cleaned with a steam cleaner.
24. The appliance is intended to be used freestanding.
25. The rear surface of appliances shall be placed against a wall.
26. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
27. The temperature of accessible surfaces may be high when the appliance is operating.
28. **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

**READ CAREFULLY AND KEEP FOR FUTURE  
REFERENCE  
HOUSEHOLD USE ONLY  
(NOT FOR COMMERCIAL USE)**

## **TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION**

### **DANGER**

#### **Electric Shock Hazard**

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

## **WARNING**

### **Electric Shock Hazard**

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
  - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - 2) The extension cord must be a grounding-type 3-wire cord.
  - 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

## **CLEANING**

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.

2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

## UTENSILS

### CAUTION

#### Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

#### Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.



## Materials you can use in microwave oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only ( meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

## Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

 
# How to...

## ...names of oven parts and accessories


(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)

Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

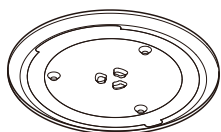


Glass Tray

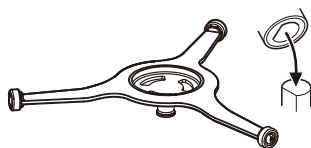 


Turntable Ring Assembly



 
Instruction Manual

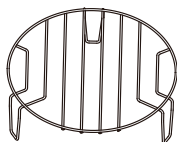

 
Grill Rack (Can not be used in microwave function and must be placed on the glass tray.)



 Bake Tray (Can't be used in conjunction with microwave function and can be placed on the grill rack.)

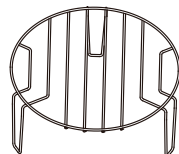

 Grill Rack (Can not be used in microwave function and must be placed on the glass tray.)

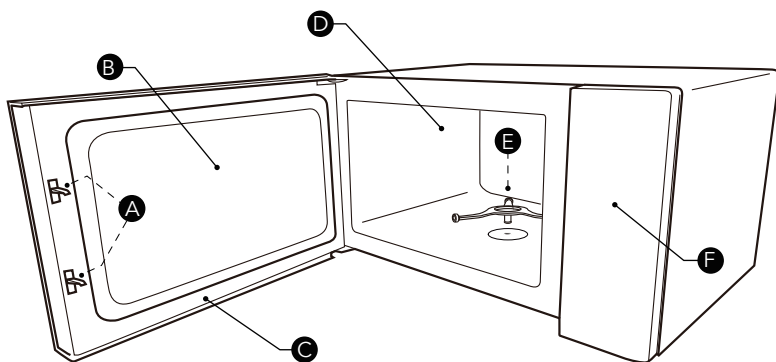

A) Safety interlock system

B) Observation window

 
C) Door assembly

D) Oven cavity

E) Turntable Ring Assembly


F) Control panel

Cleaning the cooking compartment and putting the turntable in place.  
For new installations, make sure all packaging and shipping tape has been removed.  
Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

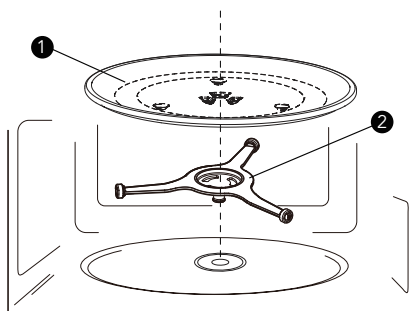

1) Glass Tray

 2) Turntable Ring Assembly

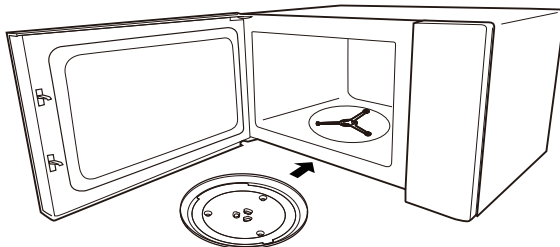

#### Notes:

1. Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
2. Never place the glass tray upside down. The glass tray should never be restricted.
3. Both glass tray and turntable ring assembly must always be used during cooking.
4. All food and containers of food are always placed on the glass tray for cooking.
5. Never restrict the movement of the turntable.
6. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

#### Countertop Installation

Remove all packing material and accessories.

Examine the oven for any damage such as dents or broken door.

Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface.

 
Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

Do not operate the microwave without the waveguide cover attached to the oven cavity. If it is damaged, please contact the technical helpline for a replacement waveguide cover.

# How to...

## ...installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

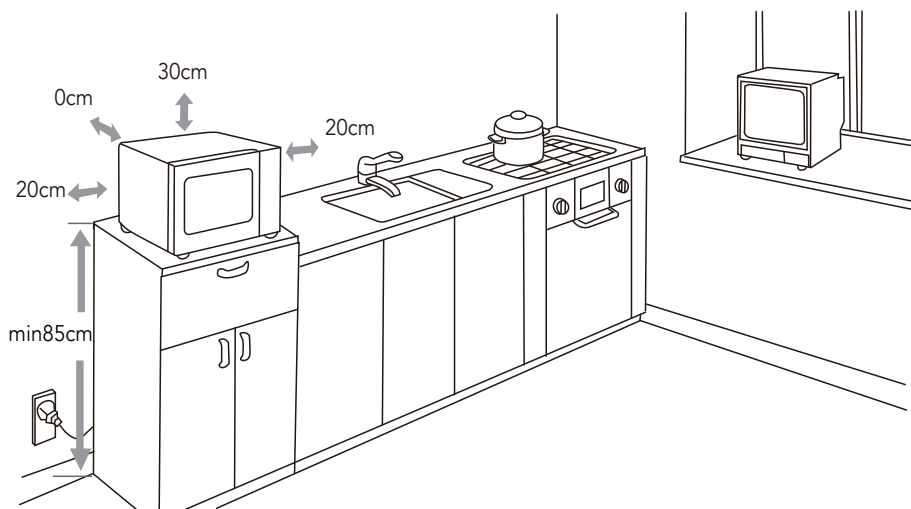

(1) The minimum installation height is 85cm.

(2) The rear surface of appliance shall be placed against a wall.

Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.

(3) Do not remove the legs from the bottom of the oven.

(4) Blocking the intake and/ or outlet openings can damage the oven.

(5) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet.

Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.


**WARNING:** Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



# How to...

 ...recognise the microwave control panel

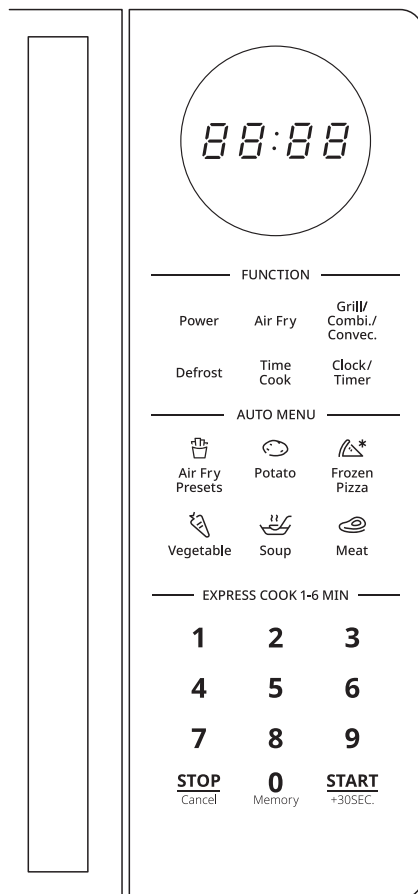

## Display

All cooking times, power level action icons and time are displayed here.

## FUNCTION

### Power

### Air Fry

### Grill/Combi./Convec.

### Defrost

### Time Cook

### Clock/Timer

## AUTO MENU

### Air Fry Presets

### Potato

### Frozen Pizza

## EXPRESS COOK 1-6 MIN

### STOP/Cancel

### Memory

### START/+30SEC.

# How to...







...use your microwave



## FUNCTION

Power	Air Fry	Grill/ Combi/ Convec.
Defrost	Time Cook	Clock/ Timer

## AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

## EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Setting the Clock

1. Press "**Clock/Timer**" once, and then "00:00" will display.
2. Press the number keys to enter the time.  
Example: To set the clock to 10:20, please press "1,0,2,0" in turn.
3. Press "**Clock/Timer**" to confirm.  
The clock is set.

### NOTES:







- (1) The clock is a 24-hour display.  
If the clock is not set, it will not work when powered.
- (2) To reset the clock, please repeat step 1 to step 3.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Setting the Kitchen Timer

1. Press "**Clock/Timer**" twice, and then "00:00" will display.
2. Press the number keys to set the desired time. The maximum timer value is "99:99".
3. Press "**START/+30SEC.**" to confirm. The timer starts counting down.







NOTE: The kitchen timer is a timer.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 * Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Microwave Cooking

11 power levels are available.

Level	Power	Display
11	100%	PL10
10	90%	PL09
9	80%	PL08
8	70%	PL07
7	60%	PL06
6	50%	PL05
5	40%	PL04
4	30%	PL03
3	20%	PL02
2	10%	PL01
1	0%	PL00

1. Press "**Power**" once, and then "PL10" will display.
2. Press "**Power**" repeatedly to set the power level. The 11 power levels are available.
3. Press "**Time Cook**" once, and then press the number keys to set the cooking time.  
The maximum time value is "99:99".
4. Press "**START/+30SEC.**" to start cooking.

NOTE: Opening the oven door or pressing "**STOP/Cancel**" during operation will interrupt the current mode.  
Level 1 is mainly used for deodorization, under this mode only the fan works.  
No heating is applied.









#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Grill or Combi. Cooking

1. Press "**Grill/Combi./Convec.**" repeatedly to select the cooking mode, and then "G"(grill), "C-1", "C-2", "C-3", "C-4" will display in order.
2. Press "**Time Cook**" once and then press the number keys to set the cooking time.  
The maximum time value is "99:99".
3. Press "**START/+30SEC.**" to start cooking.

## Grill & Combination instructions

Instructions	Display	Microwave	Grill	Convection
1	G		●	
2	C-1	●		●
3	C-2	●	●	
4	C-3		●	●
5	C-4	●	●	●







NOTE: The buzzer will sound to remind of turning over the food during cooking. If no operation, the oven will continue working.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Convection Cooking (with preheating & without preheating)







1. Press "**Grill/Combi./Convec.**" six times, and then "110°C" will display.
2. Press "**Grill/Combi./Convec.**" repeatedly to set the temperature. 10 options are available including "110, 120, 130, 140, 150, 160, 170, 180, 190, 200"°C.
3. Press "**START/+30SEC.**" to confirm the temperature.
4. Press "**START/+30SEC.**" again to start preheating.  
When preheating is completed, the oven will beep twice. Open the door and place food in the oven. Then close the door.  
( If preheating is not needed, please skip this step and press "**Time Cook**" once.)
5. Press the number keys to set the cooking time. The maximum time value is "99:99".
6. Press "**START/+30SEC.**" to start cooking.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Air fry Cooking (with preheating & without preheating)







1. Press "**Air Fry**" once, and then "180°C" will display.
2. Press "**Air Fry**" repeatedly to set the temperature. 3 options are available including "180, 190, 200"°C.
3. Press "**START/+30SEC.**" to confirm the temperature.
4. Press "**START/+30SEC.**" again to start preheating.  
When preheating is completed, the oven will beep twice. Open the door and place food in the oven. Then close the door.  
( If preheating is not needed, please skip this step and press "**Time Cook**" once.)
5. Press the number keys to set the cooking time. The maximum time value is "99:99".
6. Press "**START/+30SEC.**" to start cooking.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Defrost by Weight

1. Press "**Defrost**" once, and then the screen will display "d-1".
2. Press the number keys to set the weight of the food. The range of weight is 100-2000g.
3. Press "**START/+30SEC.**" to start defrosting.







NOTE: The buzzer will sound as a reminder to turn over the food during defrosting if required.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Defrost by Time

1. Press "**Defrost**" twice, and then the screen will display "d-2".
2. Press "**Time Cook**" once, and then press the number keys to set the desired defrost time.  
The maximum time value is "99:99".
3. Press "**START/+30SEC.**" to start defrosting.

#### NOTES:







- (1) The default power level is PL03 and it cannot be changed.
- (2) The buzzer will sound as a reminder to turn over the food during defrosting if required.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Multi-Stage Cooking

### NOTES:

- (1) Two cooking stages can be set in multi-stage cooking.
- (2) If you set the defrost function, it will work automatically in the first stage.
- (3) The kitchen timer, auto menu, speedy cooking and preheating cannot be set as one of the multi-stage.

Example: Defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes.







1. Press "**Defrost**" twice and then the screen will display "d-2".
2. Press "**Time Cook**" once and then press "5", "0", and "0" to set the desired defrost time to 5 minutes.
3. Press "**Power**" once and then "PL10" will display.
4. Press "**Power**" repeatedly to set the power level to PL08.
5. Press "**Time Cook**" once and then press "7", "0", and "0" to set the cooking time.
6. Press "**START/+30SEC.**" to start cooking.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Speedy Cooking







1. In standby mode, press "**START/+30SEC.**" to cook food with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "99:99".
2. In standby mode, pressing number keys 1 to 6 lets you quickly select a cooking time from 1 to 6 minutes. Then you can press "**START/+30SEC.**" to increase the cooking time. The maximum time value is "99:99".



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Lock Function for Children

You can use this function to prevent children from accidentally turning the appliance on.

To activate the lock:

In standby mode, press and hold "**STOP/Cancel**" for three seconds. A beep sounds. the locked icon will display.

To deactivate the lock:

In the locked state, press and hold "**STOP/Cancel**" for three seconds. A beep sounds.











#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Memory Function

You can save settings for 3 of your favourite dishes in the memory and call it up again.

1. Press "**0/Memory**" repeatedly to select memory 1-3 procedure.  
"1", "2" and "3" will display in order.
2. If the procedure has been set, press "**START/+30SEC.**" to start working.  
Otherwise, please continue to set.
3. After finishing the setting, press "**START/+30SEC.**" once to save the procedure.

Example: Set memory 2 (cook food with 80% microwave power for 3 minutes).

1. In standby mode, press "**0/Memory**" twice.
2. Press "**Power**" repeatedly till "PL08" displays.
3. Press "**Time Cook**" and then press number keys "3", "0", and "0" in order.
4. Press "**START/+30SEC.**" to save the setting and "2" will display.

#### NOTES:







- (1) If the power is disconnected, the memory will be erased.
- (2) The convection with preheating and the auto menu cannot be set as a memory function.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## ECO Function

To enter ECO mode:

In standby mode, press "**STOP/Cancel**" once, or if there is no operation within 10 minutes, the screen will turn off.

To cancel ECO mode:







In ECO mode, pressing any key, or opening the door will cancel it.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

 Air Fry Presets	 Potato	 Frozen Pizza
 Vegetable	 Soup	 Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Recall Function

1. If the clock has been set, the current time will display for three seconds by pressing "**Clock/Timer**" in the cooking state.
2. In the microwave cooking state, press "**Power**" to inquire about the power level. It will display for three seconds. In the grilling state, convection cooking state, and combination cooking state, press "**Grill/Combi./Convec.**" to inquire about the cooking mode or temperature.



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

Air Fry Presets	Potato	Frozen Pizza
Vegetable	Soup	Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Auto Menu

1. Press the corresponding menu key repeatedly to set the weight of the food.
2. Press "**START/+30SEC.**" to start cooking.

For example, cooking 2 potatoes as follows:

1. Press "**Potato**" twice, "2" displays.
2. Press "**START/+30SEC.**" to start cooking.

## Auto Menu Chart

Menu	Weight	Display	Power
 Potato	1(230g)	1	P100
	2(460g)	2	
	3(690g)	3	
 Frozen Pizza	100g	100g	Conv.190°C
	200g	200g	
	300g	300g	
 Vegetable	150g	150g	P100
	350g	350g	
	500g	500g	
 Soup	200ml	200g	P100
	400ml	400g	
	600ml	600g	
 Meat	150g	150g	P80
	300g	300g	
	450g	450g	
	600g	600g	



#### FUNCTION

Power	Air Fry	Grill/ Combi./ Convec.
Defrost	Time Cook	Clock/ Timer

#### AUTO MENU

Air Fry Presets	Potato	Frozen Pizza
Vegetable	Soup	Meat

#### EXPRESS COOK 1-6 MIN

<b>1</b>	<b>2</b>	<b>3</b>
<b>4</b>	<b>5</b>	<b>6</b>
<b>7</b>	<b>8</b>	<b>9</b>
<b>STOP</b> Cancel	<b>0</b> Memory	<b>START</b> +30SEC.

## Air fry Menu

For air fry cooking you will need to select & confirm the type of food.

Please refer to the chart below.

1. Press "**Air Fry Presets**" repeatedly to choose the desired menu, and "H-1~H-9" will display in order.
2. Press "**START/+30SEC.**" to start cooking.

## Air fry Menu Chart

Display	Air fry Menu	Weight	Power
H-1	Frozen French fries	300g	Conv.200°C
H-2	Frozen Potato croquettes	350g	
H-3	Frozen Squid	300g	
H-4	Frozen Onion rings	250g	
H-5	Frozen chicken nuggets	350g	
H-6	Escalope	360g	
H-7	Shrimps	250g	
H-8	Vegetable	250g	
H-9	Spring rolls	300g	

#### NOTES:

- (1) The buzzer will sound to remind of turning over the food during cooking (except the menu "H-8"). If no operation, the oven will continue working.
- (2) Use the bake tray and grill rack. Put the food into the baking tray and place the baking tray on the grill rack.

# How to...

## ...trouble shooting

### Normal

Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven cannot be started.	(1) Power cord is not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door is not closed well.	Close door well.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

# Specifications

Rated voltage	230-240 V~ 50 Hz
Microwave Input	1350-1450 W
Microwave Output	800-900 W
Grill	900-1000 W
Convection	1600-1700 W

# Notes...



# Notes...

# Notes...



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

 
The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

**Need  
something  
else?**

**www.GEORGE.com**

We have a wide range of accessories and other products that can be ordered direct to your door.

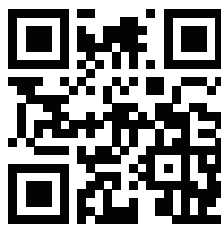

**For PDF copy of this manual  
please scan QR code and search  
for model number**

**ASDA**  
technical support  
0333 600 7700

## **Customer services information**

If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

## **Call**

**0800 952 0101**

## **Write**

ASDA, Leeds LS11 5AD

Product name: **GHAMON1171B4M**  
**23L Digital Microwave Oven with AirFry**

Product site code: **15A.06.24.173**



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

#### EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

## Copyright

© 2024 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

#### Manufactured for:

ASDA, Leeds LS11 5AD/ASDA, Antrim BT41 4GY.

## Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

