 


George.  
home

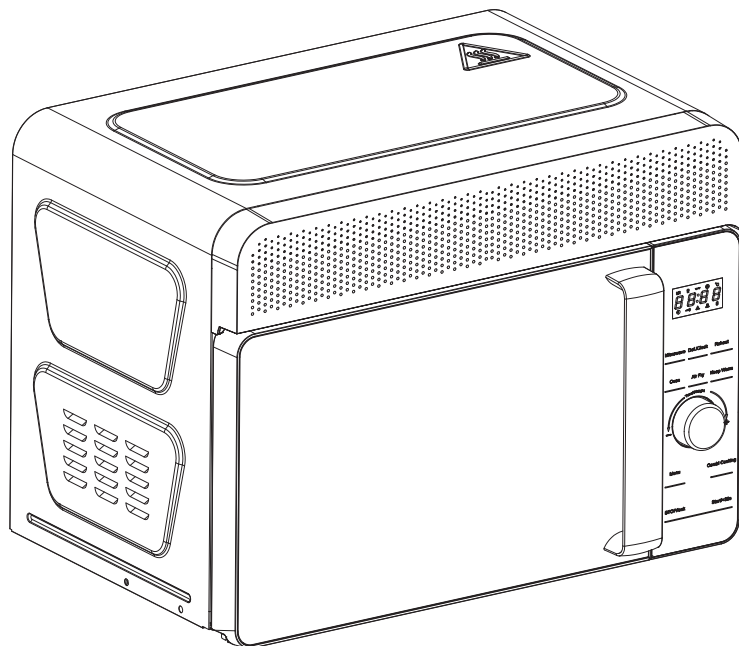

## 17L MICROWAVE WITH AIR FRYER GHAMON1171B4W

User Guide

220-240V ~ 50Hz,  
1150W microwave input power,  
1500W air fry input power

**IMPORTANT: RETAIN FOR FUTURE REFERENCE**



# About this guide

We're here to help you get the most from your microwave, so please keep hold of this manual for future use.

## WARNINGS:

**THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.**

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. For household use only. Only use this appliance for its intended purpose as described in this manual. This appliance is only suitable for domestic use and is not designed for commercial use.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. ASDA does not recommend allowing children to operate this appliance.
6. **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

7. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
8. **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
10. Do not use if the appliance, cord or plug is damaged.
11. The cord shouldn't hang over the edge of a table or counter, or touch a hot surface.
12. To avoid fire, electric shock, or injury, never immerse the microwave, cord, or plug in water or liquid. Do not use with wet hands.
13. Always place on a firm, level surface, out of reach of children.
14. Before connecting the microwave to the power, check the voltage shown on the appliance corresponds with the voltage for the mains supply of the country you are in. If it doesn't, contact your local store.
15. Please don't dismantle. If a fault occurs, have the slow cooker inspected in a qualified repair shop or return to us at Asda.
16. Remove all packaging prior to use. Inspect the product for any damage before use. If damage is found, notify ASDA to exchange the product.
17. Leave a minimum of 30cm (12") above the microwave and never place items on top as this will block the vents.
18. Only use utensils that are suitable for use in microwave ovens.
19. Do not place metallic containers or utensils in the oven whilst cooking in microwave or combi modes.
20. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
21. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

22. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
24. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
25. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
26. The oven should be cleaned regularly and any food deposits removed.
27. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
28. The appliance shall not be cleaned with a steam cleaner.
29. The microwave oven is only used in freestanding; the microwave oven shall not be placed in a cabinet.
30. Do not use attachments not recommended by the manufacturer. Only use thermometers approved for use in microwaves.
31. Keep away from harsh or abrasive cleaning agents or solvents.
32. Do not use the microwave when it is empty as this could lead to damage.
33. Never put any objects into the outer case openings or remove parts of the microwave (e.g. the feet and screws).
34. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
35. The door seals are located around the window and on the inside of the door. The seals are not airtight, but although no microwaves are released it is normal for a small amount of air or steam to escape when the microwave is in use.
36. Do not use plastic containers for food that has a high content of fat or sugar.

37. Do not use this microwave to deep fry foods.
38. Avoid cooking foods surrounded by membrane (e.g. egg yolks, potatoes, chicken livers and ready meals) without piercing them with a fork several times.
39. If you use plastic film when re-heating or cooking food, use only film designed for microwave ovens and ensure that the film does not touch the food. If necessary, pierce the film all over to allow the steam to escape.
40. When grill cooking, do not use paper or plastic containers, or plastic film. Dishes for combination-cooking should be heatproof and microwave safe.
41. Always stir microwaved foods to distribute the heat evenly, then leave to stand for a few minutes. Make sure to test the temperature of cooked food before eating.
42. Food containing a mix of fat and water (e.g. stock) should be left to stand for 30-60 seconds in the microwave after it is cooked. This allows the mixture to settle and prevents it from bubbling.
43. Certain foods may heat quicker than others (e.g. jam and puddings).
44. Use gloves if you remove any heated food.
45. Do not overheat food.
46. Food can burn if overcooked. If you're unsure about how long to cook a particular food for, start with a short cooking time and check regularly.
47. The outer-casing may become hot during use, so always place on a heat-resistant surface and use with caution.
48. Beware when opening lids as hot steam will escape.
49. The door or the outer surface may get hot when the appliance is operating.
50. Keep the waveguard cover clean at all times and wipe the interior with a damp cloth after each use. If you leave grease or fat it may overheat, smoke or catch fire.
51. Do not leave the microwave unattended when in use.
52. Unplug when not in use and before cleaning.
53. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

 
54. Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.

55. This appliance is a Group 2 Class B equipment.  
Group 2 equipment: group 2 contains all ISM RF equipment in which radio-frequency energy in the frequency range 9 kHz to 400 GHz is intentionally generated and used or only used locally, in the form of electromagnetic radiation, inductive and/or capacitive coupling, for the treatment of material, for inspection/analysis purposes, or for transfer of electromagnetic energy.



Class B equipment is equipment suitable for use in locations in residential environments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

## You should have

Digital microwave oven, glass tray, turntable support , Fry Basket & Cooking pan

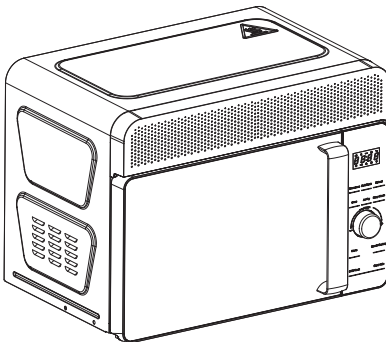


For Air fry and  
Oven function used

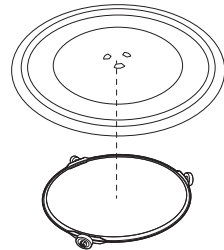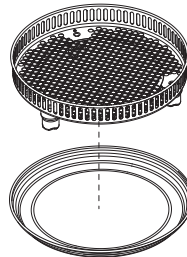  

# How to...

 
...recognise the parts of your microwave grill

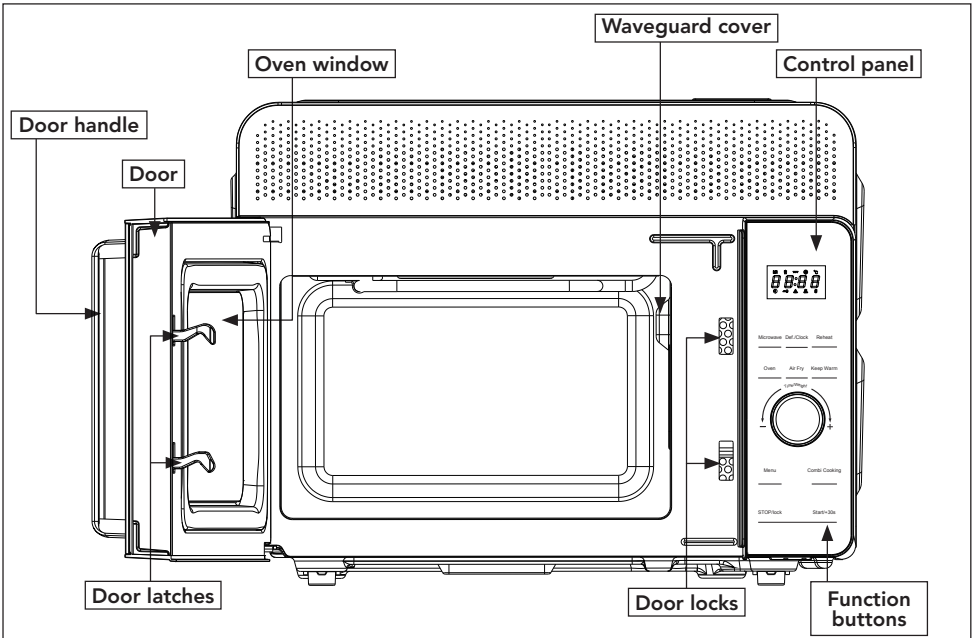

# How to...

...assemble your microwave air fryer

 
1. Remove any tape and place the turntable support in the centre of the recess on the floor of the microwave.
2. Place the glass tray onto the turntable support, aligned with the turntable shaft.

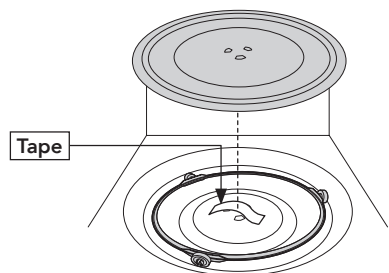



# How to...

 
...best place your microwave air fryer

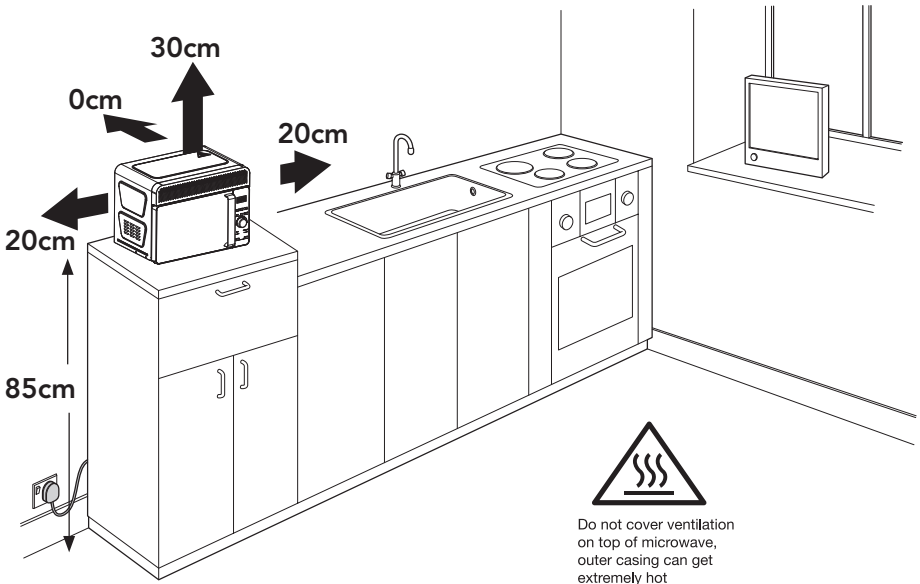

1. Do not place over a cooker or heat-producing appliance as this may cause damage.
2. Select a level surface that provides enough space for the outlet vents. Ensure the surface is strong enough to support the microwave (do not place inside cabinets).
3. A minimum clearance of 20cm (8") is required between the microwave and any adjacent wall or surface.
4. Leave a minimum of 30cm (12") above the microwave and **NEVER** place anything on top as this will block the vents.
5. The microwave should be as far away from TVs and radios as possible. Using the microwave may cause interference with reception.
6. The microwave must be positioned so the plug is accessible and the socket is within easy reach.
7. Plug the microwave into a suitable 13 amp mains socket and ensure the voltage is the same as that in your home (do not use extension cables or mains socket adaptors).

# How to...

 ...recognise the microwave control panel

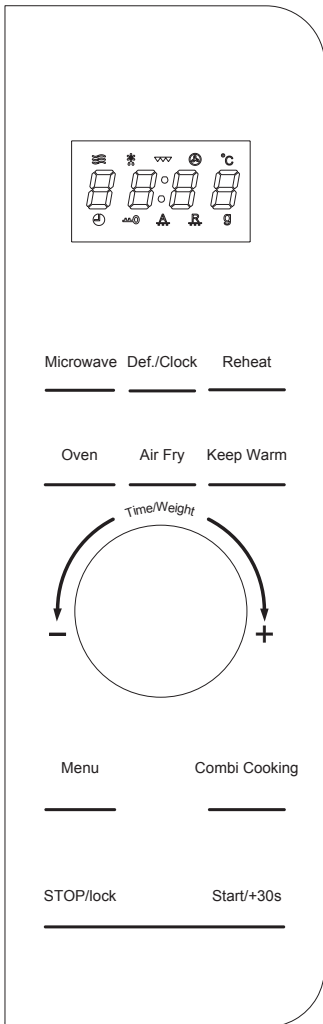

## Display

All cooking times, power level action icons and time are displayed here.

## Microwave

Press to select a power rate to cook the food at.

## Def./Clock

Press to input weight or time for defrosting.

Keep pressing for more than 3 seconds to set the clock.

## Reheat

Press to select weight for reheating.

## Oven

Press to select desired temperature for grill.

## Air Fry

Press to select the desired temperature for air fry.

## Keep Warm

Press to select the three temperature settings, "65°C", "75°C" and "85°C" to keep food warm.

## Time/Weight Dial

Turn to select weight or to select time for normal microwave power cooking. Confirm using the Start/+30Sec. button.

## Menu

Press to select auto cook menu.

## Combi Cooking

Press to select the desired temperature settings from 90°C to 200°C.

## STOP/lock

Press once to stop or pause cooking, then again to cancel the remaining cooking time.

## Start/+30s

Press once to start cooking, then again to add 30 seconds to the cooking time per press.

# How to...

...use your microwave

## Please note

 
All cookware should be suitable for microwave use and no containers with restricted openings (e.g. bottles) should be used. If baby bottles are heated, the teat should not be left on. Only use oven-proof dishes when in grill mode. Please use the table below as a guide for what is suitable to use in each mode.

 
| Cookware                | Microwave mode | Grill mode | Combination mode |
|-------------------------|----------------|------------|------------------|
| Heat resistant glass    | Yes            | Yes        | Yes              |
| Heat resistant ceramics | Yes            | Yes        | Yes              |
| Microwave safe plastics | Yes            | No         | No               |
| Kitchen roll paper      | Yes            | No         | No               |
| Foil containers         | No             | Yes        | No               |
| Aluminium foil          | No             | Yes        | No               |
| Metal tray / rack       | No             | Yes        | No               |
| Plastic film            | Yes            | No         | No               |

Wax paper, oven cooking bags and parchment paper are safe for microwave use. Aluminium foil should only be used if the recipe requires it and only on grill mode. Keep foil at least 2.5cm away from the oven walls.

Do not use metal pans or items with a metal handle or trim (including wire twist-ties) or melamine dishes (as they contain material that absorbs microwave energy and may cause dishes to crack or burn) when using in the normal microwave or combination modes.


1. Slot the plug into the mains socket and switch the power on.
2. The microwave will 'BEEP' once and the display will show 0:00.

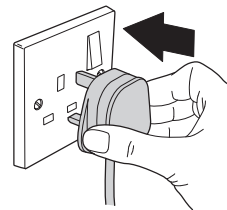

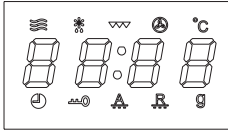

Microwave Def./Clock Reheat

 Oven Air Fry Keep Warm

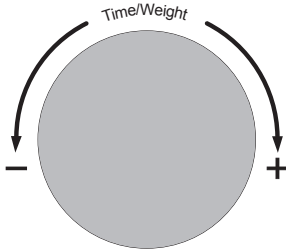

Menu Combi Cooking

STOP/lock Start/+30s


## Microwave

 1. Place the food you wish to cook into the microwave on the centre of the glass tray and close the door.
2. Press the **Microwave** button repeatedly until the desired power output is selected.

| Press Button | Power Level | Output |
|--------------|-------------|--------|
| Once         | 100%        | 100P   |
| Twice        | 90%         | 90P    |
| Three times  | 80%         | 80P    |
| Four times   | 70%         | 70P    |
| Five times   | 60%         | 60P    |
| Six times    | 50%         | 50P    |
| Seven times  | 40%         | 40P    |
| Eight times  | 30%         | 30P    |
| Nine times   | 20%         | 20P    |
| Ten times    | 10%         | 10P    |


3. Then turn the **Time.Weight** dial clockwise to select the desired cooking time. Press the **START/+30s** button to confirm the time and start cooking.

If the door is opened in any cooking mode, the microwave will stop. When the door is closed, you must press the **START/+30s** button to resume cooking. In any cooking mode should you wish to stop cooking, simply press the **STOP** button to clear all cooking settings.

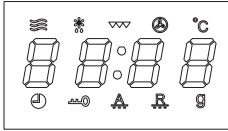

Microwave Def./Clock Reheat

 Oven Air Fry Keep Warm

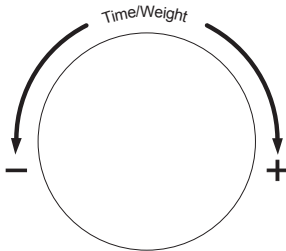

Menu Combi Cooking

STOP/lock Start/+30s

## Quick start cooking

 
This allows you to cook food at 100% power for anywhere between 30 seconds to 60 minutes.

1. Simply place your food inside the microwave, centrally on the glass tray and press the **START/+30s** button to start cooking. Remember, when you press the button the microwave will start to cook the food for 30 seconds, so just continue to press it until the desired time is reached.

| START/+30s  | Cooking time  |
|-------------|---------------|
| Once        | 30 seconds    |
| Twice       | 1 minute      |
| Three times | 1 min 30 sec  |
| Four times  | 2 minutes     |
| Five times  | 2 mins 30 sec |


You can press the START/+30s button numerous times, up to 60 minutes

2. When the time has finished, the microwave will 'BEEP' sound and the clock will appear in the display.

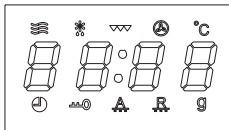

Microwave **Def./Clock** Reheat

 Oven Air Fry Keep Warm

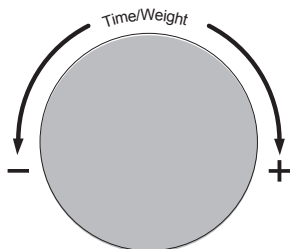

Menu Combi Cooking

**STOP/lock** **Start/+30s**

## Defrost

This microwave has two defrost modes:  
 d1 – For defrosting food by time, with a maximum time of 60 minutes.

d2 – For defrosting food by weight, with a weight range of 200g to 3000g.

 
As an example, to defrost food for 15 minutes:

1. Press the '**Def./Clock**' button and 'd1' will be displayed.
2. Turn the '**Time.Weight**' dial to set time. The defrosting power is 30%, and cannot be changed.
3. To commence defrosting, press the '**START/+30s**' button.

As an example, to defrost 400g by weight:


1. Press the '**Def./Clock**' button twice and 'd2' will be displayed.
2. Turn the '**Time.Weight**' dial clockwise until you reach the desired weight '400'.
3. To commence defrosting, press the '**START/+30s**' button.

Note: You can pause the defrosting by pressing the "**STOP/lock**" button once. This is useful if you wish to stir your food at any point. To resume the defrosting simply press the "**START/+30s**" button.

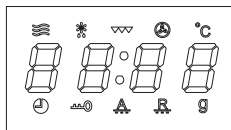

Microwave **Def./Clock** Reheat

 Oven Air Fry Keep Warm

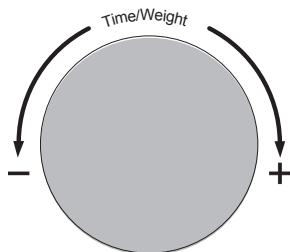

Menu Combi Cooking


**STOP/lock** Start/+30s

## Setting the clock

 1. Press the **Def./Clock** button more than 3 seconds to set the time. The clock is in a 24 hour cycle.
2. Turn the **Time.Weight** dial clockwise to scroll through the hours. Press the **Def./Clock** button again to move onto the minutes.
3. Turn the **Time.Weight** dial to scroll through the minutes. Press the **Def./Clock** to save the time setting.


NOTE: You can press the **STOP/lock** button to come out of the clock function and it will return to the original time setting.

NOTE: The microwave won't work during the clock setting process.

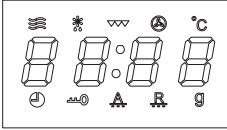

Microwave Def./Clock **Reheat**

 Oven Air Fry Keep Warm

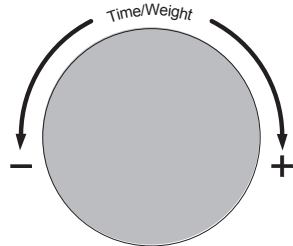

Menu Combi Cooking


STOP/lock **Start/+30s**

## Reheat

 **NOTE:** Use this function to heat a plated meal e.g. reheating a roast dinner. We suggest to use a microwave safe food cover.

1. Press "Reheat" button, "200" appears.
2. Turn the **Time.Weight** dial clockwise to select the desired weight, "200", "400", "600", "800" and "1000" g will display in order.
3. Press "**START/+30s**" to cook, microwave will BEEP once. When cooking finishes, microwave will BEEP sound and then turn back to waiting state.



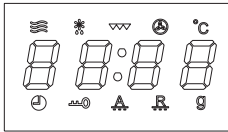


Microwave Def./Clock Reheat



Oven

Air Fry

 Keep Warm

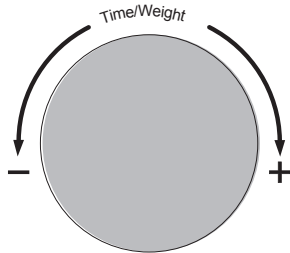

Menu

Combi Cooking



STOP/lock

Start/+30s



## Oven

 
This function is ideal for cooking food. The non-stick grill pan and fry basket should be used with this function for the best results.

1. Press the **Oven** button to cycle through the temperature settings from 90°C to 180°C. Press the **Oven** button once to automatically add 10°C of cooking temperature.
2. Turn the **Time.Weight** dial clockwise to select the desired cooking time.
3. Press **START/+30s** button to confirm the time and start cooking

As an example, to cook at 160°C for 15 minutes:

1. Press the '**Oven**' button nine times and '160C' will be displayed.
2. Turn the '**Time.Weight**' dial to set time, and "15:00" will be displayed.
3. Press the '**START/+30s**' button to start cooking. The LED display will alternate between the remaining cooking time and set cooking temperature.


NOTE: It is recommended to wear heat-resistant oven gloves when removing cooked food from the microwave. Avoid touching the heating element on the roof of the cooking cavity.

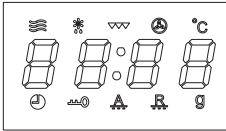

Microwave    Def./Clock    Reheat



 Oven    **Air Fry**    Keep Warm

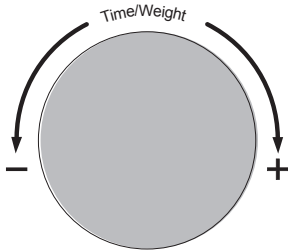

Menu    Combi Cooking



STOP/lock

**Start/+30s**



## Air Fry

This function is ideal for cooking, crisping, and heating food.

The non-stick grill pan and fry basket should be used with this function for the best results.

1. Press the **Air Fry** button to cycle through the temperature settings from 90°C to 200°C. Press the **Air Fry** button once to automatically add 10°C of cooking temperature.

2. Turn the **Time.Weight** dial clockwise to select the desired cooking time.

 
3. Press **START/+30s** button to confirm the time and start cooking

As an example, to cook at 180°C for 10 minutes:

1. Press the '**Air Fry**' button eleven times and '180C' will be displayed.
2. Turn the '**Time.Weight**' dial to set time, and "10:00" will be displayed.
3. Press the '**START/+30s**' button to start cooking. The LED display will alternate between the remaining cooking time and set cooking temperature.

NOTE: It is recommended to wear heat-resistant oven gloves when removing cooked food from the microwave. Avoid touching the heating element on the roof of the cooking cavity.


Do not use containers or trays that are not oven proof.

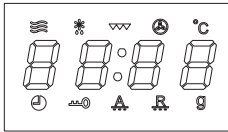

Microwave    Def./Clock    Reheat



 Oven    Air Fry    **Keep Warm**

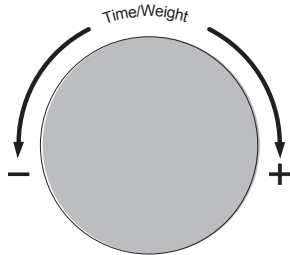

Menu    Combi Cooking



STOP/lock    **Start/+30s**



## Keep Warm

This function is ideal for keeping food warm.

The non-stick grill pan and fry basket should be used with this function for the best results.

 
1. Press the **Keep Warm** button to cycle through the temperature settings, 65°C, 75°C and 85°C.  
The maximum time that can be set when using this function is 2 hours.
2. Turn the **Time.Weight** dial clockwise to select the desired cooking time.
3. Press **START/+30s** button to confirm the time and start cooking

As an example, to cook at 75°C for 1 hour:

1. Press the '**Keep Warm**' button once and '75C' will be displayed.
2. Turn the '**Time.Weight**' dial to set time, and "1:00" will be displayed.
3. Press the '**START/+30s**' button to start cooking. The LED display will alternate between the remaining cooking time and set cooking temperature.


NOTE: It is recommended to wear heat-resistant oven gloves when removing cooked food from the microwave. Avoid touching the heating element on the roof of the cooking cavity.

Do not use containers or trays that are not oven proof.

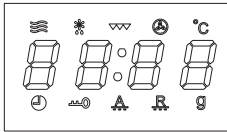

Microwave Def./Clock Reheat

 Oven Air Fry Keep Warm

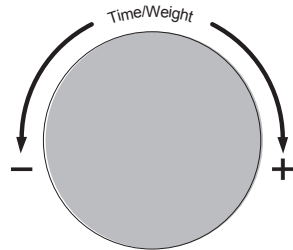

Menu Combi Cooking

STOP/lock Start/+30s


## Menu

 There are eight preset menus that can be used for easy cooking.

1. Press the Menu button to select auto cook, it will display: 'A.1 – A.8'. Continue to press the button to access the other auto selections, up to "A.8". The preset menu is listed below:
2. Turn the **Time.Weight** dial to select the weight.
3. Press the **START/+30s** button to start the cooking.

| Code | Food      | Weight   |
|------|-----------|--|
| A.1  | Potato    | 250g, 500g or 750g                               |
| A.2  | Pasta     | 50g, 100g or 150g                                |
| A.3  | Pizza     | 200g or 400g                                     |
| A.4  | Popcorn   | 100g   |
| A.5  | Vegetable | 200g, 400g or 600g                               |
| A.6  | Beverage  | 1 cup(250ml),<br>2 cup(500ml) or<br>3 cup(750ml) |
| A.7  | Meat      | 200g, 400g or 600g                               |
| A.8  | Fish      | 200g, 400g or 600g                               |


5. The results of auto cooking depend on fluctuations such as voltage, shape and size of food and where the food is placed on the glass tray.

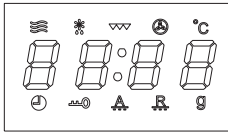

Microwave    Def./Clock    Reheat



 Oven    Air Fry    Keep Warm

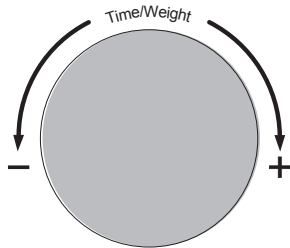

Menu



Combi Cooking



STOP/lock



Start/+30s



## Combi Cooking

 
Combination microwave and air fry cooking enables a wide range of foods to be cooked and browned in one operation. This gives you the speed cooking from a microwave with a finished taste of a food cooked under an air fry.

1. Press **Combi Cooking** to cycle through the temperature settings from 90°C to 200°C. This function uses the microwave at 30% power and the air fry function simultaneously.
2. Turn the **Time.Weight** dial clockwise to select the desired cooking time.
3. Press **START/+30s** button to confirm the time and start cooking

As an example, to cook at 200°C for 5 minutes:

1. Press the '**Combi Cooking**' button three times and '200C' will be displayed.
2. Turn the '**Time.Weight**' dial to set time, and "5:00" will be displayed.
3. Press the '**START/+30s**' button to start cooking. The LED display will alternate between the remaining cooking time and set cooking temperature.


NOTE: Do not use any metal utensils when using this function.

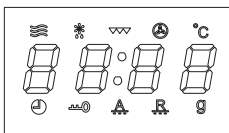

Microwave Def./Clock Reheat



 Oven Air Fry Keep Warm

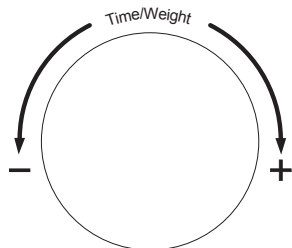

Menu Combi Cooking






STOP/lock Start/+30s



## Child lock function

 This prevents children from using the microwave by deactivating all of the buttons.

1. To activate, press and hold the **STOP/ lock** button for 3 seconds. You'll hear a 'BEEP' and the child lock symbol  will light up on the display.
2. To disable the child lock, press and hold the **STOP/ lock** button for 3 seconds until you hear a 'BEEP' and the symbol  disappears.



--0

# How to...

## ...clean your microwave

Make sure the microwave is disconnected from the power and is completely cool before cleaning. Failure to keep the microwave clean can lead to deterioration in the interior that could affect the life of the appliance and result in a hazardous condition.

1. When food or liquids stick to the microwave walls, wipe clean with a damp cloth (do not use harsh detergents or abrasives).
2. You can clean the outside of the oven with a damp cloth and dry with a soft dry cloth. Don't allow water to seep into the ventilation openings.
3. Wipe the door and window on both sides regularly along with the door seals and adjacent parts with a damp cloth to remove spills or spatters. Do not use abrasive cleaners.
4. The waveguide cover is on the right side of the oven – this is where microwave pass through to cook the food. NEVER use the microwave without the waveguide cover. If it is damage please contact the technical helpline for a replacement. It must be kept clean at all times by wiping with a mild detergent and water, then allowing to dry.
5. Do not allow the control panel to become wet. Clean with a damp cloth and dry thoroughly.
6. If steam builds inside or around the microwave door, wipe away with a damp cloth.
7. If the inside of the microwave smells, mix the juice and skin of a lemon with some water in a microwavable bowl. Place in the microwave and heat for 3 minutes on full power, then wipe the inside of the microwave thoroughly with a dry cloth.
8. Regularly clean the turntable support and oven floor by wiping the bottom of the oven with a mild detergent and water, then drying with a cloth. The turntable can be washed in warm soapy water, then dried thoroughly before placing back inside the microwave. Always make sure it is fitted back in correctly.

# How to...

...solve common problems

## Problem

If the microwave doesn't work.

## What to do

1. Ensure it is plugged in securely.
2. Check the mains fuse has not been tripped (if it has, reset the fuse).
3. See if another appliance works when plugged into the same socket (if it doesn't, the socket may be faulty).
4. If the socket works, replace the fuse.

## Problem

If the microwave will not heat food:

## What to do

1. Check the timer has not been set.
2. Ensure the door is securely closed (as a safety feature, if the door is not fully shut the microwave will not operate).
3. See if the child lock is in operation.

## Specifications

 
|   |   |
|---|---|
| <b>Rated voltage:</b>                     | 220-240V~50Hz                               |
| <b>Operating frequency:</b>               | 2450 MHz                                    |
| <b>Power output microwave:</b>            | 700W  |
| <b>Power input air fry:</b>               | 1500W                                       |
| <b>Outside dimensions: Oven capacity:</b> | 347mm(H) x 453mm(W) x 354mm(D)<br>17 Litres |
| <b>Weight (Approx):</b>                   | 14kg  |



# How to...

...change the fuse

1. Only use a 13 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

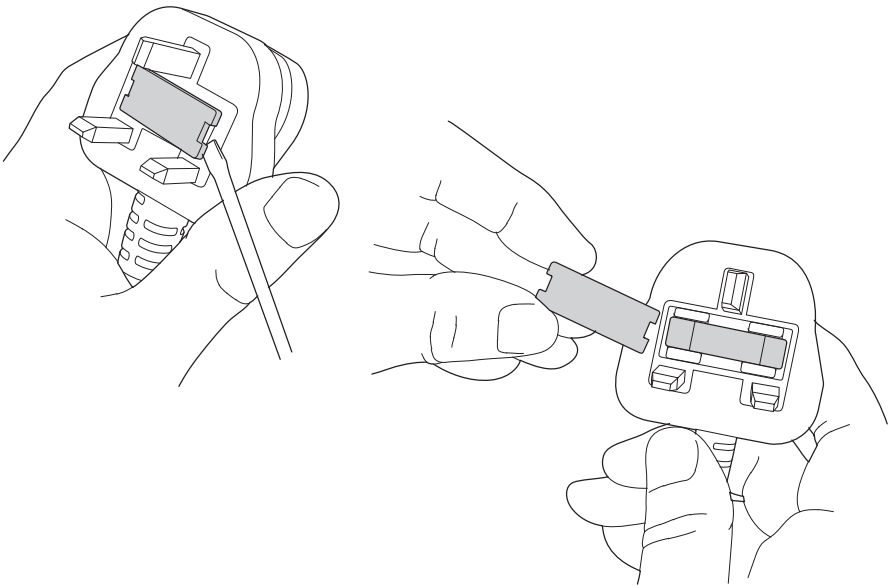

# Notes...



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

 
Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.



**For PDF copy of this manual please scan QR code and search for model number**

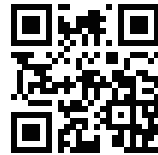

### Customer services information

If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

### Call

**0800 952 0101**

### Write

ASDA, Leeds LS11 5AD

Product name: **17L MICROWAVE WITH AIR FRYER  
GHAMON1171B4W**

Product site code: **15A.06.24.153**



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

#### EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

## Copyright

© 2024 ASDA Stores Limited.  
All other trademarks appearing herein are the property of their representative owners.  
Specifications are subject to change without notice.

#### Manufactured for:

ASDA, Leeds LS11 5AD/ASDA, Antrim BT41 4GY.

## Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

