A4 正面

ASDA tech

AT OVER EAR WIRELESS HEADPHONE



Model: ATA2535SH

USER MANUAL


Bluetooth Device Name: AT-T2

What's in the box

USB-C charging cable Headphones

Specification

BT Specification: Bluetooth V5.3 BT Profiles Supported: A2DP, AVRCP, HFP, HSP. Operating Distance: 10 meters (In ideal Conditions) Speaker diameter: 40mm Impedance: 32Ω±15% Sensitivity: 104dB at 1KHz Frequency Range: 20Hz – 20kHz Rechargeable Battery: 400mAh Li-on Battery Working Voltage: 3.7V
Talk time: Up to 28 hours Music time: Up to 28 hours at 80% volume Charging : around 4 hours Socket: USB-C

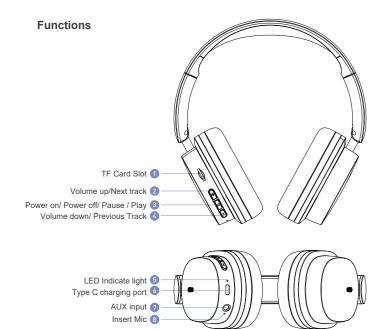

Model no.	ATA2535SH
Bluetooth operation	
Bluetooth Pairing Name	AT-T2
Power On	Hold the power key ③ for more than 3 seconds. "Power on " will be heard and LED will flash Red and Blue.
Power Off	Hold the power key ③ for more then 5 seconds " Power off " will be heard and the LED will extinguish
Pairing	When powered on the headphones will automatically connect to device if previously paired. If not paired you will hear a voice pron "Bluetooth pairing" search for AT-T2 on your device and after successful pairing you will hear voice prompt "Bluetooth connect
Bluetooth disconnected	When Bluetooth has disconnected you will be notified with a vi prompt "Bluetooth Disconnected"
Playing music	
Play/pause	Press once Key ③ to play or pause music
Next track	Long press Next Track Key ②
Previous track	Long Press Previous Track Key ④
Volume +	Short press Volume + key ② to increase volume level. When t maximum level is reached your will hear a chime
Volume -	Short Press Volume - Key ④ to decrease volume level
Phone calls	
Incoming call	Whist receiving an incoming call you will hear a ringing tone and the LED will flash Blue
Pickup the phone	Press the Play key ③ to answer call
Hang up the phone	Press the Play Key ③ to terminate call
Reject call	Long Press the Play key ③ to reject call
Last number redial	Press the Play key ③ twice in quick succession
Built-in battery-saving feature	Your headphones will automatically switch off after 5 minutes i there is no active connection between your device
Battery low	When the battery is low, a voice prompt will be heard "Battery Low"
Charging	Insert the USB-C charging cable into the headphones, once charging starts the LED will illuminate Red
Changing completed	When charging is completed the LED will extinguish and the USB -C connector should be removed
Other function mode	
TF / SD Card	Insert your SD card into card slot ①
BT & SD Modes	Triple Click Key ③ to swap between BT & SD Mode

Trouble shooting

The headset cannot be turned on Ensure headset is fully charged before turning it on. Confirm that you charger and lead is working.

Cannot find headphones in Bluetooth list
Check that the headphones are in pairing mode (blue/red indicator lights flashing).
Check that they are disconnect from any paired devices.

The Headphones keep disconnecting and/or burbling sounds The operating range is approximately 10 meters in ideal conditions. If you move beyond this,

the connection may drop.

Check that the device is fully charged

Check for Interference from other devices, example metal objects can obstruct signal

Phone case interfering with signal propagation

Low signal quality

When answering a call, I can not hear anything
Ensure the mobile device is connected to headphones and its not on speaker phone mode Increase the volume.

Incorrect operations on buttons

Some functions are dependant on your device settings and configuration, please check your device settings.

Safety Instructions

- Read this user quide carefully before first use. It contains important safety information as
- Read this user guide carefully before first use. It contains important safety information as well as instructions for the use and care of the device. Save the guide for later reference and include it with the device when reference it to a third party.
 To avoid dangerous situations, do not use device for any purpose other than those described in the instructions. Improper use is dangerous and voids the warranty.
 This product is not intended to be used by persons (including children) with reduced physical, sensory or mental abilities or lack of experience and/or lack of knowledge used to the property of the product of the production unless they are supervised by a person responsible for their safety or have received
- Children' should be supervised to ensure that they do not play with the product.
 Children' should be supervised to ensure that they do not play with the product. It is not a toy.
 Danger! Excessive sound pressure from earphones and headphones can cause hearing loss, if you listen to loud music for a long time, your hearing may be impaired. Set to a moderate volume.
- Use only under normal room conditions (temperature and humidity).
- The products intended to be used in moderate climates only. Do not use in tropical or very humid climates, saunas or steam rooms

A4 反面

- Do not move the product from cold into warm environments and vice versa. Condensation can damage the product and electric components.
 The use of accessories and parts not specifically recommended by the manufacturer may cause injuries or damages and will result in forfeiture of the warranty.

- Do not touch, press or rub the surface of the product with sharp or hard objects

- Do not touch, press or rub the surface of the product with sharp or hard objects
 To reduce the risk of fire or electric shock,do not expose the device to rain or humidity.
 The product may not be exposed to dripping or splashing water.
 Make sure no objects or liquids penetrate through openings into the housing.
 Never immerse electric parts of the production in water or other liquids while cleaning or using it.
 Never place the product under running water.
 Do not place the product in the vicinity of devices producing strong magnetic fields
- (for example motors loudspeakers, transformers).

- (for example motors, loudspeakers, transformers).
 Do not expose the product to direct sunlight, humidity, dirt, hot light sources or strong magnetic fields.
 Do not expose the product to high temperatures and strong vibrations and avoid high mechanical stress.
 if the product shows damages, do not use it any longer and have it repaired by a
- qualified technician, or contact our customer service department.

 Do not disassemble the product, and do not try to repair it yourself.

Hereby, ASDA Stores Ltd., declares that the radio equipment:

ATA2535SH is in compliance with the essential requirements and other relevant provisions of directive 2014/53/EU & UK Radio Equipment Regulations

(a)The transmitting frequency band for this model is 2.402-2.480GHZ (b)The maximum allowed transmitting power for this model is 1.55dBm (1.43mW).





The power delivered by the charger must be between min [0.5] Watts required by the radio equipment, and max [5] Watts in order to achieve the maximum charging speed.

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order

to be recycled or dismantled to minimise its impact on European directive, user has the choice to give his product to a competent recycling organisation or to the retailer when he buys an new electrical or electronic equipment.

Please dispose of batteries in an environmentally friendly manner. Do not put batteries into the household waste. Please use the return and collection systems in your community or contact the dealer where you purchased the product.

Distributed by:
ASDA, Leeds LS11 5AD/ ASDA, Antrim BT41 4GY

©2025, All Rights Reserved

©2025, All Rights Reserved
This product is distributed and sold by Asda
Stores Limited

Manufactured by: SHENZHEN SHIKE KAM WAH ELECTRONIC CO., LTD.

1 F.NO.#36,Langkou Industrial Park. Langkou Community , Dalang , Longhua District ,Shenzhen , Guangdong , P.R .China

Site no 5A 07 25 142

Contact Us:

Phone us on: 0800 952 0101 Or visit our website: www.asda.com

