

ASDAtech

Noise Cancelling Headphones
with Bass Boost



Model: ATA2534SH

USER MANUAL

Bluetooth Device Name: AT- ANC


What's in the box

- Wireless active noise cancelling headphone x1
- Charge cable X1
- Audio cable x1
- User manual x 1

Specification

Playtime: About 30 hours at 50% volume
BT specification: Bluetooth V5.3
Operating Distance: 10 meters (Subject to local conditions)
BT profiles supported: SBC, A2DP, AVRCP, HFP, HSP.
Noise reduction rate: 28+/-3 dB
Speaker diameter: 40mm
Impedance: 32Ohm
Sensitivity: 102dB +/-3dB at1kHz
Frequency range: 20Hz~20kHz
Rechargeable battery:400mAh
Charging socket: USB-C
Talk time: About 30 hours
Play time (BT on) :About 30hrs at 50% vol.
Play time (ANC only):About 60hrs
Play time (Bluetooth and ANC on):About 30hours at 50% volume
Charging Time: 2 hours

Functions :

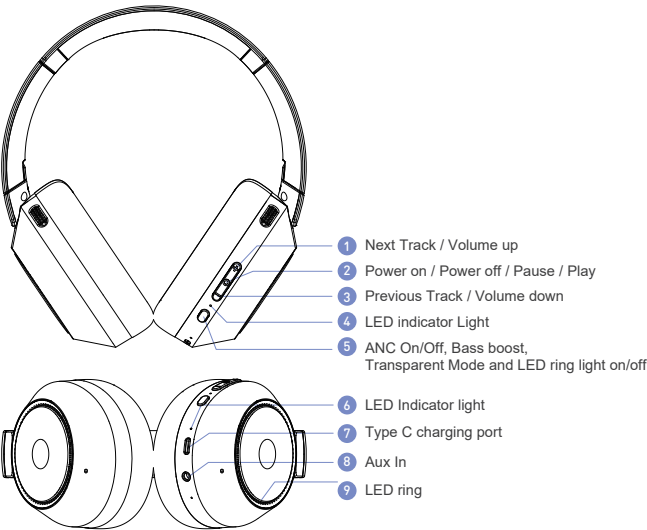

Model no.	ATA2534SH
Bluetooth operation	
Bluetooth Pairing Name	AT- ANC
Power On	Hold power key ② for more than 2 seconds, voice prompt "Power on" will be heard and the LED will flash Blue and white.
Power Off	Hold power key ② for more than 2 seconds, voice prompt "Power off" will be heard and the LED will light white momentarily then switch off.
Pairing	A voice prompt "Pairing" will be heard when the headphones are in pairing mode. The LED will flash alternately between White and Blue indicating pairing mode. Search for AT-ANC on your device Bluetooth list and connect. Once successfully connected "Connected" will be heard. If you have previously connected to a device within range you will hear the voice prompts "Power On", "Pairing", "Connected" when switched on.
Bluetooth disconnected	When the Bluetooth device has been disconnected from the headphones, a voice "Disconnected" will be heard and the unit will enter pairing mode indicated by the LED alternately flashing between White and Blue.
Playing music	
Play/pause	Press button ② to play and pause music.
Next track	Long press +Key ①
Previous track	Long press -Key ③
Volume +	Press Volume up button ① to increase volume level. When maximum volume level is reached your will hear a beep.
Volume -	Press volume down button ③ to decrease volume level. When minimum volume level is reached your will hear a beep.
Phone calls	
Incoming call	When receiving an incoming call you will hear a default ringtone in your headphones notifying you.
Pickup the phone	Momentarily press the Play key ② to answer the call.
Hang up the phone	Whilst in a call, momentarily press the Play key ② to disconnect the call.
Reject call	Long press the Play key ② and reject the call.
Redial	Press the Play Key ② twice to redial.
Call up assistant	Double press Play Key ② to active assistant on your device.
Built-in battery-saving feature	Your headphones will automatically switch off if there is no active connection between the headphones and your device.
Battery low	When your headphones are low on charge you will hear a voice reminder stating "battery low" and the LEDs on the headphones will flash white as a visual reminder.
Charging	When charging the LED on the headphones will illuminate white.
Charging completed	When charging has competed the LED on the headphones will extinguish.
Other function mode	
LED Light on	LED Ring light/Long press the ANC button ⑤ to toggle between on/off for the ring light.
Bass Boost	Bass Boost / With the headphones powered press the ANC button 3 times to toggle between "Bass Boost" and standard music mode.
ANC & Transparent mode	To toggle between Active Noise Canceling and Transparent mode press the ANC Button ⑤. You will hear voice prompts notifying you what mode the headphones are in "ANC on", "ANC off " and " Transparent On". Transparency mode allows you to hear your surroundings while still listening to audio, this is achieved by using the headphones' external microphones to amplify ambient sounds. Active noise canceling (ANC) mode uses the built in microphones to detect environmental sounds. ANC is most effective against steady, low-to-medium frequency sounds like airplane engines or traffic hum.
Aux mode	Insert 3.5mm jack into the 3.5mm port ⑧. Aux will be selected and bluetooth switched off.

Trouble shooting

The headset cannot be turned on
Ensure headset is fully charged before turning it on.

Cannot find headphones in Bluetooth list
Make sure they are in pairing mode, the LED on the headphones should flash alternately between white and blue when in pairing mode.
Make sure that they are not already connected to another device.

Headphones keep disconnecting and/or burbling sounds
The operating range is approximately 10 meters in ideal conditions. If you move beyond this, the connection may drop.
Check that the device is fully charged.
Interference from other devices example microwave ovens.
Metal objects obstructing signal.
Phone case interfering with signal propagation.
Low Signal Quality.

When answering a call, I can not hear anything
Ensure the mobile device is connected to the headphones and the phone is not in speaker phone mode Increase the volume on your device.

Others cannot hear me or blurry voice in calls
Restart the Bluetooth headset and make sure the headset is non-muted.
Ensure the input/output device on the platform you are using is connected to "AT- ANC"

The headset cannot be charged
Ensure the USB-C charging cable is fully plugged into the headset and charging port.
Ensure the charging cable and wall charger are functional.

Safety Instructions

- **Read this user guide carefully before first use.** It contains important safety information as well as instructions for the use and care of the device. Save the guide for future reference and include it with the device if passing it on to a third party.
- **To avoid dangerous situations,** do not use the device for any purpose other than those described in the instructions. Improper use is hazardous and voids the warranty.
- **This product is not intended for use** by individuals (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are supervised by someone responsible for their safety or have been instructed on how to use the product.
- **Children should be supervised** to ensure they do not play with the product.
- **⚠ Danger:** Excessive sound pressure from earphones earbuds and headphones can cause hearing loss. Listening to loud music for extended periods may impair your hearing. Set the volume to a moderate level.
- **This product is intended for use in moderate climates only.** Do not use in tropical or very humid environments eg saunas, steam rooms etc
- **Avoid moving the product between cold and warm environments.** Condensation can damage the product and its electronic components.
- **Do not use accessories or parts** not specifically recommended by the manufacturer. Doing so may cause injury or damage and will void the warranty.
- **Do not touch, press, or rub** the surface of the product with sharp or hard objects.
- **To reduce the risk of fire or electric shock,** do not expose the device to rain or humidity.
- **Do not expose the product to dripping or splashing water and do not wash with clothes.**
- **Ensure that no objects or liquids** penetrate through openings into the housing.
- **Never immerse electrical parts** of the product in water or other liquids during cleaning or use.
- **Never place the product under running water.**
- **Do not place the product near devices that produce strong magnetic fields,** such as motors, loudspeakers, or transformers.
- **Do not expose the product to direct sunlight, humidity, dirt, hot light sources,** or strong magnetic fields.
- **Avoid exposing the product to high temperatures, strong vibrations, or mechanical stress.**
- **If the product shows signs of damage, do not use it. Have it inspected and repaired by a qualified technician, or contact customer service.**
- **Do not disassemble the product or attempt to repair it yourself.**
- **Do not subject earbuds directly with hairspray or other products as this may interfere with the functionality of the product.**

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimise its impact on European directive, user has the choice to give his product to a competent recycling organisation or to the retailer when he buys an new electrical or electronic equipment.

UK CA CE Distributed by:
ASDA, Leeds LS11 5AD/ ASDA, Antrim BT41 4GY
©2025, All Rights Reserved
This product is distributed and sold by Asda Stores Limited.

Manufactured by:
SHENZHEN SHIKE KAM WAH ELECTRONIC CO., LTD.
1 F.NO.#36,Langkou Industrial Park, Langkou Community , Dalang ,
Longhua District ,Shenzhen , Guangdong , P.R .China
Site no. 5A.07.25.144

Contact Us:
Phone us on: 0800 952 0101
Or visit our website: www.asda.com



Hereby,ASDA Stores Ltd., declares that the radio equipment:
ATA2534SH is in compliance with the essential requirements and other relevant provisions of directive 2014/53/EU & UK Radio Equipment Regulations 2017.
(a)The transmitting frequency band for this model is 2.402-2.480GHZ
(b)The maximum allowed transmitting power for this model is -0.85dBm (0.822mW).

The power delivered by the charger must be between min [0.5] Watts required by the radio equipment, and max [5] Watts in order to achieve the maximum charging speed.