 


2025.6.10 2025.7.25 2025.8.13

George.

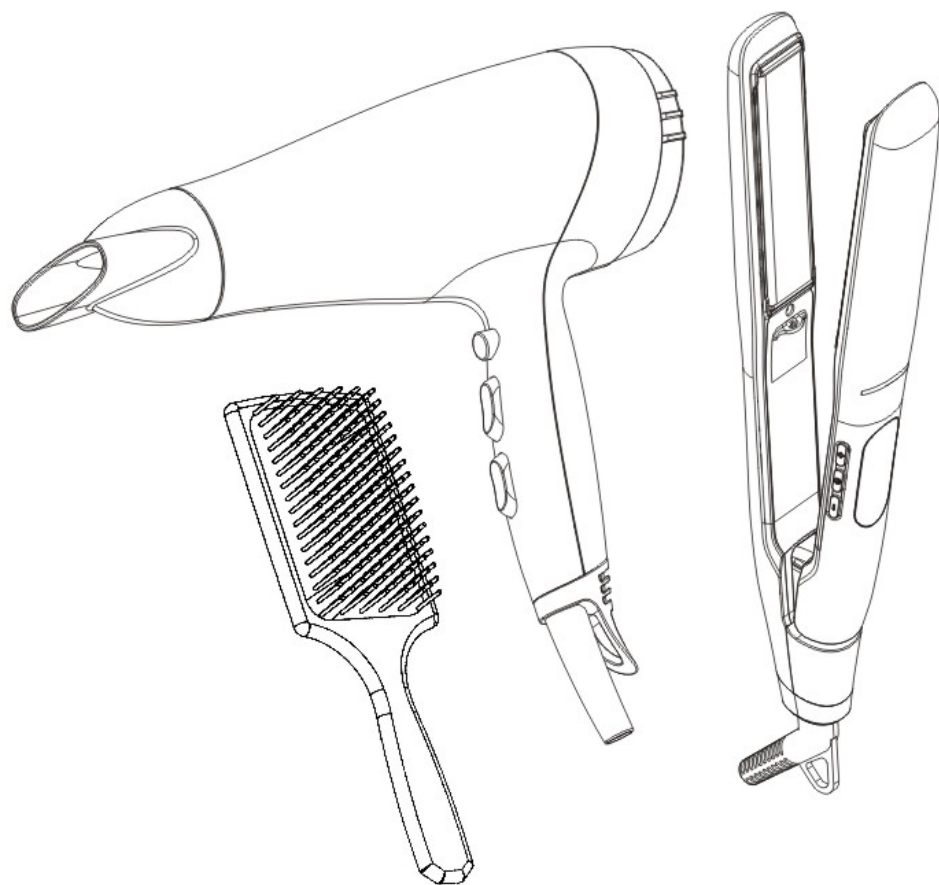

GHGS0001R5J **GH DRYER GIFT SET**

User Guide Hair Dryer 220-240V~ 50/60Hz 1800-2200W
 Hair Straightener 220-240V~ 50-60Hz 50W

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We're here to help you get the most from your pro hair dryer, so please keep hold of this manual for future use.

WARNINGS:

 
THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. Keep hair dryer away from heat sources or direct sunlight.
3. Do not use if the hair dryer or cord are damaged.
4. If the supplied cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
5. **WARNING:** Keep the appliance dry.
6. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 
7. If the hair dryer falls into water, unplug it immediately. Do not reach into the water.
8. This hair dryer is designed with a special protective coating around the heating coils. You may initially notice some smoking when turning the dryer off. This doesn't represent a danger or a fault and the smoke should dissipate.
9. Do not use with an extension cord.
10. Do not use attachments not recommended by the manufacturer.
11. Hair dryer and attachments may get hot during use. Allow to cool before handling.

12. Avoid outdoor use or operation with aerosol products.
13. When using, keep hair away from air inlets.
14. Keep air vents clear and openings free from lint or hair.
15. The hair dryer should never be left unattended when plugged in.
16. Do not wrap the cord around the hair dryer handle when storing as this can damage the power cord.
17. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
18. Please don't dismantle. If a fault occurs have the dryer inspected in a qualified repair shop or return to us at Asda.
19. Children should not play with the hair dryer. Keep this appliance and its cord out of reach of children.
20. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
21. ASDA does not recommend allowing children to operate this appliance.
22. Environmental information: If at anytime in the future you should need to dispose of this product please note that in the UK, waste electrical products/batteries should not be disposed of with household waste.


You should have

Ionic hair dryer, concentrator nozzle

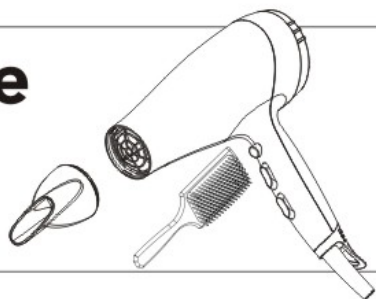

How to...

 ...recognise the parts of your ionic hair dryer

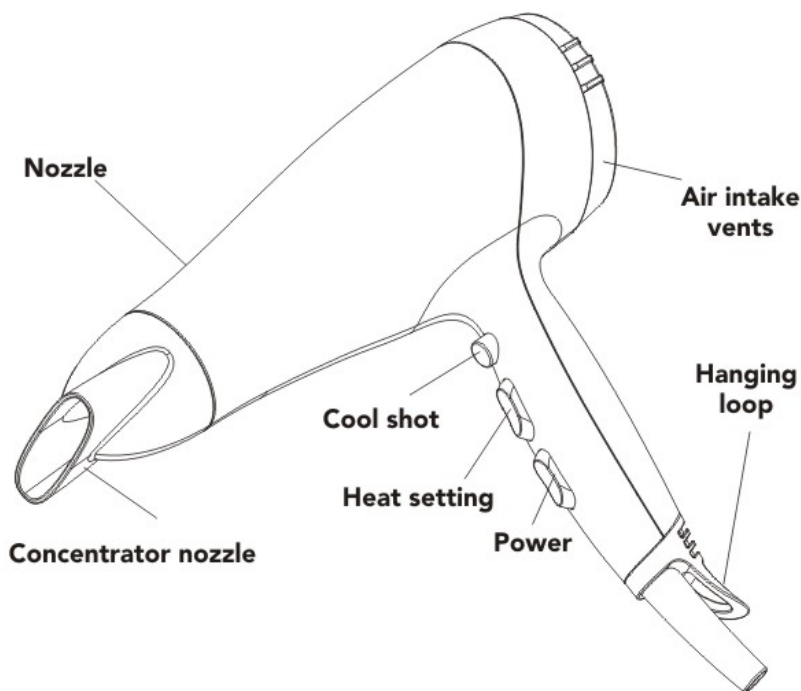

How to...

...use your ionic hair dryer

1. Make sure the power switch is in the 0 position, slot the plug into the power socket and switch on.



2. Use the  and  settings to choose your desired airflow strength.



3. Use the cool , warm  or hot  settings, depending on how you wish to style your hair.



 
4. At any time, hold down the cool shot button to create a refreshing shot of cooler air. This is also a really useful way to finish and set your style.



How to...

...connect & use your concentrator nozzle

1. To fit the concentrator nozzle, simply slot it onto the end of your ionic hair dryer. It will click securely into place.
2. The concentrator nozzle directs the airflow to specific parts of your hair. This will give you more control over your style and let you create the look you desire.
3. Usually, the concentrator nozzle is used to create a smooth and sleek, straight style by directing the heat from the roots to the tips.

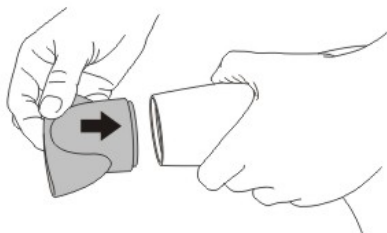

4. The concentrator nozzle can be rotated to give you maximum control as you dry and style.

How to...

 
...maintain your ionic hair dryer

1. Always keep the dryer and air vents clean and dust free. Use a soft brush to clear any dust and fluff from the inlet grill on the back of the dryer.
2. Try not to twist or pull the power cord, or store the dryer with the cord wrapped around it.
3. Store in a cool, dry place, out of reach of children.

How to...

...change the fuse

1. Only use a 10 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

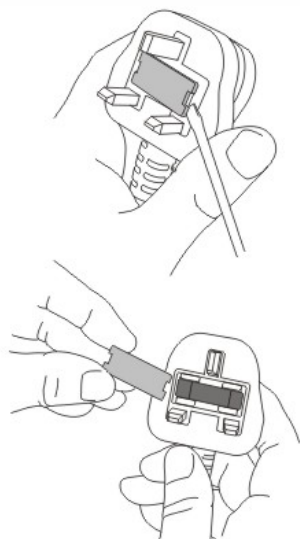

Ecodesign requirement

The power consumption of GHGS0001R5J in off mode is 0,0W (Required to be not greater than 0,50W)

The result is in compliance with the 1st stage requirements of the (EU) NO 2023/826.

Technical specification

Voltage: 220-240V.

Frequency: 50/60Hz.

Power: 1800-2200W.

About this guide

We're here to help you get the most from your hair straightener, so please keep hold of this manual for future use.

WARNINGS:

 
THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. Keep the hair straightener away from heat sources or direct sunlight.
3. Do not use if the hair straightener or cord are damaged.
4. If the supplied cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. **WARNING:** Keep the appliance dry.
6. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 
7. When the hair straightener is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair straightener is switched off.
8. If the hair straightener falls into water, unplug it immediately. Do not reach into the water.
9. When on, the traightener plate gets hot. Take care to avoid contact with skin, particularly the face or neck, and never place on heat-sensitive surfaces.
10. The hair straightener should never be left unattended whenplugged in.
11. Do not wrap the cord around the traightener plate or handle when storing as this can damage the power cord.

12. Please don't dismantle. If a fault occurs have the straightener inspected in a qualified repair shop or return to us at Asda.
13. Children should not play with the hair straightener. Keep this appliance and its cord out of reach of children.
14. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
15. ASDA does not recommend allowing children to operate this appliance.
16. Environmental information: If at anytime in the future you should need to dispose of this product please note that in the UK, waste electrical products/batteries should not be disposed of with household waste.
17. Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down;
18. When the appliance is connected to the power supply, never leave it unattended;
19. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
20. For additional protection, the installation of a residual current device(RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.


You should have

HAIR STRAIGHTENER

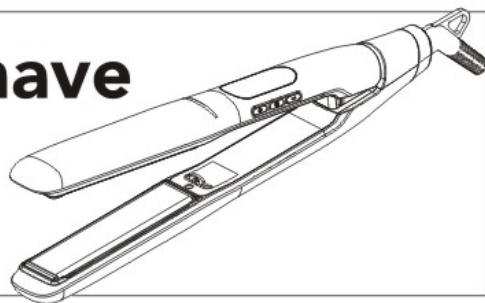

How to...

 ...recognise the parts of your hair straightener

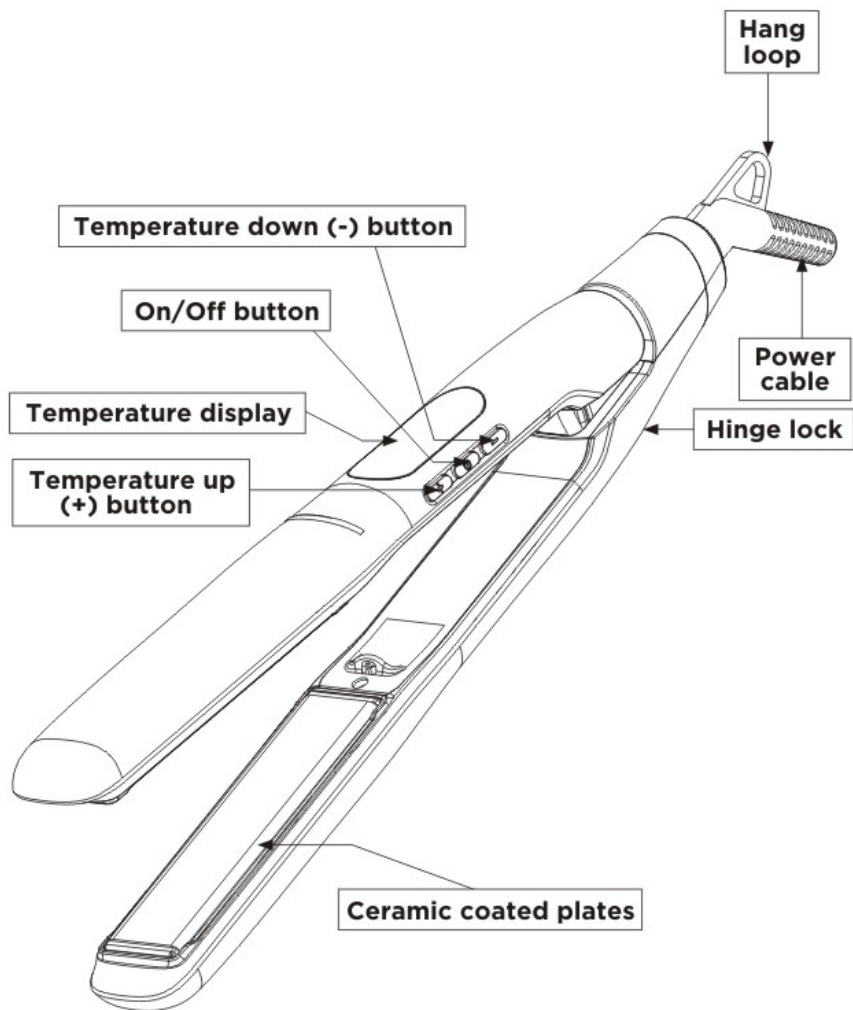


How to...


...use your hair straightener

1. You'll need to practice with the straightener a few times before you get the best results.
2. Before using, ensure your hair is completely dry. You'll need to brush your hair to separate the strands and get rid of any little tangles.

 3. Press the On/Off button and using the temperature (+ and -) buttons to select the temperature of choice (120-220°C). The temperature selected will be shown in the display by a white indicator and will flash when heating up.

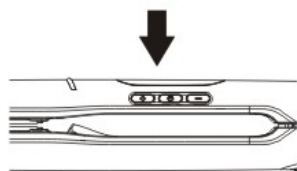

 4. Place the straightener onto a dry and flat heat resistant surface.

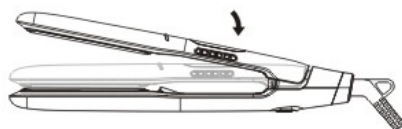

5. Move the hinge lock in the direction of the 'unlocked padlock' to unlock and open the heating plates.



6. Take a section of hair to be straightened and place the hair between the ceramic coated plates as close to the root as possible but do not touch the scalp. To prevent damage to the hair do not repeat on the same section of hair more than once.

7. Close the ceramic coated plates firmly together and slide the straightener down the length of the hair in a single motion taking not more than 5 seconds from root to tip to prevent overheating / scorching the hair.



8. Continue to curl the rest of the hair until you have the desired finish.
For best results, don't brush your hair until it's completely cooled.
9. When you've finished with the straightener, turn off by pressing the On/Off button. Then switch off at the socket and pull the plug out.
10. Allow the straightener to cool off on a heat-resistant surface and then store in a safe place.
11. Your straightener can be used on natural hair wigs, but not on artificial hair, as these may melt.
12. Avoid curling hair that has been treated with lacquer or setting lotions as these stick to the barrel.

How to...

 
...maintain your hair straightener

1. Never lubricate the hair straightener.
2. Always keep the straightener and vents clean and dust free.
3. When cleaning ensure the straightener is unplugged and cool - then simply wipe the barrel and clamp with a damp cloth or a sponge with mild soap. Never immerse in water to clean.
4. Wipe dry with a cloth.
5. Try not to twist or pull the power cord, or store the straightener with the cord wrapped around it.
6. Store in a cool, dry place, out of reach of children.

How to...

...change the fuse

1. Only use a 5 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

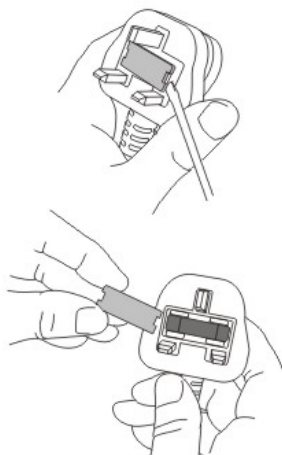

Ecodesign requirement

The power consumption of GHGS0001R5J in off mode is 0,5W (Required to be not greater than 0,50W)
The result is in compliance with the 1st stage requirements of the (EU) NO 2023/826.

Technical specification

Voltage: 220-240V.
Frequency: 50-60Hz.
Power: 50W.



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund. UK Mainland stores only. Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described. Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

Need something else?

www.GEORGE.com

We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number



ASDA
technical support
0333 600 7700

Customer services information

If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

Call

0800 952 0101

Write

ASDA Stores Ltd. Asda House, Southbank, Great Wilson Street, Leeds, LS11 5AD.

Product name:	GHGS0001R5J GH DRYER GIFT SET
Product site code:	Hair Dryer: 15B.09.25.147H Hair Straightener: 15B.09.25.147S

Copyright

© 2025 ASDA Stores Limited.
All other trademarks appearing herein are the property of their representative owners.
Specifications are subject to change without notice.

Manufactured for:

ASDA, Leeds LS11 5AD/ASDA, Antrim BT41 4GY

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

