 


江心2025.7.26新诺 2025. 8. 13

# George.

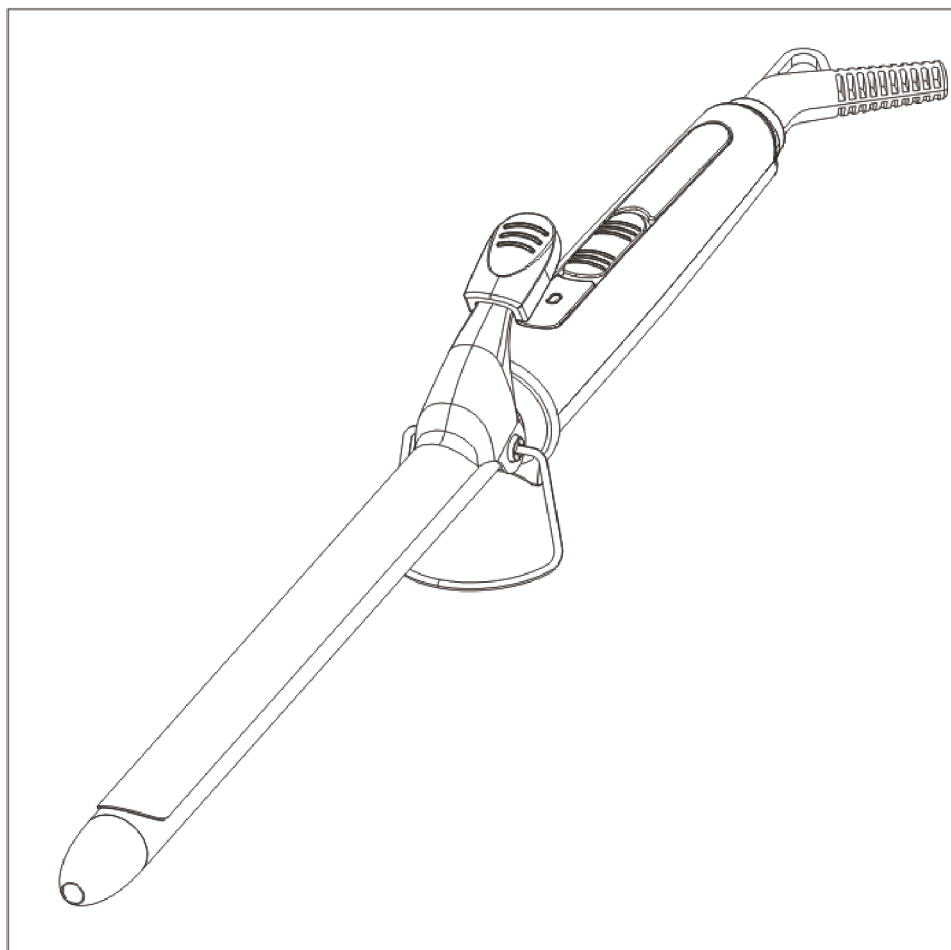

## **GCT201G 19mm Curling tong**

### User Guide

220-240V~50-60Hz 25W

**IMPORTANT: RETAIN FOR FUTURE REFERENCE**

# About this guide

We're here to help you get the most from your curling tong, so please keep hold of this manual for future use.

## WARNINGS:

 
THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. Keep the curling tong away from heat sources or direct sunlight.
3. Do not use if the curling tong or cord are damaged.
4. If the supplied cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. **WARNING:** Keep the appliance dry.
6. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 
7. When the curling tong is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the curling tong is switched off.
8. If the curling tong falls into water, unplug it immediately. Do not reach into the water.
9. When on, the tong barrel gets hot. Take care to avoid contact with skin, particularly the face or neck, and never place on heat-sensitive surfaces.
10. The curling tong should never be left unattended when plugged in.
11. Do not wrap the cord around the tong barrel or handle when storing as this can damage the power cord.

12. Please don't dismantle. If a fault occurs have the tong inspected in a qualified repair shop or return to us at Asda.
13. Children should not play with the curling tong. Keep this appliance and its cord out of reach of children.
14. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
15. ASDA does not recommend allowing children to operate this appliance.
16. Environmental information: If at anytime in the future you should need to dispose of this product please note that in the UK, waste electrical products/batteries should not be disposed of with household waste.
17. Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down;
18. When the appliance is connected to the power supply, never leave it unattended;
19. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
20. For additional protection, the installation of a residual current device(RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.


## You should have

Curling tong

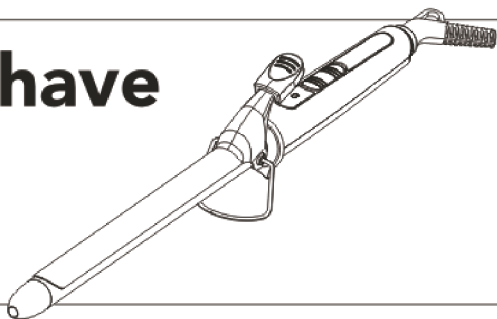

# How to...

 ...recognise the parts of your curling tong

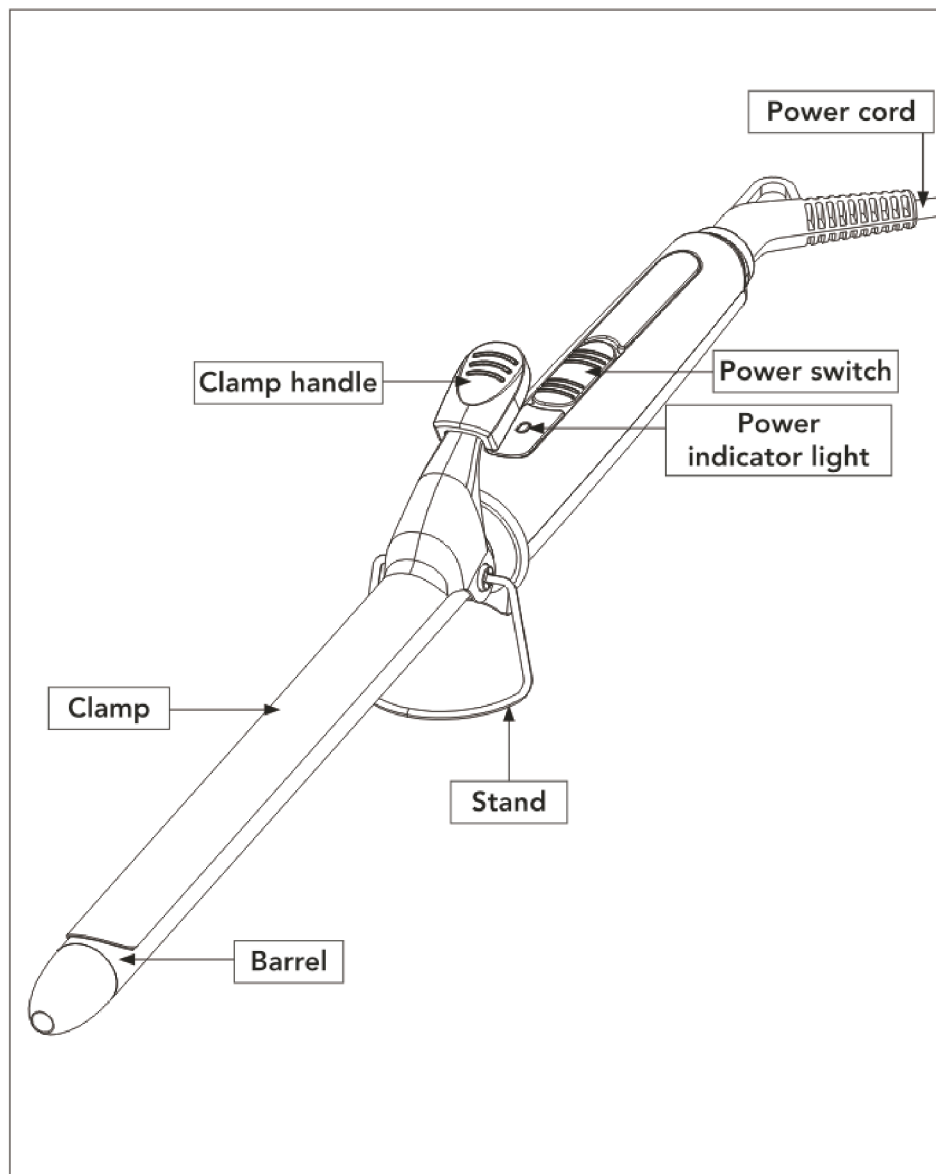


# How to...

## ...use your curling tong

1. You'll need to practice with the tong a few times before you get the best results.
2. Before using, ensure your hair is completely dry. You'll need to brush your hair to separate the strands and get rid of any little tangles.

 3. Plug the curling tong into the mains socket and switch the power on. Slide the power switch from the O (off) position to the I (on) position. A power indication light will show when it is on.

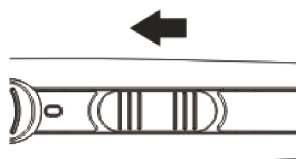

4. Leave the tong to heat up for a few minutes while you divide your hair into equal sections.

5. Push down on the clamp handle of the tong to open and then place the middle of the hair you want to curl between the clamp and barrel.



6. Lower the clamp onto the hair and roll the tong towards your scalp (make sure it doesn't touch your scalp, as this will burn!). Then wrap the bottom of the strands around the barrel.

- a. 'Fine/bleached' hair will need 10–20 seconds wrapped around the barrel.
- b. 'Medium/Normal' hair will need 5–10 seconds wrapped around the barrel.
- c. 'Course' hair may need more than 20 seconds wrapped around the barrel.



7. When you have completed one curl, lower the stand and place the tong on a level and heat-resistant surface.



8. Continue to curl the rest of the hair until you have the desired finish.  
For best results, don't brush your hair until it's completely cooled.
9. When you've finished with the tong, turn off by sliding the power switch to O.  
Then switch off at the socket and pull the plug out.
10. Allow the tong to cool off on a heat-resistant surface and then store in a safe place.
11. Your tong can be used on natural hair wigs, but not on artificial hair, as these may melt.
12. Avoid curling hair that has been treated with lacquer or setting lotions as these stick to the barrel.

## How to...

 
### ...maintain your curling tong

1. Never lubricate the curling tong.
2. Always keep the tong and vents clean and dust free.
3. When cleaning ensure the tong is unplugged and cool – then simply wipe the barrel and clamp with a damp cloth or a sponge with mild soap. Never immerse in water to clean.
4. Wipe dry with a cloth.
5. Try not to twist or pull the power cord, or store the tong with the cord wrapped around it.
6. Store in a cool, dry place, out of reach of children.

# How to...

## ...change the fuse

1. Only use a 5 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

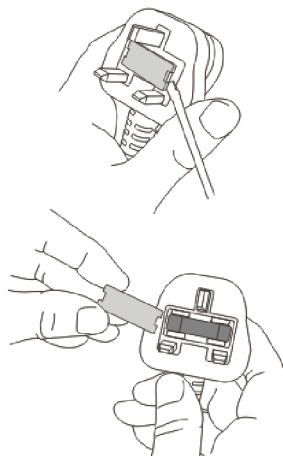

# Ecodesign requirement

The power consumption of GCT201G in off mode is 0,5W (Required to be not greater than 0,50W)  
The result is in compliance with the 1<sup>st</sup> stage requirements of the (EU) NO 2023/826.

## Technical specification

**Voltage:** 220-240V.

**Frequency:** 50-60Hz.

**Power:** 25W.

145\*210mm

## 100 DAY SATISFACTION GUARANTEE

If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund. UK Mainland stores only. Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described. Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

## Need something else?

[www.GEORGE.com](http://www.GEORGE.com)

We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number



**ASDA**  
technical support  
0333 600 7700

### Customer services information

If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

### Call

**0800 952 0101**

### Write

ASDA Stores Ltd. Asda House, Southbank,  
Great Wilson Street, Leeds, LS11 5AD.

Product name: **GCT201G 19mm Curling tong**

Product site code: **15B.09.23.119**

## Copyright

© 2022 ASDA Stores Limited.  
All other trademarks appearing herein are the property of their representative owners.  
Specifications are subject to change without notice.

### Manufactured for:

ASDA, Leeds LS11 5AD/ASDA, Antrim BT41 4GY

## Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

