 


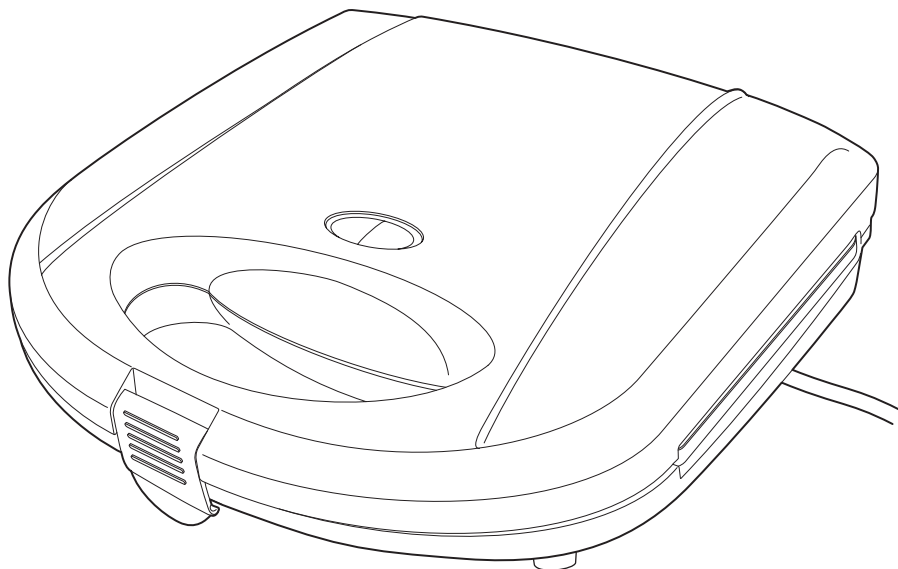

GWM301B-19 3 in 1 Sandwich toaster

User Guide

220-240V~50-60Hz, 650-780W

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We're here to help you get the most from your 3 in 1 Sandwich toaster, so please keep hold of this manual for future use.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.



CAUTION. DANGER OF BURNS. THE 3 IN 1 SANDWICH TOASTER MAY BECOME HOT DURING USE. DO NOT TOUCH HOT SURFACES. DANGER OF FIRE OR ELECTRIC SHOCK. DO NOT INSERT METAL FOIL, TOOLS, OR BREAD THAT IS TOO THICK INTO THE 3 IN 1 SANDWICH TOASTER.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. To avoid fire, electric shock, or injury, never immerse the 3 in 1 sandwich toaster, cord, or plug in water or liquid.
3. Keep away from harsh or abrasive cleaning agents or solvents.
4. Remove all protective wrapping prior to use.
5. Avoid outdoor and commercial use. This appliance is for household use only. Avoid bathroom use.
6. Do not use if the appliance, cord or plug is damaged.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Always place on a firm, level surface, out of reach of children.
9. Before connecting the 3 in 1 sandwich toaster to the power, check the voltage shown on the appliance corresponds with the voltage in your home. If it doesn't, contact your local store.
10. Make sure there is at least 10cm (4") of space around the 3 in 1 sandwich toaster to allow the air to circulate.

 
11. Surfaces may become hot during use, so always place on a heat-resistant surface and use with caution.
12. The temperature of accessible surfaces may be high when the appliance is operating.
13. Bread may burn, therefore the 3 in 1 sandwich toaster mustn't be used near or below flammable materials.
14. The cord shouldn't hang over the edge of a table or counter, or touch a hot surface.
15. Keep away from hot gas and electrical burners.
16. Unplug when not in use and allow to cool before cleaning.
17. Do not use attachments not recommended by the manufacturer.
18. The appliance is not intended to be operated by means of an external timer or separate remote-control system. Don't use the 3 in 1 sandwich toaster for anything other than its intended use.
19. Please don't dismantle. If a fault occurs have the 3 in 1 sandwich toaster inspected in a qualified repair shop or return to us at ASDA.
20. Do not leave the 3 in 1 sandwich toaster unattended when in use.
21. Avoid overfilling the waffle plates with batter.
22. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
23. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;

- bed and breakfast type environments.

- 24. The working state of the product is supervised, and the power is disconnected at the end of the work, so low power mode is not required.**
- 25. ASDA does not recommend allowing children to operate this appliance.**
- 26. Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.**
- 27. Regarding the instructions for details on how to clean the surfaces in contact with food, please refer to the section 'How to clean your 3 in 1 sandwich toaster'.**


You should have

Main body, set of sandwich plates, waffle plates & grill plates

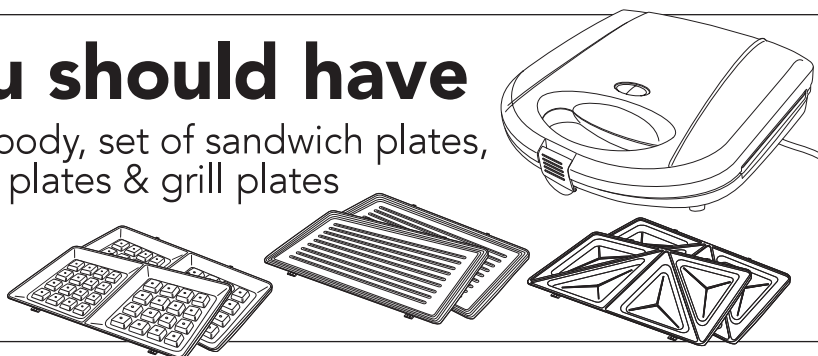

How to...

 ...recognise the parts of your 3 in 1 sandwich toaster

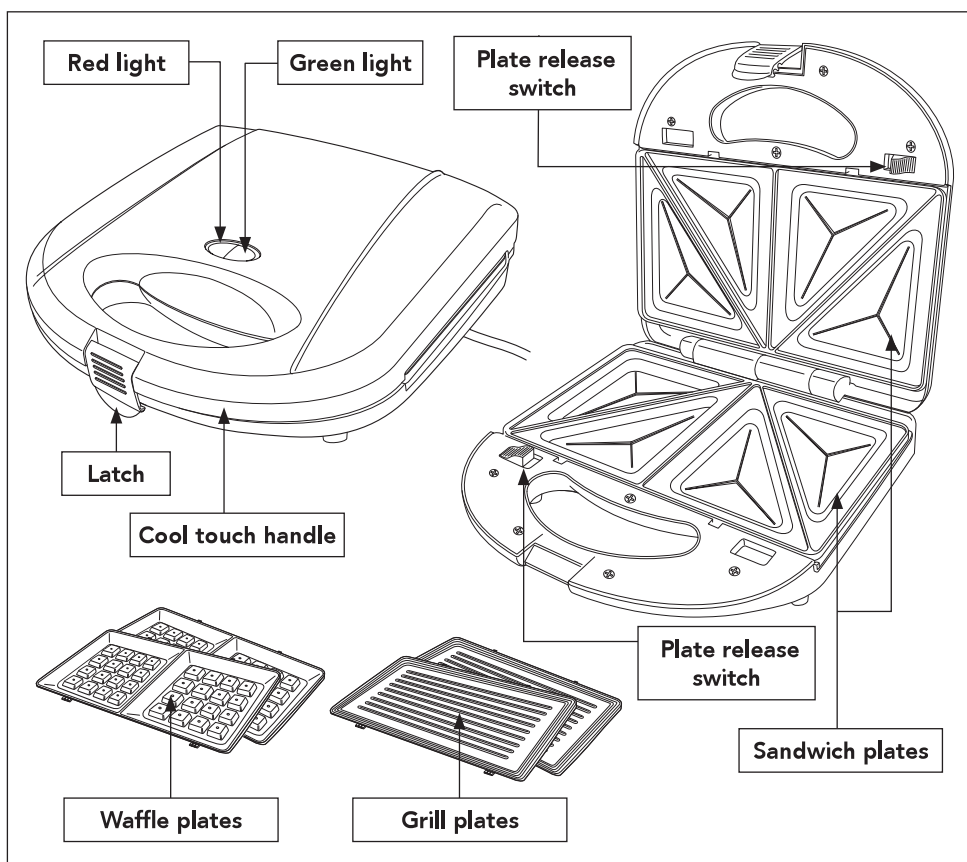


How to...


...change the plates in your 3 in 1 sandwich toaster

Before changing the plates always ensure your 3 in 1 sandwich toaster is not plugged in and is completely cool.

 
1. Place on a firm level surface, pull the latch towards you (1) and lift the lid (2).

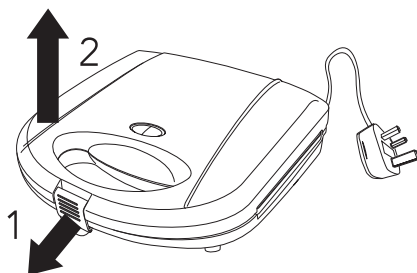

 2. There are 2 plate release switches located near the cooking plates, one on the bottom and one at the top.

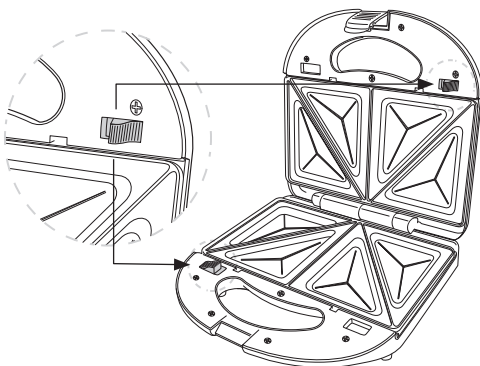



 
3. Slide the plate release switches to the left or right (depending on if it is the top switch or bottom switch) to release the plates.

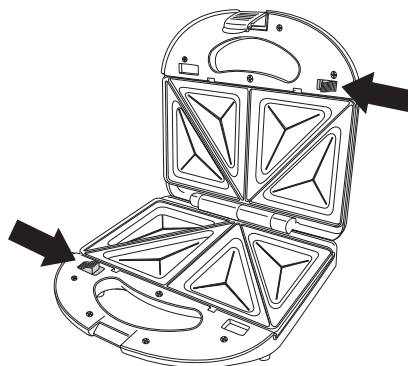

4. Align the wider tabs on the back of the plates with the metal apertures on the main body. Slot the tabs in to the apertures (1) then press the plate into the body (2) until you hear the plate release switch click.

   NOTE: Always place the cooking plate with the non-stick side facing you. The tabs on the front and back of the plates are in different places so you can't put the plate in the wrong way around.

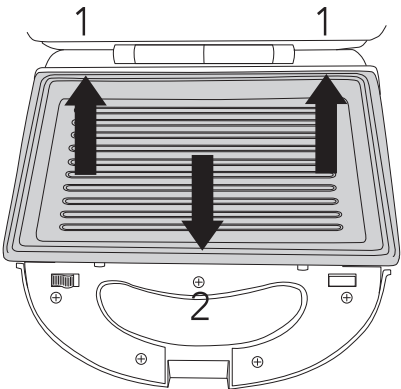

Cooking plates	Used for
Sandwich plates 	Toasting sandwiches.
Grill plates 	Cooking meat (chicken breast, burger etc) / fish / grilling vegetables. Toasting sandwiches.
Waffle plates 	Cooking waffles.

How to...

 
...use your 3 in 1 sandwich toaster

Please note

Be careful not to burn yourself on the steam emitted from the cooking plates whilst the 3 in 1 sandwich toaster is cooking. When using for the first time, wash the cooking plates in warm soapy water and dry thoroughly. Avoid using metal utensils to remove food as these will damage the non-stick coating on the cooking plates. We recommend you use plastic utensils to remove food from the plates.


Ensure you have selected the correct cooking plates for your needs.

1. Place the 3 in 1 sandwich toaster on a flat, level surface and ensure the lid is closed.

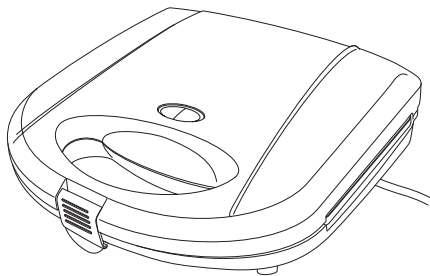


2. Slot the plug into the mains socket and turn the power on. The red power indicator light on the lid will come on.

 Note: Oil or manufacturing residue may remain on the heat elements, so it's usual for the 3 in 1 sandwich toaster to emit an odour when used for the first few times. This is perfectly normal, before cooking for the first time, allow the appliance to heat up until the green light also illuminates, unplug and open the lid for a minute. Close the lid, plug back in, and the appliance is now ready for use once the green light illuminates again.

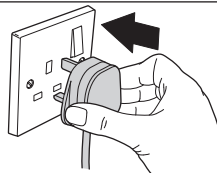

3. Allow the appliance to heat up until the green light also illuminates.

 NOTE: The green light will come on periodically, which is perfectly normal and is simply an indication that the appliance is getting back up to the necessary temperature.

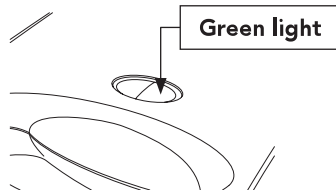

For sandwich making

- Prepare the bread and fillings (we recommend buttering each slice).
- Once the green light comes on, place the bread onto the lower plate butter-side down. Push the bread down with a non-metal spoon to form a hollow, then place your fillings inside the hollows of the bread.
- Place the remaining bread on the top, butter side upwards, and carefully close the lid by squeezing the handles together and pushing the latch down to lock. Always keep the lid closed and locked when cooking.
- Cooking time will vary depending on the filling and thickness of the bread. Generally it's good to allow 2-4 minutes, or until the bread is golden or crispy to your liking.

For waffle making

 
- Prepare your batter mix. Thicker batter will give best results and reduce the cooking time.
- Once the green light comes on, spoon the batter mixture onto the lower plate only. Only put enough batter in to cover the waffle squares. This is approximately 6 dessert spoons.
- Close the lid and push the latch down to lock. Always keep the lid closed and locked when cooking.
- Cooking time will vary depending on the mixture. It's good to allow 12-14 minutes, or until the waffles are golden to your liking.

NOTE: Whilst the waffles are cooking you may notice a whistling / humming noise. This is completely normal, but it is an indication that the plates might be overfilled. At this point we recommend you carefully open the lid, avoiding the steam, to release some of the pressure. Close the lid and continue cooking.

For grilling

- Before switching on the appliance we recommend you lightly grease the grill cooking plates.
- Prepare your food.
- Once the green light comes on, place the food into the lower plate only. We recommend only cooking food 1-2cm thick.
- Close the lid by squeezing the handles together and pushing the latch down to lock. Always keep the lid closed and locked when cooking.
- Cooking time will vary depending on the food. It's best to open the lid and check the food every couple of minutes to ensure it doesn't overcook and burn.

4. Once the food is cooked, open the lid by flipping the latch upwards and ensuring your face is not near the steam that will be emitted.

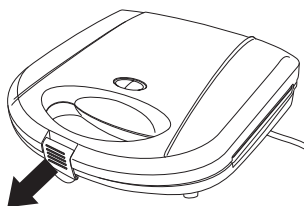

5. Remove the food using plastic or wooden utensils (never use metal items).
6. To make more sandwiches or waffles or grill more food close the lid and wait for the green light to come on, then repeat the above steps.
7. Once you've finished making your food, switch the appliance off and unplug it. Allow the plates to cool fully before cleaning with a damp cloth.

How to...

...clean your 3 in 1 sandwich toaster

1. The appliance should be unplugged before cleaning and allowed to cool thoroughly.
2. Remove the cooking plates and wash in warm, soapy water and dry thoroughly. Avoid using abrasive cleaning liquids or scourers as these may damage the non-stick coating on the plates. The plates can also be placed in the dishwasher on a normal cycle. This may lead to discolouration over time but will not affect the use of the appliance.
3. Wipe the outside of the appliance with a damp cloth and dry with a soft cloth. Do not immerse the appliance in water or other liquids. Do not hold the appliance under running water.

Metal utensils should not be used to remove stuck on food from the plates. Simply soak in warm soapy water and wipe with a soft sponge.

How to...

 
...change the fuse

1. Undo the screw in the middle of the plug using an appropriate screwdriver. Remove the fuse from the plug and replace with a 10 amp fuse.

Replace the cover.

WARNING:

Only ever use a 10 amp fuse.

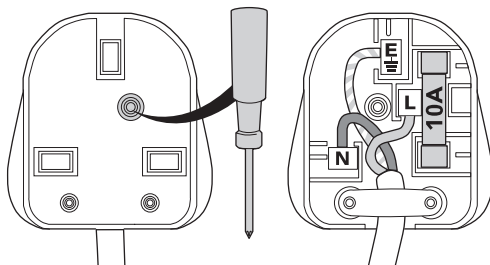



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.



For PDF copy of this manual please scan QR code and search for model number



Customer services information

If you have any problems, or just need some advice or more information on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

Call

0800 952 0101

Write

ASDA, Leeds LS11 5AD

Product name: **GWM301B-19 3 in 1 Sandwich toaster**

Product site code: **15A.09.22.172**



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

Copyright

© 2020 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA, Leeds LS11 5AD/ASDA, Antrim BT41 4GY

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

