 


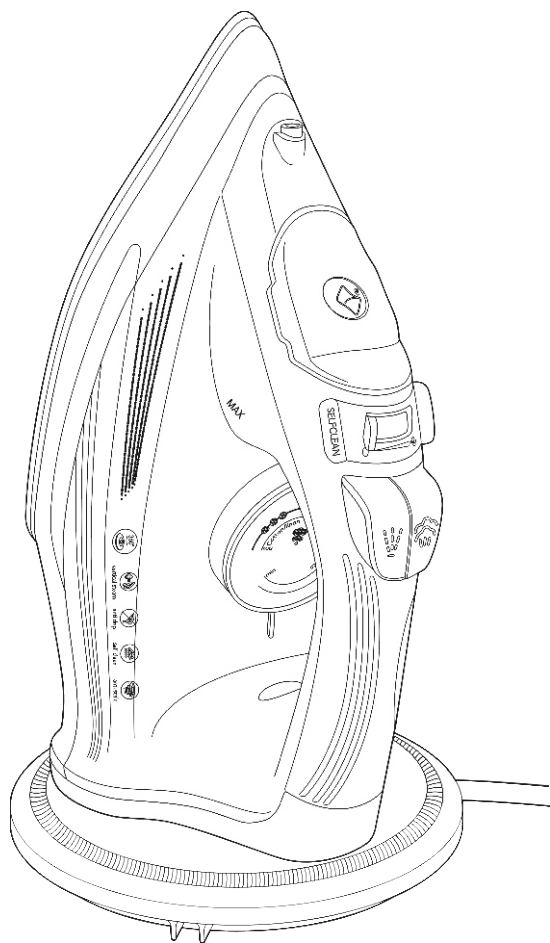

GCI301BG-20

360° Cordless iron

User Guide

220-240V~50-60Hz, 2000-2400W

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We're here to help you get the most from your cordless iron, so please keep hold of this manual for future use.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.

 


WARNING. HOT SURFACE. THE HOT SOLEPLATE AND THE STEAM THAT COMES OUT OF THE IRON ARE EXTREMELY HOT! TOUCHING THE SOLEPLATE AND THE STEAM RELEASED BY THE IRON CAUSES BURNS AND SCALDS.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
3. Do not use if the appliance, cord or plug is damaged.
4. Before connecting the charging base to the power, check the voltage shown on the appliance corresponds with the voltage for the mains supply of the country you are in. If it doesn't, contact your local store.
5. To avoid fire, electric shock, or injury, never immerse the cordless iron, charging base, cord, or plug in water or liquid. Do not use with wet hands.
6. Keep the appliance and its cord out of reach of children less than 8 years of age when it is energised or cooling down.
7. Please don't dismantle. If a fault occurs, have the cordless iron inspected in a qualified repair shop or return to us at ASDA.
8. The iron should not be used if the iron has been dropped, if there are any visible signs of damage or if it is leaking.
9. Remove all packaging prior to use. Inspect the product for any damage before use. If damage is found, notify ASDA to exchange the product.

10. For household use only.
11. The cordless iron must be used and rested on a stable surface.
12. When placing the iron on its charging base, ensure that the surface on which the base is placed is stable.
13. The iron must not be left unattended whilst charging on the base.
14. The charging base must not be plugged into the mains power when filling the water tank or whilst cleaning and storing.
15. Do not use the iron for anything other than its intended use.
16. Do not use attachments not recommended by the manufacturer.
17. Do not iron clothes whilst wearing them.
18. Do not touch the soleplate when in use as it becomes hot. Always hold the iron by its handle. Do not point the iron near the face or body when the steam is in operation.
19. Do not use the iron on, near or under flammable heat sources.
20. Do not fill the tank with any other liquid other than tap water. Do not use distilled or de-ionised water as this will make the anti-calc system ineffective. Do not overfill the tank.
21. Do not fill the tank whilst the iron is attached to the base. Separate the iron from the base before filling.
22. The iron must only be used with the base provided.
23. When storing always allow the iron to fully cool down, store upright and keep away from children and pets. It is recommended to empty the water tank fully before storing.
24. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
25. ASDA does not recommend allowing children to operate this appliance.
26. Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.


What's in the box

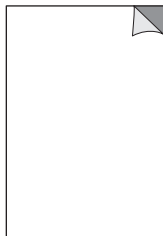


User guide



 Water jug




Charging base

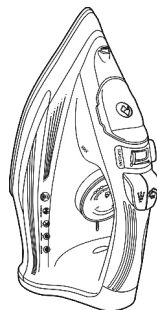 

Cordless iron

 Features


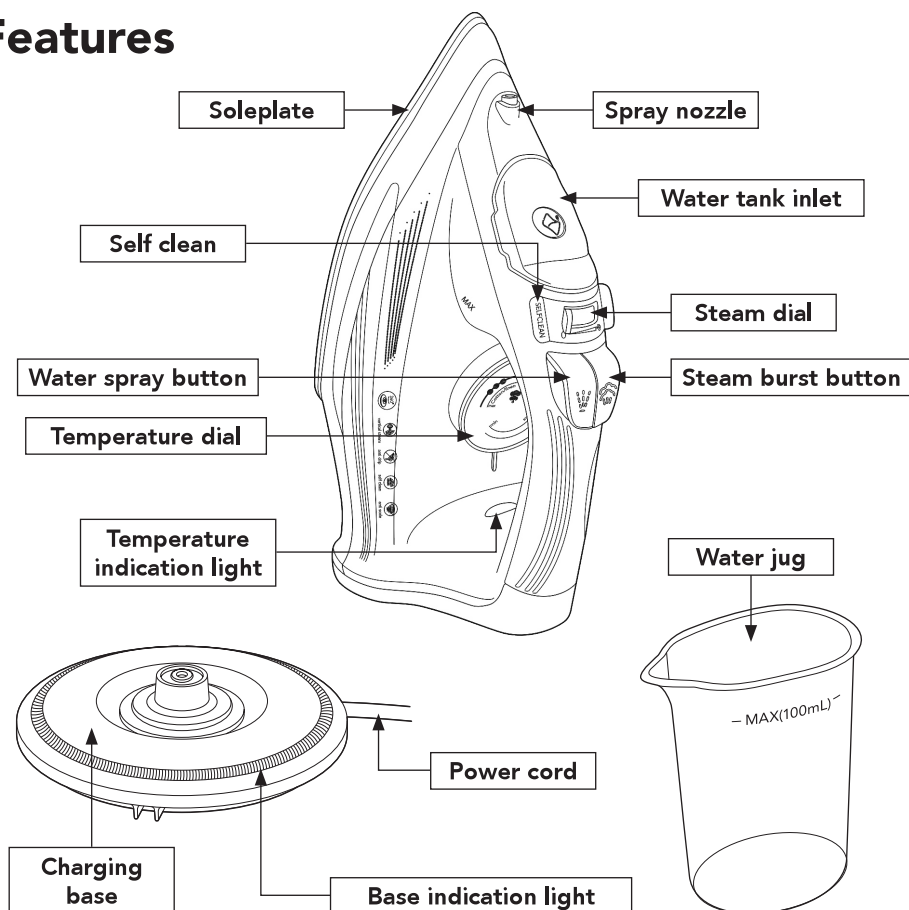


Filling the water tank

Your appliance has been designed to be used with regular tap water. Do not use distilled or de-ionised water as this will make the anti-calc system ineffective.

1. Set the steam dial to no steam '0'.
2. Flip the water tank inlet cover sideways and tilt the iron up. Fill the water tank using the water jug supplied. Do not overfill past the 'MAX' mark on the water tank.
3. Push back the water tank inlet cover to close.

  NOTE: Never fill the water tank when the iron is seated on the charging base.

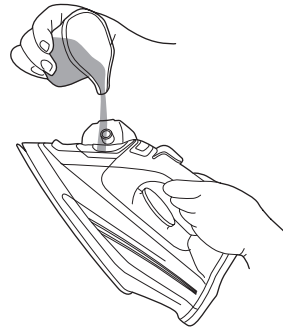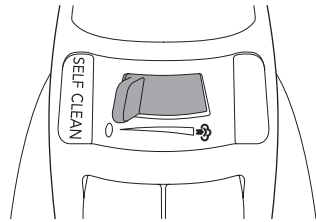


Plugging in the charging base

1. Remove the plug from the card packaging.
2. Put the plug of the charging base into an electrical socket. The base indication light will illuminate blue.

NOTE: The first time the iron is used there may be a slight smoky smell. This is quite normal for new appliances.

 
The cordless iron provides convenience, with no constraints of the power cord. The iron maintains its heat for approximately 30 seconds, depending on the temperature and steam setting selected. Place the iron back onto the base each time you reposition your garment and it will reheat in seconds.

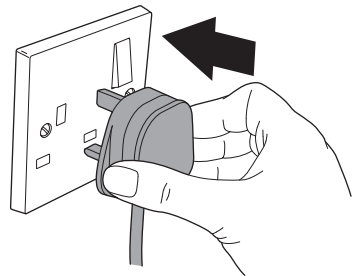

Setting the temperature

1. The temperature dial is on the top of the water tank. This dial can be rotated clockwise or anticlockwise until the desired temperature symbol is aligned with the marker.
2. Place the iron on the base to heat up. The blue base indication light will turn red and the temperature indication light on the iron will illuminate.
3. When the temperature indication goes out and the base indication light turns back to blue, the iron is at the correct temperature and is ready to use.

 NOTE: Throughout ironing, place the iron back on the charging base to maintain the heat (e.g. each time you adjust your garment on the ironing board). Wait for the base indicator light to change from red back to blue before resuming. Be aware that if you lower the temperature from a higher setting the iron will need time to cool down before using. It is best to start with fabrics that require lower temperatures and work up.

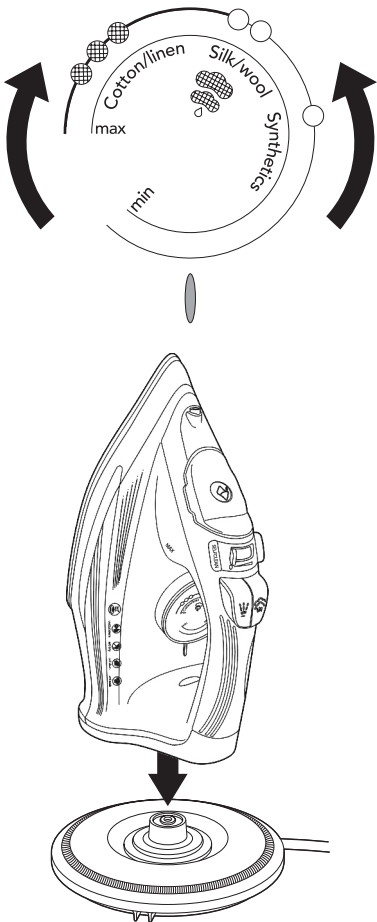




Always check the information on the product care label before ironing.

Garment label	Fabric type	Thermostat settings
	Synthetic	• Low temperature
	Silk - wool	•• Medium temperature
	Cotton - linen	••• High temperature
	Fabric not to be ironed	

Steam ironing

- 1. The amount of steam is regulated by the steam dial:
 - A – no steam
 - B – low continuous steam
 - C – high continuous steam
- 2. Always check the care label on your clothing for the best steam setting, or use the below grid.
- 3. The iron will give off continuous steam when in the horizontal position only.
- 4. The steam will stop once the iron is vertical.
- 5. You can also manually slide the steam dial to the no steam position '0'.

   
NOTE: We recommend only using the steam function on the highest temperature setting. If the iron is not hot enough the steam will not produce. The iron has a built in anti-drip system which automatically activates. This stops drops of boiling water spoiling delicate fabrics.

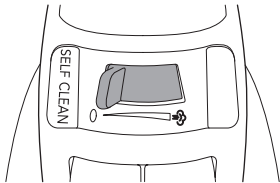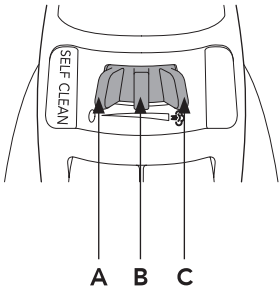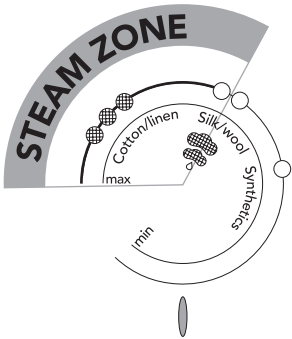

Fabric style	Temperature setting	Steam setting	Steam burst
Linen	Maximum	High continuous steam	Yes
Cotton	•••	High continuous steam	Yes
Wool	••	Low continuous steam	Yes
Silk	••	No steam	No
Synthetics	•	No steam	No


Dry ironing

 1. To iron without steam, slide the steam dial to the dry setting which is marked as '0'.

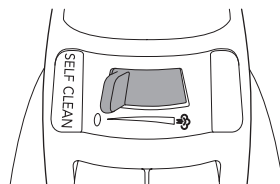

Using the steam burst

 1. Whilst ironing, press the steam burst button to generate a powerful burst of steam (this will remove stubborn creases).
2. For optimum steam quality, do not operate more than 3 bursts in succession before replacing the iron on the charging base.
3. The steam burst button can be used vertically to steam curtains and hanging garments.

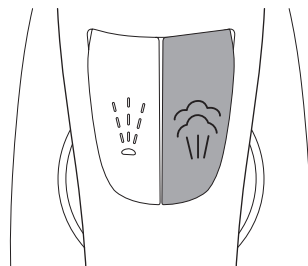


NOTE: We recommend only using the steam burst when the iron is set to the highest temperature.

Using the water spray button

1. Check there is water in the tank and then slowly press the water spray button downwards to form a dense spray or quickly press it to form a fine vapour.

 NOTE: We do not recommend using the spray function on silk or synthetic fabrics. When ironing delicate fabrics we recommend moistening the fabric before using the spray button or placing a damp cloth between the soleplate and the fabric.

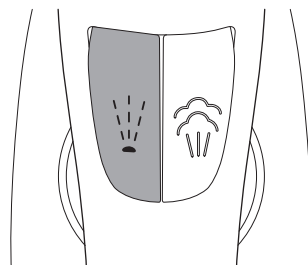

Cleaning your iron

 
Make sure the charging base is disconnected from the power outlet, and the iron is empty and completely cool.

1. Any marks on the soleplate can be removed using a damp cloth and a mild detergent.
2. Avoid scratching the soleplate and never use metal scourers to clean.
3. The plastic parts of the iron and base can be cleaned with a damp cloth and then wiped dry.

Using the self clean feature


The self clean feature cleans inside the iron to remove impurities. It's recommend that the iron is self cleaned once a month.

1. Half fill the water tank and set the steam dial to the no steam setting.
2. Plug in the charging base and place the iron on the base. Set the temperature to maximum and wait for the temperature indication light to turn off on the iron.
3. Remove the iron from the base and remove the base from the mains power. Hold the iron horizontally over the sink.
4. Grip the lugs on each side of the self clean panel and pull towards you. Gently shake the iron until all of the water and steam has emptied from the tank. Take care to avoid the steam that is being released.
5. Once empty, push the self clean panel back in place.
6. Iron over an old cloth to remove any residue left on the soleplate.

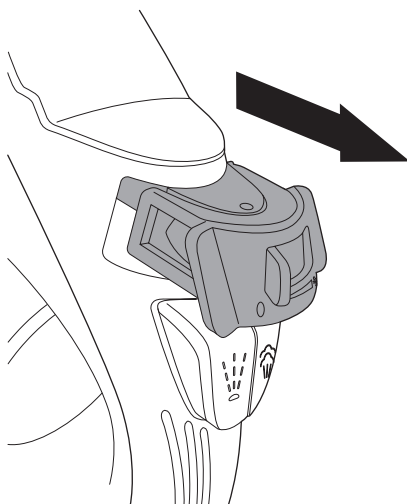

Storing your iron

 
1. Disconnect the charging base from the mains power.
2. Allow the iron to cool fully before storing.
3. Empty the water tank by turning the iron upside down over a sink and opening the water tank inlet.
4. Roll up the cord and store next to the iron. Don't wrap the cord around the iron or base as this will damage the cord.

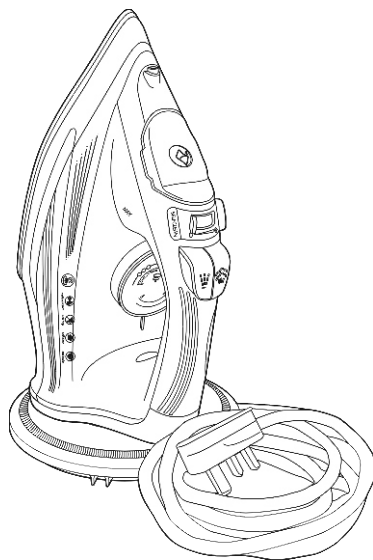

How to...

...change the fuse

 1. Only use a 13 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

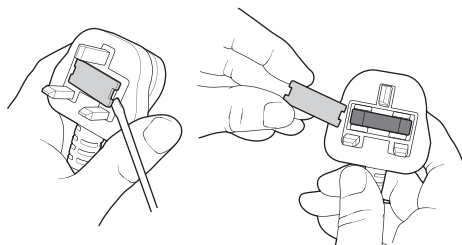

1. The power consumption of off mode is 0.

100 DAY SATISFACTION GUARANTEE

If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

 
Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

Need something else?

www.GEORGE.com

We have a wide range of accessories and other products that can be ordered direct to your door.

**For PDF copy of this manual please scan
QR code and search for model number**

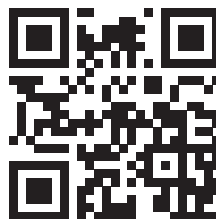

ASDA
technical support
0333 600 7700

Customer services information

If you have any problems, or just need some advice or more information on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

Call

0800 952 0101

Write

ASDA, Leeds LS11 5AD

Product name: **GCI301BG-20 360° Cordless iron**

Product site code: **15A.09.22.107A**



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

Copyright

© 2020 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA, Leeds LS11 5AD / ASDA, Antrim BT41 4GY.

Company number 00464777

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

