 


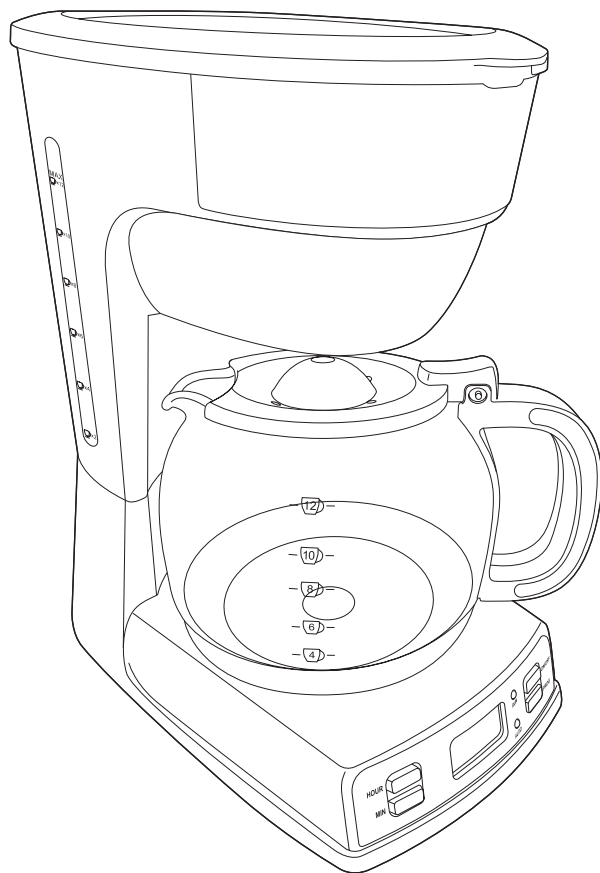

GDC001B-19 Coffee maker

User Guide

220-240V~50-60Hz, 900W

IMPORTANT: RETAIN FOR FUTURE REFERENCE



About this guide

We're here to help you get the most from your coffee maker, so please keep hold of this manual for future reference.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATION PRECAUTIONS YOU SHOULD BE AWARE OF.



WARNING. HOT SURFACE. RISK OF SCALDING. DO NOT OPEN LID WHILST COFFEE MAKER IS HOT. BE CAREFUL WHEN POURING LIQUID FROM YOUR COFFEE MAKER AS THIS CAN RESULT IN INJURY. DO NOT TOUCH THE OUTSIDE OF THE COFFEE MAKER WHEN HOT. HOLD THE CARAFE BY THE HANDLE ONLY

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. For household use only. Not for use outdoors.
3. This appliance is only suitable for domestic use and is not designed for commercial purposes.
4. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
5. This appliance can be used by persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.


6. Children shall not play with the appliance.
7. ASDA does not recommend allowing children to operate this appliance.
8. Remove all packaging prior to use. Inspect the product for any damage before use. If damage is found, notify ASDA to exchange the product.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
10. Before connecting the coffee maker to the power, check the voltage shown on the appliance base corresponds with the voltage in your home. If it doesn't, contact your dealer and don't use the coffee maker.
11. This appliance is classified as protection class I and must be connected to a protective ground.
12. Please don't dismantle. If a fault occurs have the coffee maker inspected in a qualified repair shop or return to us at ASDA.
13. Don't use the coffee maker for anything other than its intended use.
14. This appliance is not intended to heat liquid other than water.
15. If the coffee maker is overfilled, boiling water may be ejected. Do not overfill.
16. Extreme caution must be used when moving an appliance containing hot water.
17. Do not immerse the electrical parts of the appliance in water or other liquids. Never hold the appliance under running water.
18. Keep away from harsh or abrasive cleaning agents or solvents.
19. Do not use if the coffee maker, carafe or cord is damaged
20. Always place on a firm and level surface, out of reach of

children.

21. Do not add water when the coffee maker is switched on and brewing coffee.
22. Do not touch the hot plate.
23. Always make sure the lid is closed while the coffee jug is brewing and avoid contact with the steam.
24. Be careful when moving the carafe when it contains hot water.
25. When pouring don't tip the carafe too fast. Always use the handle and don't touch the body (as this can get very hot).
26. The cord shouldn't hang over the edge of a table or counter, or touch a hot surface.
27. Keep away from heat sources, such as ovens or radiators.
28. Do not use attachments not recommended by the manufacturer, such as external timers or remotes.
29. Remove the plug from the mains power before cleaning and when not in use.
30. Avoid boiling without water as this can damage the heating elements.
31. Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.
32. **WARNING!** Avoid spillage on the connector.
33. Regarding the instructions for cleaning surfaces in contact with food, please refer to chapter "How to... clean your coffee maker".
34. **WARNING!** Misuse may lead to injury.
35. **WARNING!** The heating element surface is subject to residual heat after use.
36. The coffee-maker shall not be placed in a cabinet when in use.
37. The power consumption was less than 0.5 W in the standby mode. The period after which the equipment reaches automatically standby mode was less than 40 mins.


You should have

Coffee maker, filter holder, filter basket and carafe

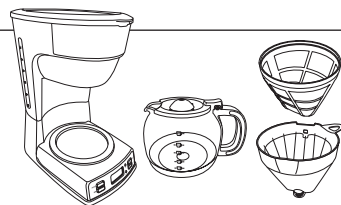

How to...

...recognise the parts of your coffee maker

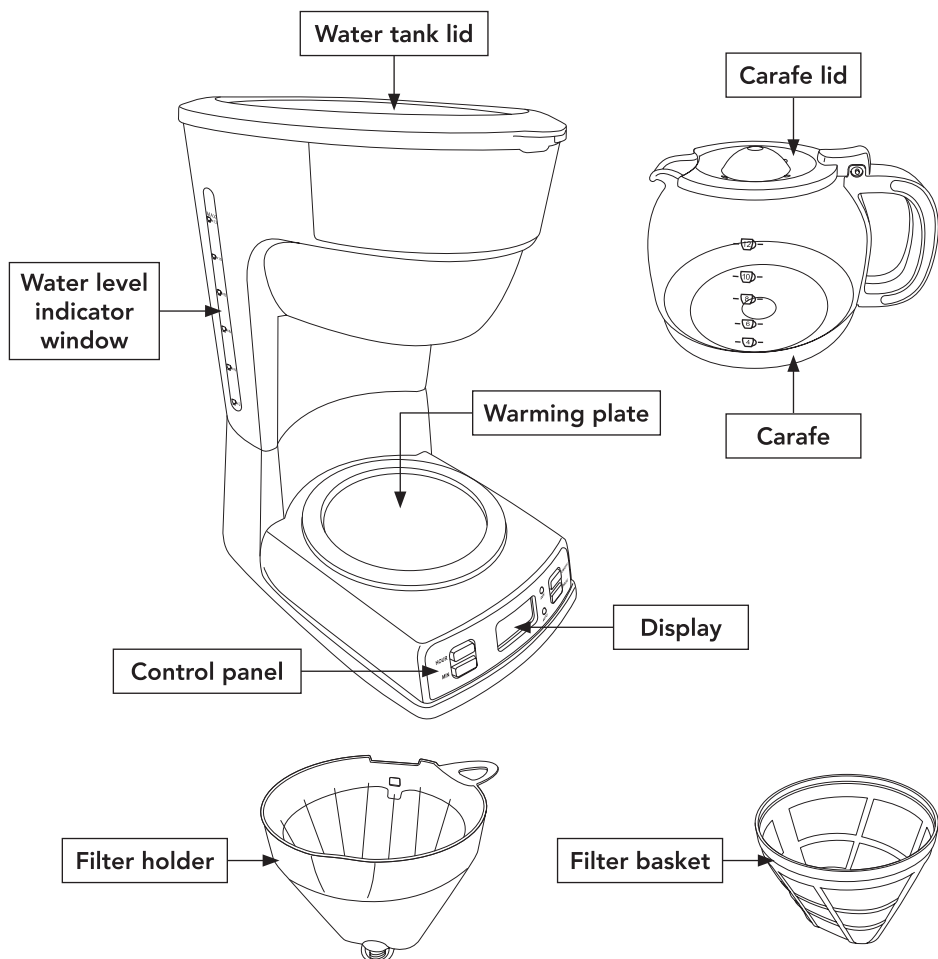


How to...

...use your coffee maker


Please note

Before using for the first time, we recommend you use 2-3 times with water to flush the system through. Leave the coffee maker for five minutes before flushing the system through again. This will remove any dust or impurities from the system and improve the flavour of the coffee.

1. Ensure the coffee maker is on a firm, level surface away from the edge. Pop the plug into the socket and switch the power on.

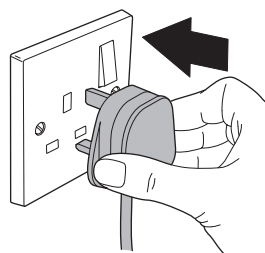


2. The digital display will show '12:00'. To set the time press the **'PROG'** button once .

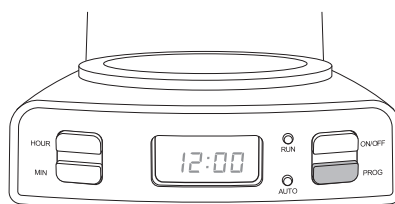


3. The display will show '**CLOCK**' above the time. Next, press the '**HOUR**' and '**MIN**' buttons to work through the times until you reach the desired time setting. The current time is now set.


NOTE: The clock is shown in 24 hours.

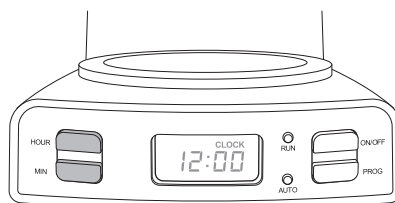

4. Lift the water tank lid fully.

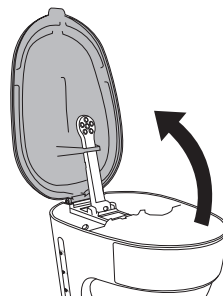


5. Remove the carafe by pulling it carefully outwards from the top of the warming plate.

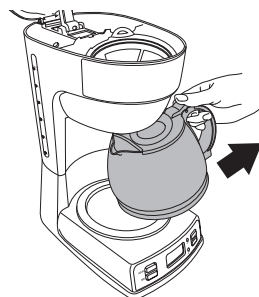


6. Use the carafe to fill the water tank with cold, fresh water.


The number of cups are indicated on the water level indicator window. Do not fill less than 'x2' marker or more than 'MAX' marker.

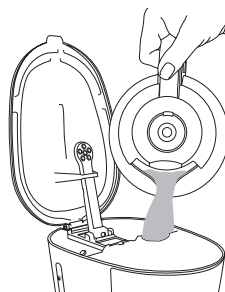

7. Place the filter holder inside the filter housing, taking care that the finger grip on the filter holder sits in the recess as shown.

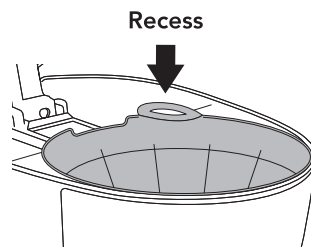


8. Drop the filter inside the filter holder.

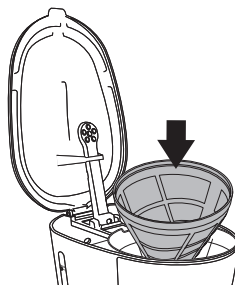


9. Place the ground coffee in the filter basket **(1)** (we recommend using 5-6 grams of coffee per large cup).

Close the water tank lid. **(2)**
The lid will click shut.

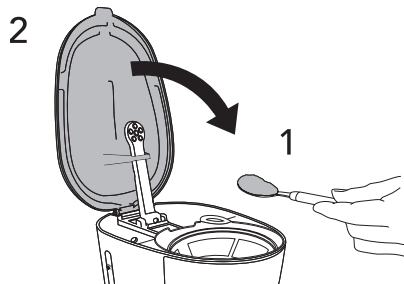

10. Place the empty carafe onto the warming plate.

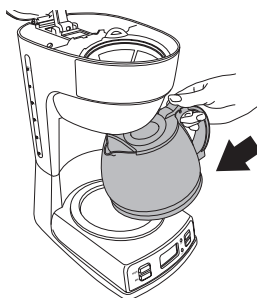

11. Switch the coffee maker on by pressing the 'ON/OFF' button. The 'RUN' light will illuminate red. The coffee maker will begin warming up.




12. Once enough filtered coffee has collected in the carafe, you can remove the carafe at any time and serve coffee. The filter will automatically stop dripping while the carafe is being used (providing it is not removed for more than 30 seconds).
13. When the brewing process is complete, if you do not wish to serve immediately, keep the power on and the coffee will be heated whilst kept on the warming plate. We suggest that the maximum time before drinking should not exceed 40 minutes. For optimum flavour, serve the coffee just after brewing.
14. The brewing process can be interrupted and restarted at any time during operation by pressing the **'ON/OFF'** button.

How to...


...use the timer function

This function is used to delay the brewing start time. It will only work if you have set the clock on the coffee maker as described in the 'How to...use your coffee maker' section of this manual.

1. Press the **'PROG'** button twice so that the word **'TIMER'** and **'12:00'** is shown in the display.

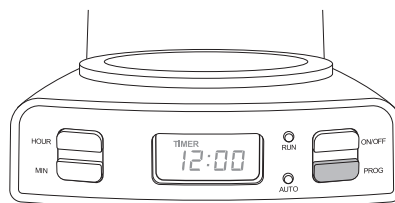


2. Press the **'HOUR'** and **'MIN'** buttons to work through the times until you reach the desired time setting. For example, until you reach 08:30.

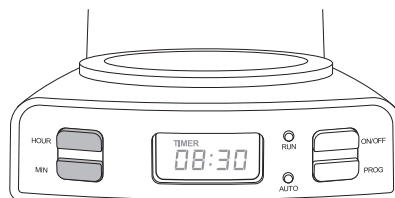

3. Then press the '**PROG**' button once complete.


4. The green '**AUTO**' light will illuminate to show the timer is set.

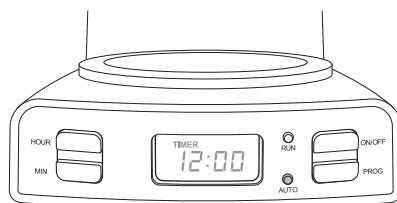

5. Your coffee machine is now set to turn on automatically.

If you wish to cancel the automatic timer once set, press the '**PROG**' button once and the '**AUTO**' light will turn off.

6. When the set time arrives, the red '**RUN**' light will be illuminated and brewing will begin.

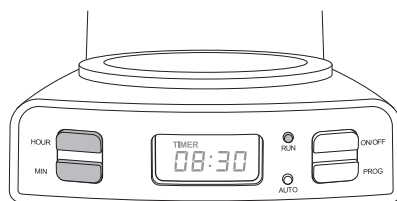

How to...

...clean your coffee maker


Make sure the device is disconnected from the power outlet, and the coffee maker is empty and completely cool.

1. Carefully remove the carafe and wash in warm soapy water. Dry thoroughly.
2. Remove the filter holder and basket and empty the coffee grounds. Wash in warm soapy water and dry.
3. Wipe the outside of the coffee maker with a damp cloth.
4. When storing, ensure all parts are fully dry first.
5. To de-scale, operate the coffee maker with white vinegar instead of water and do not add any coffee grounds to the filter. Then operate the coffee maker twice with fresh cold water (and no coffee) to remove the odour of the vinegar.

How to...

...change the fuse

1. Only use a 10 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

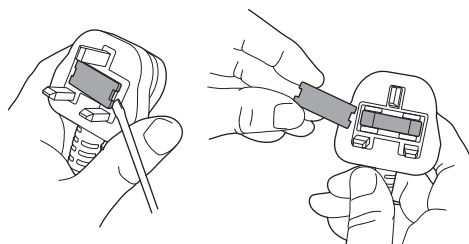

Notes...

Notes...



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

**Need
something
else?**

www.GEORGE.com

We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number



ASDA
technical support
0333 600 7700

Customer services information

If you have any problems, or just need some advice or more information on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

Call

0800 952 0101

Write

ASDA, Leeds LS11 5AD

Product name: **GDC001B-19 Coffee maker**

Product site code: **15A.09.22.208A**



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

Copyright

© 2023 ASDA Stores Limited.
All other trademarks appearing herein are the property of their representative owners.
Specifications are subject to change without notice.

Manufactured for:

ASDA, Leeds LS11 5AD/ ASDA, Antrim BT41 4GY.

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

