 




George.
home

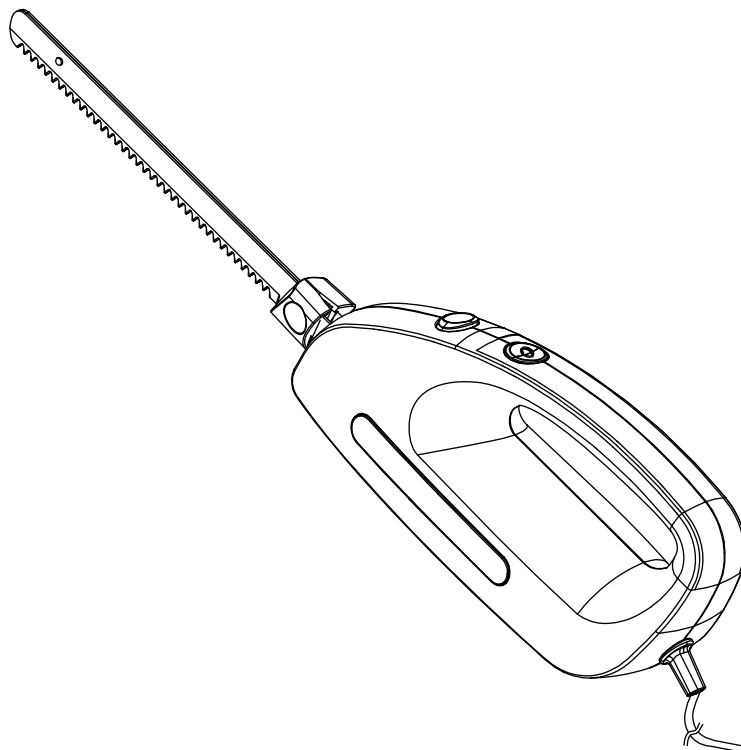

GEK201MB-20 Electric knife

User Guide

220-240V~50/60Hz, 120W

IMPORTANT: RETAIN FOR FUTURE REFERENCE





About this guide

We've written this manual to help you get the most from your electric knife. Please keep hold of it for future reference.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS THAT YOU SHOULD BE AWARE OF.

1. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
2. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. ASDA does not recommend allowing children to operate this appliance.
5. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
6. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
7. Avoid outdoor use. This appliance is for household use only.





 
8. The cutting blades are sharp, handle with care. Hold the blades by the finger grips or blade shafts only, and take care not to touch the serrated blade when handling or cleaning.
9. Do not immerse the electrical parts of the appliance in water or other liquids.
Never hold the appliance under running water.
10. Never use accessories which are not recommended by the manufacturer. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
11. Never let the motor unit, power cord or plug get wet.
12. Don't let excess cord hang over the edge of a table or worktops or touch hot surfaces.
13. Misuse of your electric knife can result in injury.
14. Care is needed when handling the sharp cutting blades and during cleaning.
15. Only use the appliance for its intended domestic use.
16. No liability will be accepted if the appliance is subject to improper use or failure to comply with these instructions.
17. Do not use the knife for more than 2 minutes. Allow the knife to cool for at least 1 minute before continuing.
18. Power consumption of OFF mode: 0.1 W. Period after which the equipment reaches automatically OFF mode: 0 minute.






You should have

Electric carving knife,
blades and blade cover

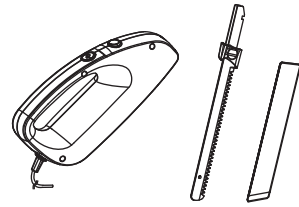

How to...

 ...recognise the parts of your electric carving knife

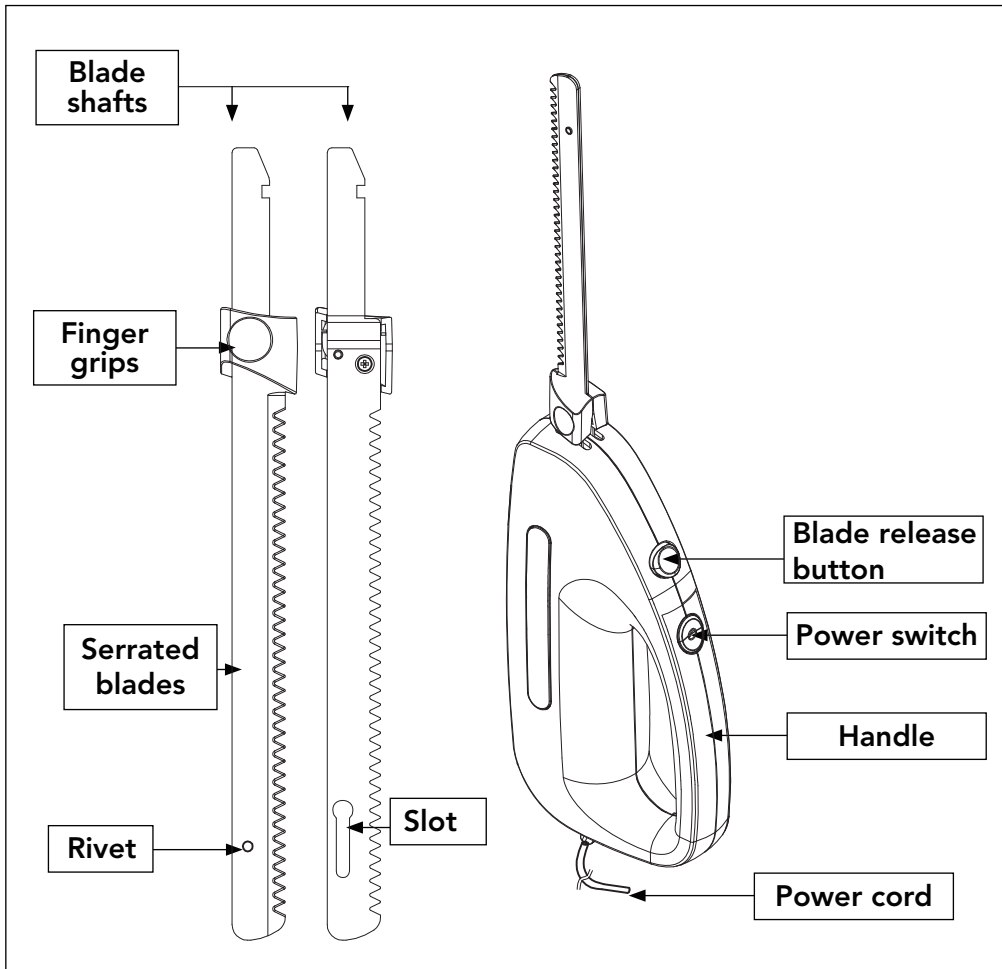



How to...

 
...use your electric carving knife

Before first use remove the blade cover and carefully wash the blades using a cloth with warm soapy water or in a dishwasher.


Fitting the blades

1. Check to ensure that the electric knife is not plugged in.


2. Reassemble the blades if necessary.
To do this hold the blades using the finger grips and place the slot at the end of the right blade over the rivet on the left blade.

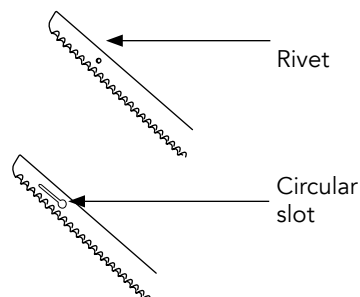

 3. Slide the rivet along so that both finger grips are situated next to each other.
4. For safety carefully place the blade cover back over the blades.

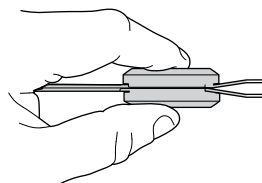


 5. Insert the blade shaft into the slots of the handle using the finger grips. Ensure the back of the blades are facing the same way as the power switch.

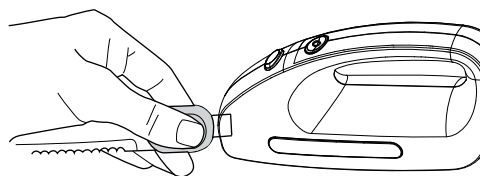




 6. Push the blade shaft into the housing until the blades click firmly into place.

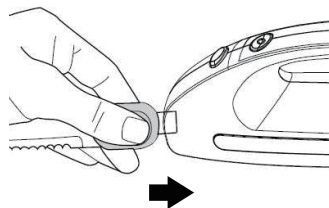


Carving meat and food

 1. Always place the food to be carved on a suitable cutting board so worktops and tabletops are protected from damage.
2. Slot the plug into a power socket and switch on.

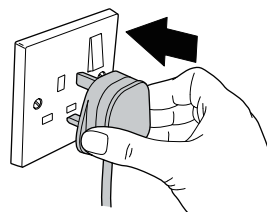

 3. Hold the electric knife in position. Press and hold the power button to switch on (2).

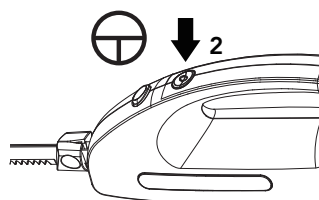


4. When using the electric knife gently push the blade in the direction you wish to cut.
5. When slicing poultry cut almost to the bone and then separate meat from the bone manually. Do not attempt to cut through bones.
6. Do not use the knife for more than 2 minutes.
Allow the knife to cool for at least 1 minute before continuing.
7. The blades are high quality and do not require sharpening.
8. Do not use to cut frozen food.





Removing the blades

 1. Check to ensure that the electric knife is not plugged in.
2. Grip the blades firmly using the finger grips and press the Eject button (1).
3. Slide the blades out of the handle.

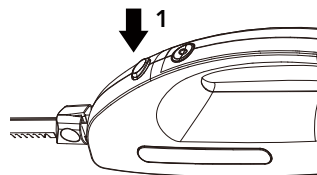

How to...

...clean and store your electric knife

Make sure your electric knife is disconnected from the power and is completely cool.

1. Remove the blades from the handle as detailed elsewhere in these instructions.
2. Separate the blades by sliding the rivet on the left blade out of the slot in the right blade.
3. Carefully wash the blades using warm soapy water or in a dishwasher. Rinse and dry thoroughly.
4. Wipe the handle with a slightly damp cloth then dry thoroughly. Never immerse the handle in any liquid. Dry thoroughly.
5. Place the blades together and slide into the blade cover supplied.
6. Place the electric knife and accessories inside the box in which it was supplied in a dry place out of reach of children. Never wrap the power cord around the knife or over-stress the cord where it attaches to the handle.

 




How to...

...change the fuse

1. Only use a 3 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

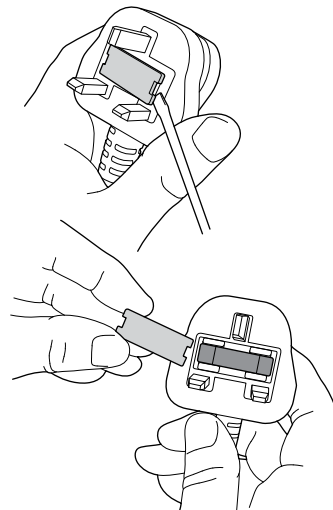







If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

Need something else?

www.GEORGE.com

We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number



ASDA
technical support
0333 600 7700

Customer services information

If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

Call

0800 952 0101

Write

ASDA, Leeds LS11 5AD

Product name: **GEK201MB-20 Electric knife**

Product site code: **15A.09.22.133**





To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

Copyright

© 2020 ASDA Stores Limited.
All other trademarks appearing herein are the property of their representative owners.
Specifications are subject to change without notice.

Produced for ASDA,
Leeds LS11 5AD/ASDA,
Antrim BT41 4GY.

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

