

George.

George Home 2 Tier Electric Clothes Dryer Instruction Manual



Model:GHCAN021SL5E

Site code:14H.09.25.102

Size: 730x700x1180MM

Rating: 220-240V~, 50-60Hz, 200W, Class I

IP Degree: IPX1

IMPORTANT: RETAIN FOR FUTURE REFERENCE



Please read all instructions before using this product. And keep these safety instructions for your future reference.

Warning

- 1.Always unplug the power cord when not in use.
- 2.If the power cord is damaged it must be replaced by qualified person.
- 3.For household use only. Do not use outdoors.
- 4.Never put the product in water, in the bath or other water containers.
- 5.Do not hide the power cord under floor mats or carpets. This will cause a tripping hazard.
- 6.Do not unplug the device by the power cord, hold the plug, not the cord.
- 7.Do not use in areas where gasoline, paint or flammable liquids are used or stored.
- 8.Use this product strictly as described in this manual to avoid the cause of fire, electric shock or personal injury.
- 9.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 10.Do not allow children to play with this appliance. It is not a toy or climbing frame.
- 11.Cleaning and user maintenance shall not be made by children without supervision.
- 12.Always rinse your clothes fully before using, so no water drips from your washing.
- 13.Always fold all of the arms down before switching on the airer.
- 14.Do not completely cover the airer with garments/bedding.
- 15.Not suitable for drying silk, down jackets and quilts.
- 16.Approximately 5-10 minutes after switching on, the heating regions will reach a temperature of approximately 40 to 65 degrees Celsius in free air. This is also affected by ambient air temperatures.
- 17.Max load-bearing 5kg per wing, 10kg per layer.
- 18.This appliance is intended for drying textiles washed in water only.

Product use instructions

- 1.Fully read the installation manual carefully before using the airer.
- 2.The clothes airer must be fully assembled before use.
- 3.Press the power switch to [OFF] position. (i.e. Power indicator light is off).
- 4.Plug the power cord into an electrical outlet.
- 5.After connecting to suitable power supply, press the power ON/OFF switch, the power indicator lights up and then the warmer starts the heating work.

Installation instructions

Freestanding:

1. Install the foot, then tighten the screws provided on both sides of the base.



2. Open the support legs when using the clothes dryer.



3. Unbuckle the hook, put down the shelves.



4. Plug in and switch on the clothes dryer.




Power ON/OFF switch

1. Press the switch to the on position I (The light will illuminate) and the airer will start to heat up.
2. Press the switch to the off position 0 (The light will extinguish) and the airer will start to cool down.

Cleaning

1. Before cleaning, please unplug the product and let it cool down.
2. Do not put the airer, power cord or plug into water.
3. Never clean the product with alcohol or solvent-based cleansers.
4. Clean the surface of the airer by using a soft damp cloth and then dry.
5. Do not use a rough cloth or harsh abrasives. This will scratch the surface of the product and damage the finish.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Warranty Information

1. The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.
2. The warranty only covers defects in material or workmanship.
3. The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.
4. The warranty will not apply in cases of:
 - Normal wear and tear
 - Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
 - Use of force, damage caused by external influences
 - Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
 - Partially or completely dismantled appliances



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

Copyright

© 2025 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA, Leeds LS11 5AD /

ASDA, Antrim BT41 4GY

Disposal



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

