 




George.  
home

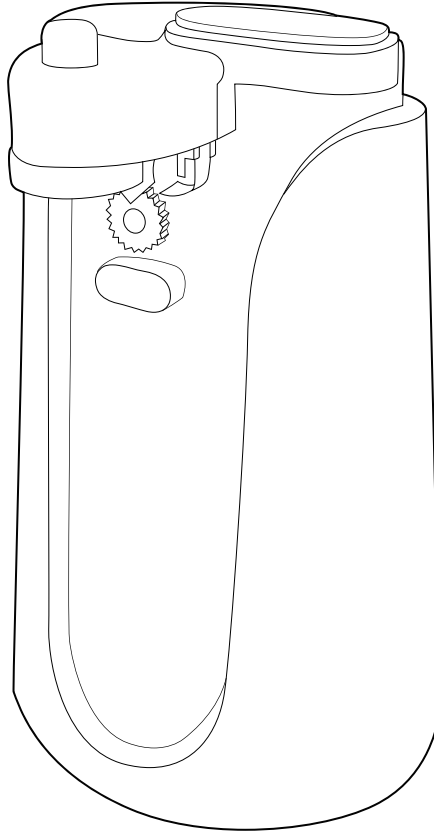

# **GCO101B-20 Electric can opener**

## User Guide

220-240V~50Hz, 60W

**IMPORTANT: RETAIN FOR FUTURE REFERENCE**







# About this guide

We're here to help you get the most from your electric can opener, so please keep hold of this manual for future use.

## WARNINGS:

**THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.**

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. For household use only.
3. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
4. ASDA does not recommend allowing children to operate this appliance.
5. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
6. Children shall not play with the appliance.
7. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning. Regarding the instructions for cleaning surfaces in contact with food, please refer to chapter "How to clean and store the electric can opener".
8. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
9. The cutting blade is sharp, handle with care.

 




10. **Warning! Misuse may lead to injury.** Care should be taken when handling the sharp cutting blades and during cleaning.
11. If you open 5 cans or more at any one time or use constantly for one minute, allow the motor to cool for a few minutes before continuing.
12. **Warning! Do not immerse the electrical parts of the appliance in water or other liquids. Never hold the appliance under running water.**
13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
14. The cord shouldn't hang over the edge of a table or counter, or touch a hot surface.
15. Do not use this appliance other than for its intended use.
16. Only use on flat, stable surfaces.
17. Never use accessories which are not recommended by the manufacturer. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
18. Please don't dismantle. If a fault occurs have the can opener inspected in a qualified repair shop or return to us at Asda.
19. **Environmental information:** If at anytime in the future you should need to dispose of this product please note that in the UK, waste electrical products/batteries should not be disposed of with household waste.
20. This can opener is designed to open standard size cans. The can diameter should be between 50-100mm; maximum 178mm in height. A regular sized can weighs approximately 400g. In case the total weight of the can is over 510g, please hold the top of the can opener to prevent it tipping while opening.
21. The can opener is not suitable for opening rimless cans, cans with angled corners, aluminum cans, pressurised cans or cans designed to be opened by another method such as a pull tab or rolling key.
22. The power consumption was 0 W in the off mode.

# You should have


Electric can opener

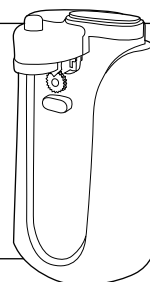



# How to...

 ...recognise the parts of your electric can opener

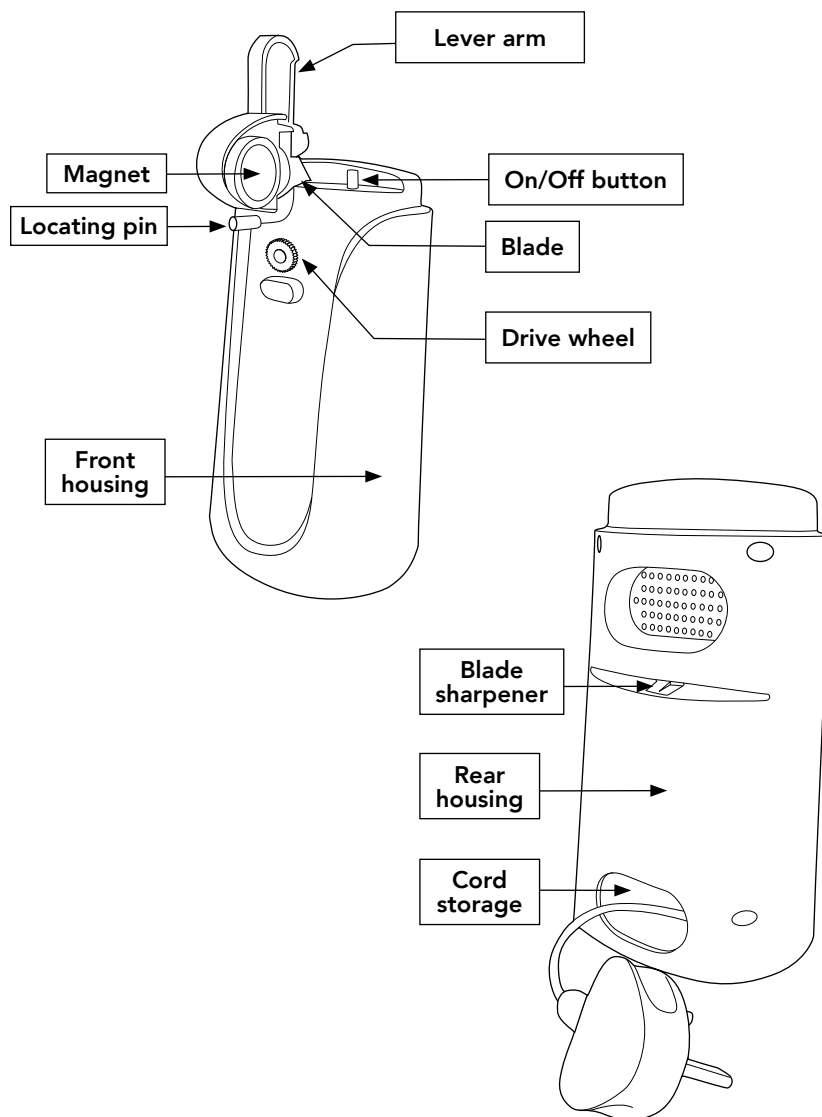




# How to...

...assemble the electric can opener

 Slot the metal pin on the lever arm into the hole above the guide bar on the motor unit.

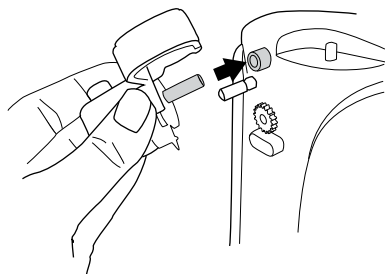


# How to...

...use the electric can opener

## Please note


Only steel or iron lids will stick to the magnet. Do not use your can opener to open ring pull cans. Paper labels may cause the geared wheel to slip, you may need to remove some labels before use. During operation cans will be held in place, some large or non-round cans will not, so their weight will need to be supported. CAUTION: Opened can lids and the inside edges of the can be very sharp. Use caution when handling them.

 1. Slot the plug into a wall socket and turn the power on if needed.

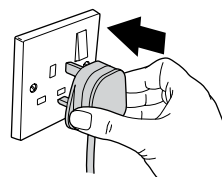




 
2. Ensure the appliance is on a flat, stable surface.  
Lift the lever arm upwards.

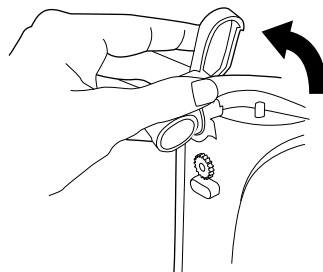

 3. Hold the can in one hand and place the rim of the can under the locating pin, whilst resting the underneath of the rim on the top of the drive wheel. The magnet on the lever arm should attach itself to the can's lid.

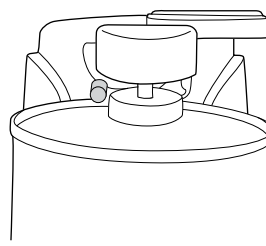

 4. Push lever arm downwards to turn the can opener on. Once the can is fully opened the can opener will stop.

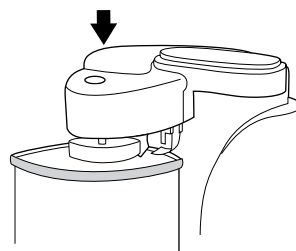

5. To remove the can, hold the can in one hand and lift the lever arm upwards.  
Your can will now be free of the can opener.





# How to...

 
## ...sharpen knives

### Please note

Don't sharpen serrated blades. Do not use to sharpen scissors. Ensure knives are clean and dry before sharpening.

Make sure the appliance has been unplugged from the mains power before using the sharpener.

1. With one hand, hold down the top of the can opener to ensure it's stable when sharpening.
2. Place the sharp edge of the knife into the sharpener slot section at the back of the unit.
3. Slowly pull the knife back and forth to sharpen.

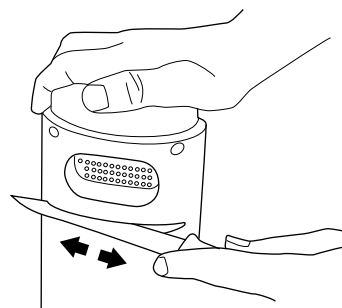

# How to...

## ...clean and store the electric can opener

1. Lift the lever arm upwards and slide out of the motor unit. Take care to not touch the cutting blade.
2. Wash the lever arm using hot soapy water then dry thoroughly. Do not place in a dishwasher.
3. Wipe the motor unit with a damp cloth only and dry thoroughly.
4. Refit the lever arm.
5. House the cable in the cord storage area at the back of the appliance.
6. Store out of reach of children when not in use.



 




# How to...

## ...change the fuse

1. Only use a 3 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

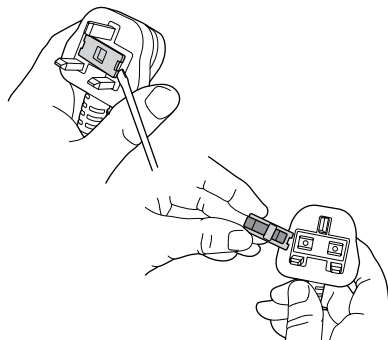



# Notes...





If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or misdescribed.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

**Need something else?**

**www.GEORGE.com**

We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number



**ASDA**  
technical support  
0333 600 7700

## Customer services information

If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

## Call

**0800 952 0101**

## Write

ASDA, Leeds LS11 5AD

Product name: **GCO101B-20 Electric can opener**

Product site code: **15A.09.22.211**





To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

#### EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

## Copyright

© 2023 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

#### Manufactured for:

ASDA, Leeds LS11 5AD/ASDA, Antrim BT41 4GY

## Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

