



GFP101B-21 Food processor

User Guide

220-240V~, 50-60Hz, 500W

IMPORTANT: RETAIN FOR FUTURE REFERENCE

WARNINGS:


- **IMPORTANT SAFETY INSTRUCTIONS**
- **PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USE**
- **RETAIN FOR FUTURE REFERENCE**
- When using electrical appliances, basic safety precautions should always be observed, including the following:
 - Read all instructions.
 - This product is intended for household use only. Do not use outdoors. This product is only intended for preparing food.
 - This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
 - This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
 - Children shall not play with the appliance.
 - Care is needed when handling cutting blades, especially when removing the blade from the bowl, emptying the bowl and during cleaning.
 - Always disconnect the appliance from the mains supply if it is left unattended and before assembling, disassembling or cleaning.

- Switch off the appliance and disconnect from the mains supply before changing accessories or approaching parts that move in use.
- Avoid contact with moving parts.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid.
- Unplug from the mains outlet when not in use, before putting on, taking off parts and before cleaning.
- Check the power cord and plug regularly for any damage. If the cord or plug are damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury. Only use the accessories supplied by the manufacturer.
- Do not let the cord hang over the edge of the work top, or touch hot surfaces.
- **Warning:** Never leave the food processor running non-stop for more than 1 minute at a time. If the appliance has been running continuously for 1 minute, allow it to cool down for 5 minutes before using again.
- Never put any objects into the openings on the outer case.
- Never remove parts from the appliance such as screws.
- Never operate the Food Processor when the bowl is empty and do not remove the bowl lid before the












blades come to a complete stop.

- Do not touch the cutting blades or insert any object, such as knives, forks, spoons, etc into the bowl while the Food Processor is in operation.
- Misuse may lead to injury. Do not operate this appliance for anything other than its intended use.
- **Warning:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to electrical parts.
- The power consumption was less than 0.3 W in the off mode.

What's in the box


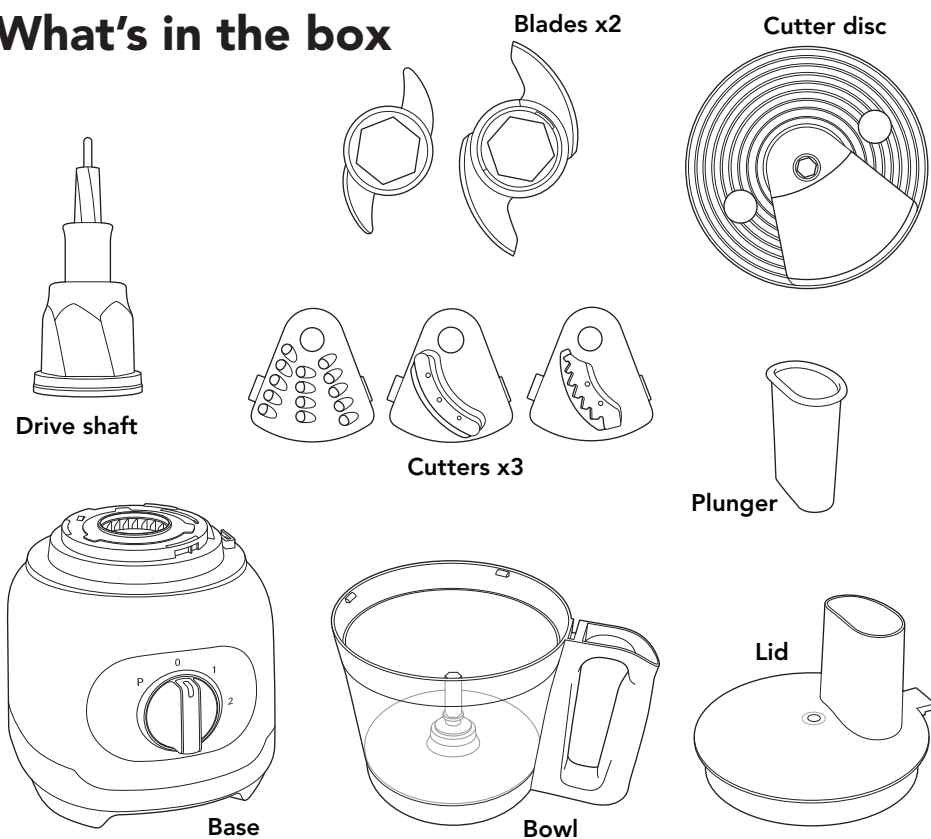


Features

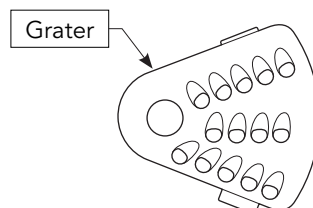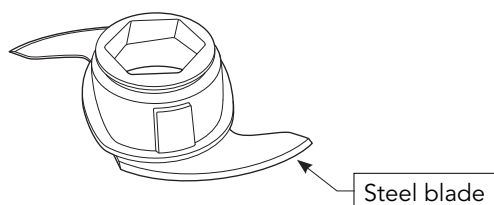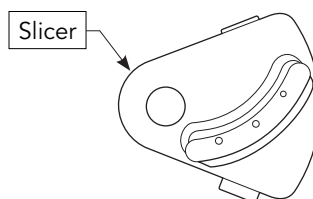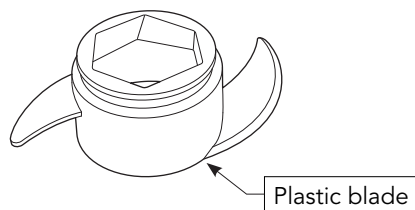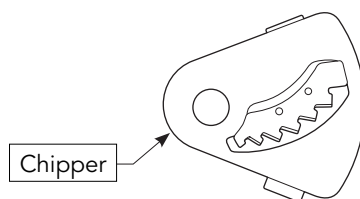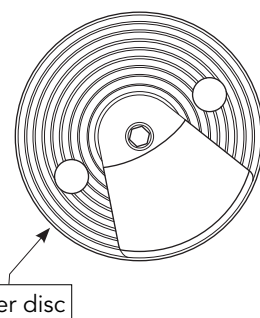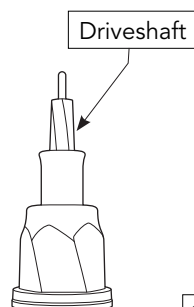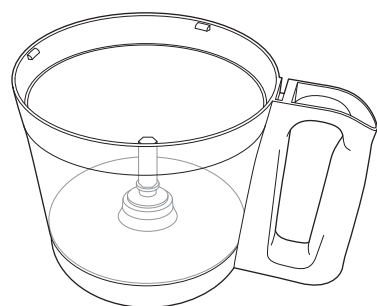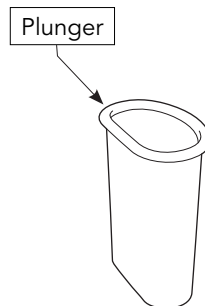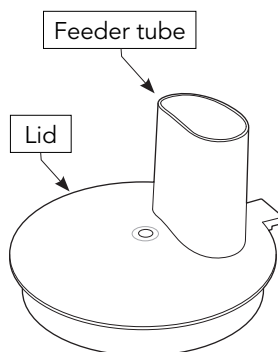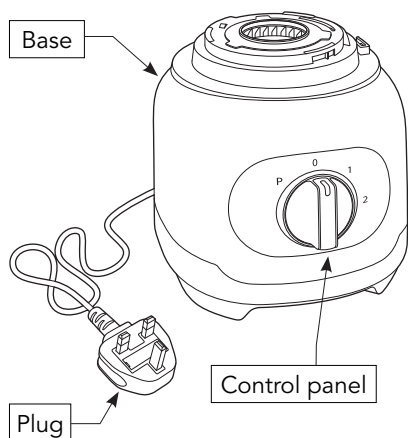

Before using your food processor: Remove all packaging and check for signs of damage such as, misaligned or damaged parts, damaged bowl or base, damage to the blade or cutters or damaged power cord or plug. If you find any damage do not use the food processor.

IMPORTANT SAFETY INFORMATION

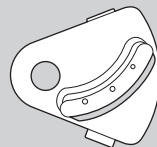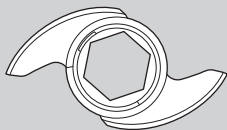

CAUTION: The steel blade and slicer both have very sharp blades. Handle these components with caution. Ensure you keep your fingers clear of the cutting edges when handling these items. Take care when washing all blades and cutters, never leave them in a sink or washing bowl with other items. Always wash separately.

IMPORTANT SAFETY INFORMATION

Safety interlock mechanism

For your safety this Food Processor has been fitted with a safety interlock mechanism and will not operate unless correctly assembled. Please ensure the bowl has been pushed down firmly onto the base assembly and the plastic lever on the lid locates correctly into the slot in the base assembly.


IMPORTANT: Wash all items **except the electrical components (base, cord, plug)** in warm soapy water before use.

Removing the metal blade cover

Remove plastic cover from the blade before washing and using.

Important: Keep the plastic cover so you can store the blade in it after use.

Always ensure the blade is dry before placing it in the plastic cover.

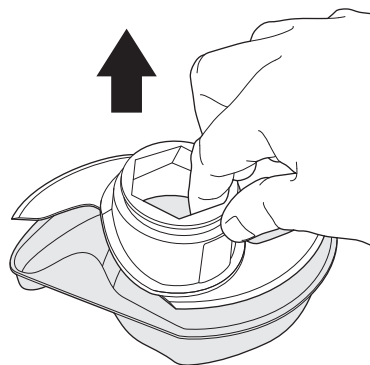


Fitting the bowl and drive shaft

1. Place the base on a firm level work top away from sources of high temperatures or steam.

Never place the food processor near or over a cooker or other heat producing appliances. Never place in a heated oven.


IMPORTANT: Always ensure the food processor is not plugged in before assembling or disassembling it.

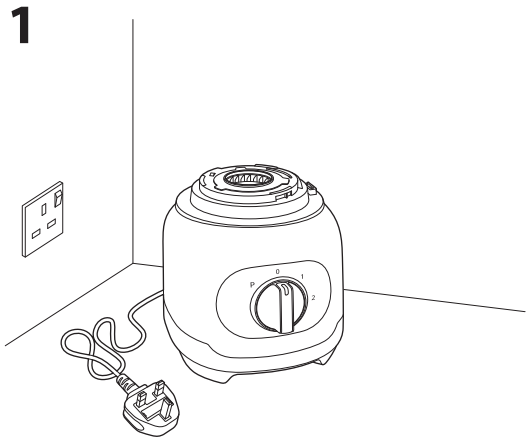


2. Slot the bowl onto the base as shown.

Rotate the bowl clockwise until the raised section on the base of the bowl is aligned with the padlock symbol on the base.

The bowl is now locked on the base.

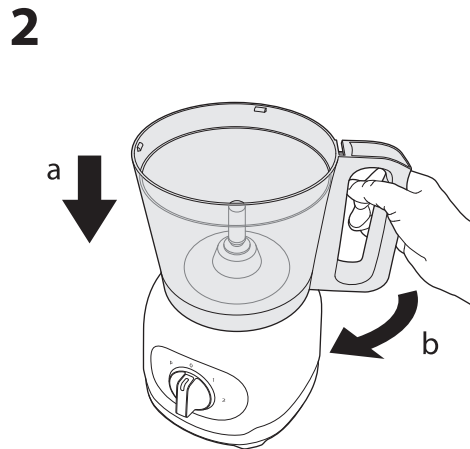

3. Slot the drive shaft down over the spindle in the middle of the bowl.

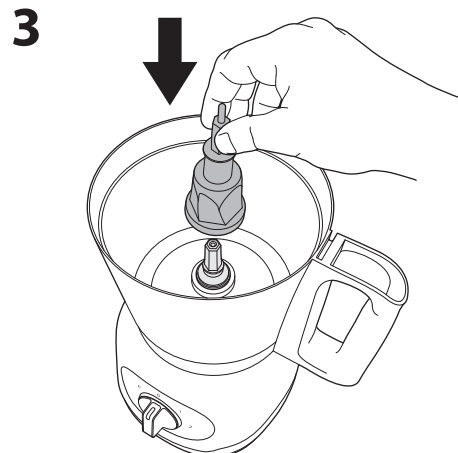

Using the blade attachments

1. Your food processor is supplied with two different types of blade.

Steel Blade: This blade is used to chop food into pieces.

Plastic Blade: This blade is used to mix dough.


2. These diagrams only show using the steel blade. The same process can be used for the plastic blade.

Slot the steel blade over the drive shaft in the middle of the bowl.

Important: Always check that the blade is correctly fitted over the drive shaft.


3. Slot the lid onto the top of the bowl as shown in the diagram.

1

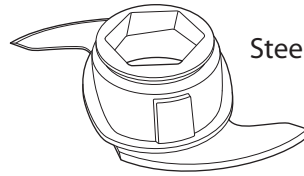


Steel Blade

2

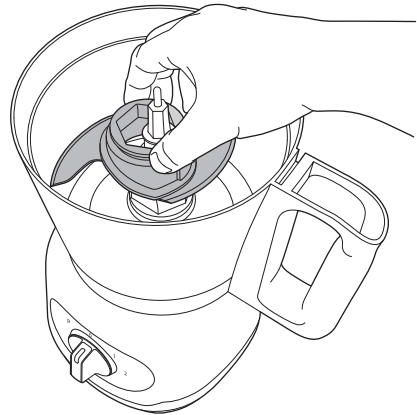

3

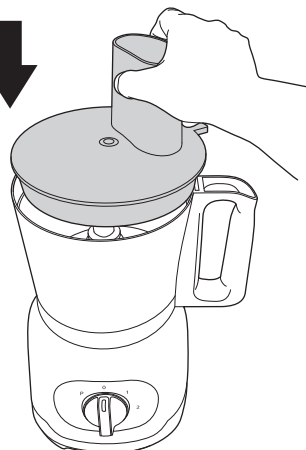

4. Rotate the lid clockwise until it locks in place.

Ensure the tab on the lid is aligned with the top of the bowl handle.

5. Wash the food you wish to chop and cut into suitable sized pieces. For meat, please don't exceed 20 x 20 x 60mm for best results. Slot the food into the feeder tube in the top of the lid. Slot the plunger into the top of the feeder tube on the lid.

6. Slot the plug on the food processor into a mains socket and switch the power on.

Choose the speed that you wish to process your food at:

P - Pulse: This automatically will switch to **0** (off) when released.


1 - Low speed: Coarsely chopped.

2 - High speed: Finely chopped.


0 - Off: Blades stop spinning.

Important: This appliance is fitted with a safety lock system which prevents the processor from being used if it is not assembled correctly. Unplug from the mains power once finished.




4

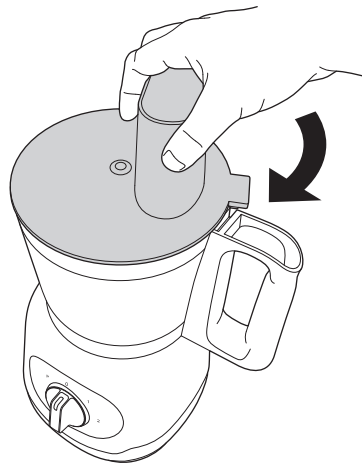

5

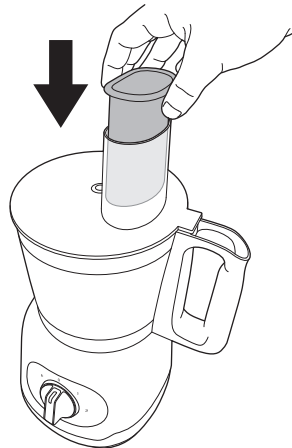


6

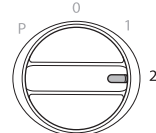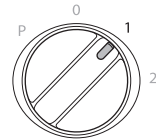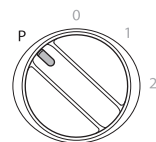

7. Rotate the lid anti-clockwise (a) to unlock it.

Lift the lid off the top of the bowl (b).


7

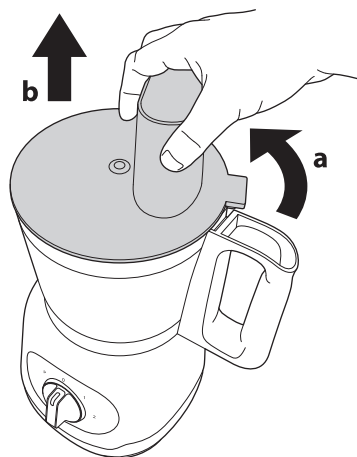

8. Carefully grip the sides of the plastic sleeve of the steel blade as shown in the diagram and lift upwards off the drive shaft.


Never lift the steel blade by gripping the blades.

8

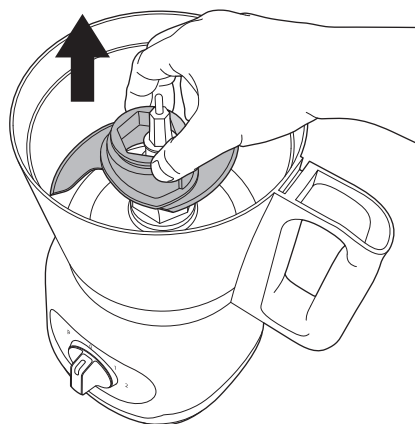

9. Lift the drive shaft out of the bowl.

9

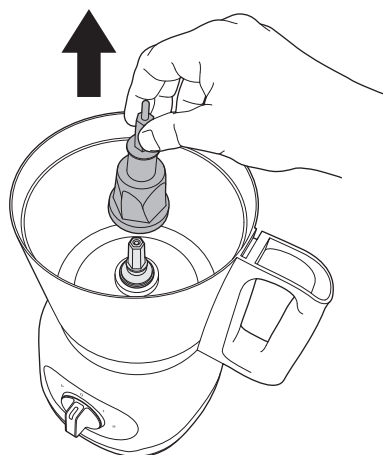

10. Rotate the bowl anti-clockwise to unlock it from the base.

11. Lift the bowl off the base unit.


12. Rinse any excess food off the blade, drive shaft and bowl under a tap and shake dry.

Ensure all of the parts are fully dried before storing them.


10



11

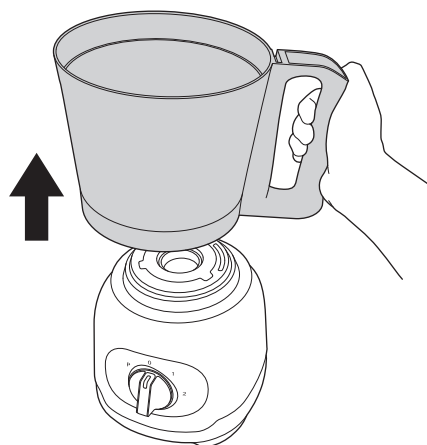

12

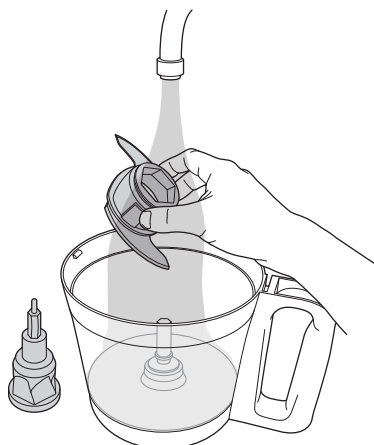

Using the cutter attachments

1. Your food processor is supplied with three different types of cutter attachments.

Chipper: This is used to make chips / french fries etc.

Slicer: This is used to thinly slice vegetables etc.

Grater: This is used to grate cheese or vegetables etc.


2. These diagrams show attaching the grating cutter only. Follow the same process for attaching the other cutters. Care must be taken when fitting the slicing and chipping cutters because of the sharp blades.

Slot in the small tab on one edge of the cutter under the edge of the slot in the cutter disc.


3. Push down on the opposite edge of the cutter until it locks in place.

IMPORTANT: take care when pushing down on the cutter. Ensure your finger is well away from any cutting edge before pushing down.


1

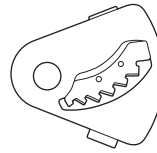

Chipper

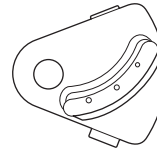


Slicer

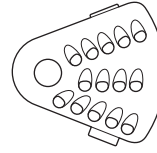


Grater

2

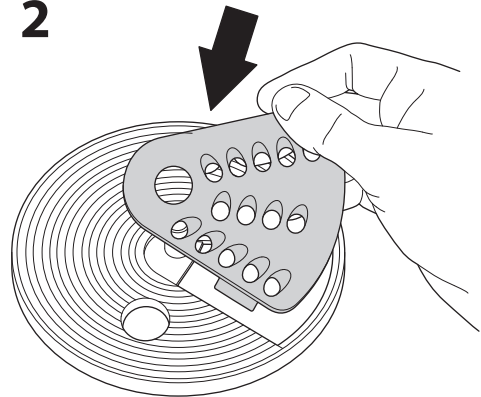




3

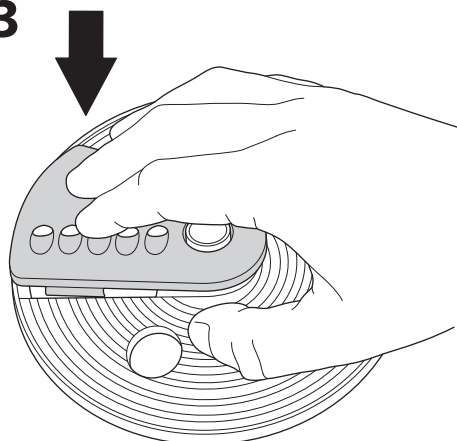

4. Slot the drive shaft down over the spindle in the middle of the bowl.
5. **IMPORTANT: Always ensure the food processor is not plugged in before assembling or disassembling it.**

Slot the cutter disc onto the top of the drive shaft.

6. Slot the lid onto the top of the bowl as shown in the diagram.

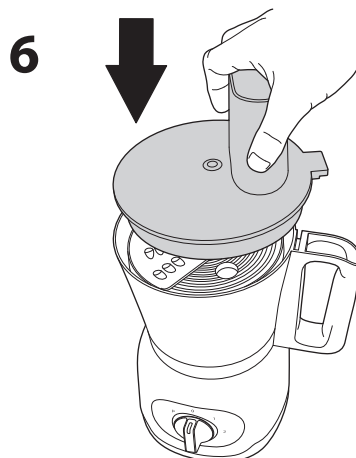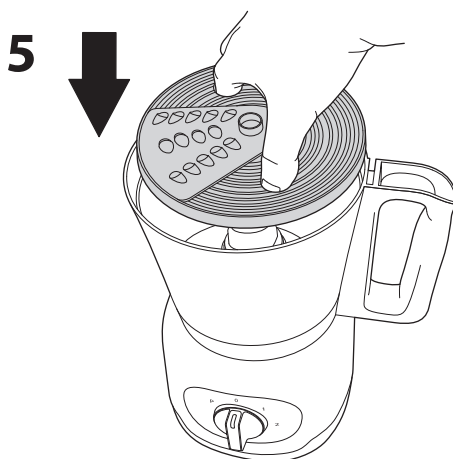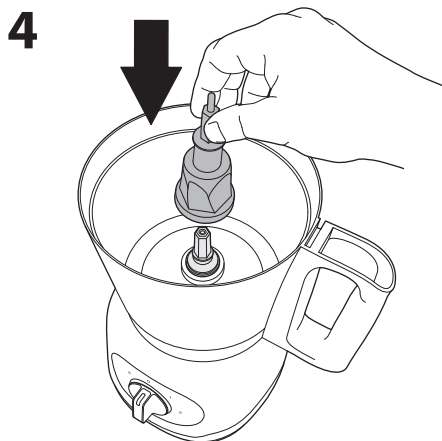

- 7.** Rotate the lid clockwise until it locks in place.

Ensure the tab on the lid is aligned with the top of the bowl handle.

- 8.** Wash the ingredients if required and cut into sections that will easily fit into the feeder tube on the lid.

- 9.** Slot the plug on the food processor into a mains socket and switch the power on.

Choose the speed that you wish to process your food at:


P - Pulse: This automatically will switch to **0** (off) when released.

1 - Low speed: Coarsely chopped.


2 - High speed: Finely chopped.

0 - Off: Blades stop spinning.


7

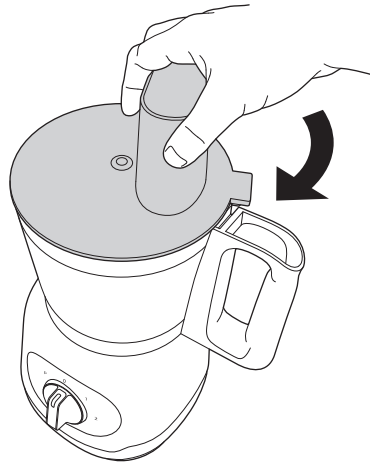

8

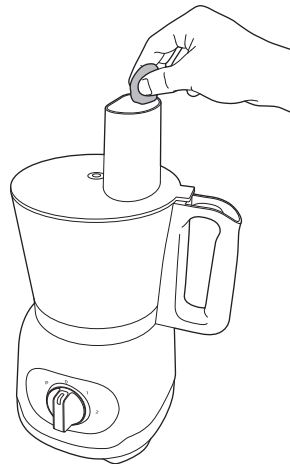

9

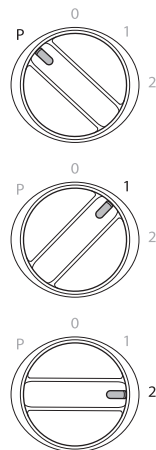


10. With the cutter turning push down on the ingredients using the plunger.


11. When you have finished cutting or grating the ingredients, turn the food processor off and remove the plug from the mains socket. Twist the lid anti-clockwise to unlock it.

12. Lift the lid upwards off the top of the bowl.


10

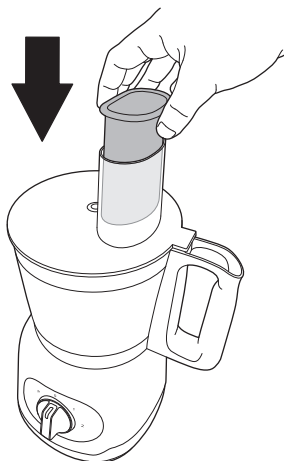

11

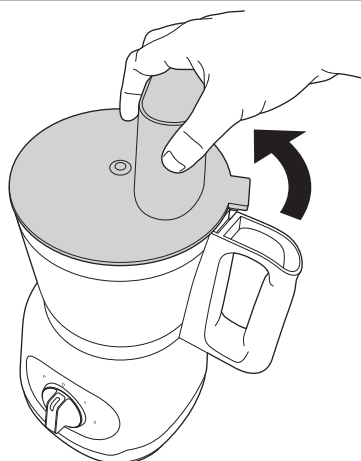

12

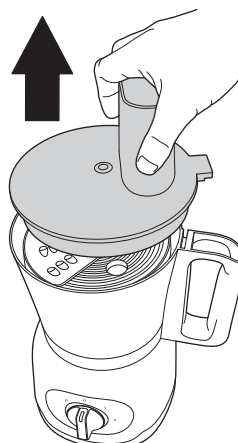


13. Lift the cutter disc and drive shaft out of the bowl and separate.

14. Push the cutter plate out of the gap in the cutter disc.


15. Carefully wash the bowl, cutter disc, driveshaft and cutter in warm soapy water then dry thoroughly.

IMPORTANT: Wash the cutter attachments very carefully as the blades are very sharp.


13

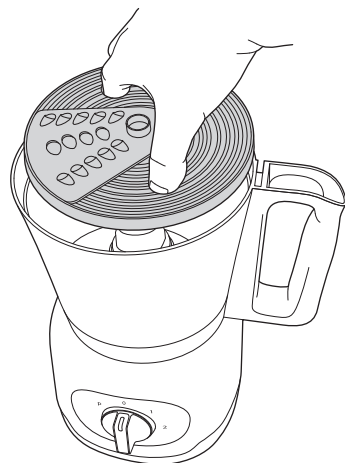

14

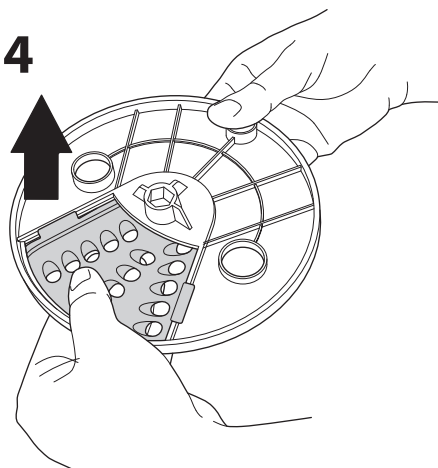

15

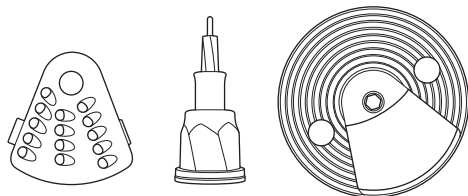

Cleaning and maintenance

- Before cleaning your food processor always ensure the plug is removed from the power socket.
- The food processor should never be run with nothing in it, as this may damage the motor.
- Hot or boiling liquids should not be added to the food processor.
- Do not immerse the base, power cord or plug in water or any other liquid.
- All items supplied with your food processor, apart from the electrical components (base, cord, plug), can be washed in warm soapy water.
- Never place any part of the fittings supplied with your food processor in a dishwasher as this could damage them.
- The base can be cleaned using a damp cloth.
- Do not use any abrasive cleaners or materials to clean any part of the food processor as it may damage the finish of the product.
- Never attempt to dry any part of the food processor by placing it near a source of high heat, such as a cooker or radiator. Always allow the food processor to dry naturally after wiping with a dry cloth.

Troubleshooting

PROBLEM	REASON	SOLUTION
You have plugged the unit in, switched the power on, selected a cutting speed, but the unit does not work.	The safety lock on the bowl lid is not fully locked. The bowl is not fully locked onto the base.	Check the safety lock on the bowl lid. Check the bowl is locked onto the base.
The blades or cutters are not working normally.	There is too much food inside the bowl.	Reduce the quantity of food inside the bowl.
The unit stops suddenly whilst in use.	The safety locks on the bowl are not fully engaged.	Check the safety lock on the bowl lid. Check the bowl is locked onto the base.
The bowl overflows whilst in use.	There is too much food inside the bowl. The unit is not on a stable and level surface.	Reduce the quantity of food inside the bowl. Place the unit on a stable and level surface.



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

Need something else?
www.GEORGE.com

We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number



ASDA
technical support
0333 600 7700

Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product name.

Call

0800 952 0101

Write

ASDA, Leeds LS11 5AD

Product name: **GFP101B-21 Food processor**

Product site code: **15A.09.22.207A**



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

Copyright

© 2023 ASDA Stores Limited.
All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.
Manufactured for:
ASDA, Leeds LS11 5AD/
ASDA, Antrim BT41 4GY.

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

