 




George.
home

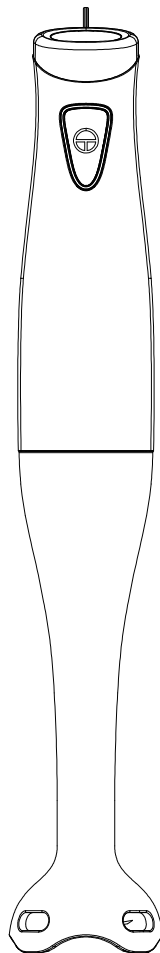

GHB301W-21 HAND BLENDER

User Guide

220-240V~, 50-60Hz, 250W

IMPORTANT: RETAIN FOR FUTURE REFERENCE







About this guide

We've written this manual to help you get the most from your hand blender. Please keep it for future reference.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATION PRECAUTIONS YOU SHOULD BE AWARE OF.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. Only use this appliance for the intended use. The appliance is not suitable for commercial use. This appliance is only for household and indoor use.
3. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
5. Children shall not play with the appliance.
6. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
8. Before connecting the hand blender to the power, check the voltage shown on the appliance corresponds with the voltage in your home. If it doesn't, contact your local store.
9. Do not use if the appliance, cord or plug is damaged.





 
10. The cord shouldn't hang over the edge of a table or counter, or touch a hot surface.
11. Remove all packaging prior to use. Inspect the product for any damage before use. If damage is found, notify ASDA to exchange the product.
12. Keep away from harsh or abrasive cleaning agents or solvents.
13. Do not use attachments not recommended by the manufacturer.
14. Misuse may lead to injury. Don't use the blender for anything other than its intended use.
15. Please don't dismantle. If a fault occurs have the blender inspected in a qualified repair shop or return to us at ASDA.
16. To avoid fire, electric shock, or injury, never immerse the blender, cord, or plug in water or liquid. Do not use with wet hands.
17. Keep fingers, hair, clothing and utensils away from all moving parts. Only use a scraper when the appliance is not in use.
18. Never leave unattended when in use.
19. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
20. Care should be taken when handling the sharp cutting blades and during cleaning.
21. Never add ingredients when the blender is in use, or before the blades come to a complete stop.
22. When making food for babies or the elderly, ensure the blender is properly sterilised before use.
23. Do not use with boiling liquids or hot fat as splashes may result in scolding and burns.
24. Do not operate the blender for longer than 15 seconds if the blade is not submerged in liquid/ingredients. When blending, do not operate continuously for more than 1 minute. Allow a minimum of 3 minutes rest time between blending cycles to avoid motor damage. Always allow the motor to cool to room temperature before continuing to use.
25. Do not operate when the container is empty, as this can cause damage.
26. Do not blend too hard ingredients as it may damage the blade and motor.
27. The power consumption was 0.23 W in the off mode.






You should have

Blender handle and shaft

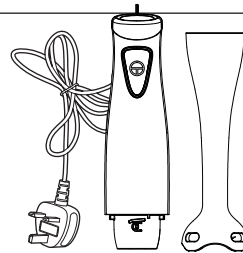

How to...

 ...recognise the parts of your hand blender

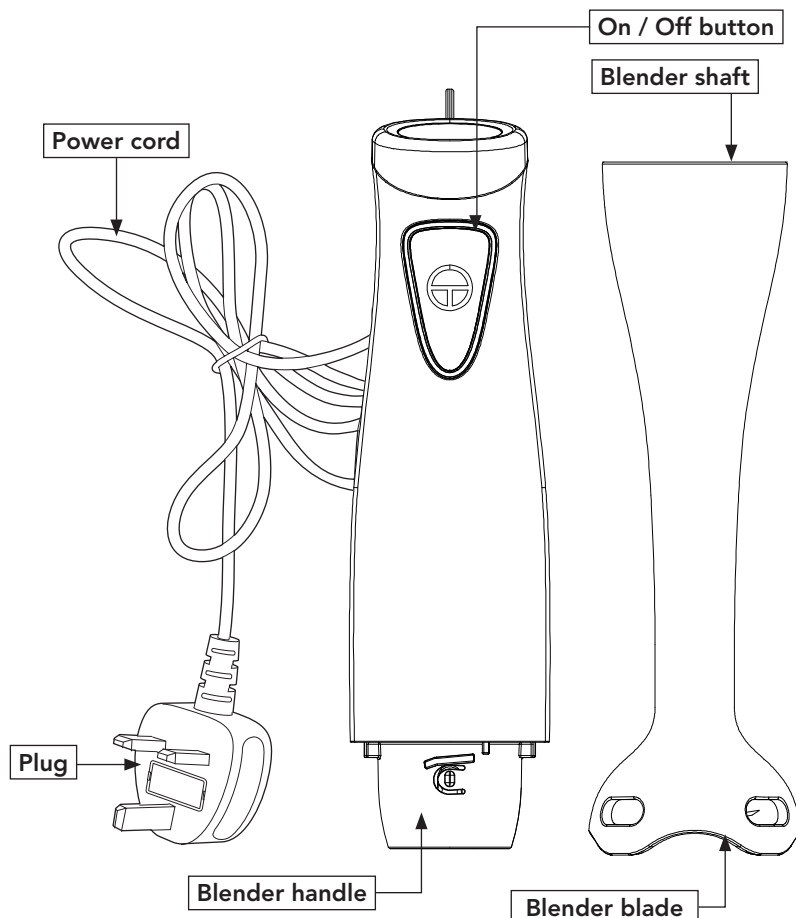




How to...

...assemble your hand blender

1. Wash the blender shaft in warm soapy water, being careful of the blades.

 
It's important to never wash the blender handle as this houses electrical components, like the motor.

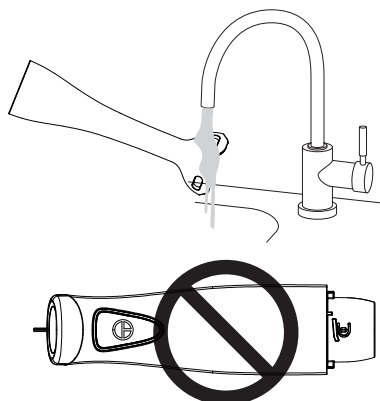

2. Align the arrow (▼) symbol on blender handle with the 🔓 on the blender shaft. Then push the two sections together and rotate the blender shaft clockwise so the arrow aligns with the 🔒 on the blender shaft.

The blender is now fully assembled and ready for use.

 To take the blender apart, simply reverse the assembly procedure (blender should not be taken apart when switched on or plugged in).

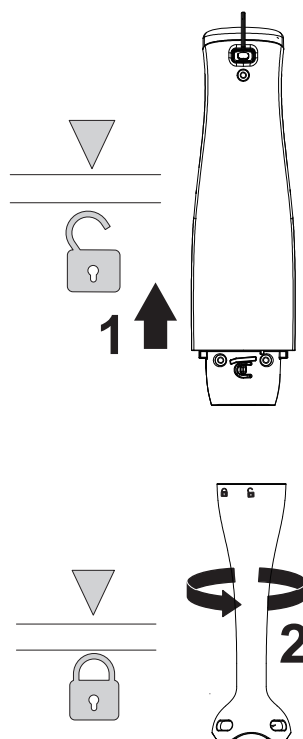




How to...

...use your hand blender

This blender can be used for fluids (e.g. dairy products, sauces, fruit juices, soups, drinks and shakes), soft ingredients (e.g. pancake batter or mayonnaise), or puréeing cooked foods (e.g. for making baby food).


Banana milkshake: banana 280g, milk 420g.

 1. Slot the plug into the wall socket and switch the power on.

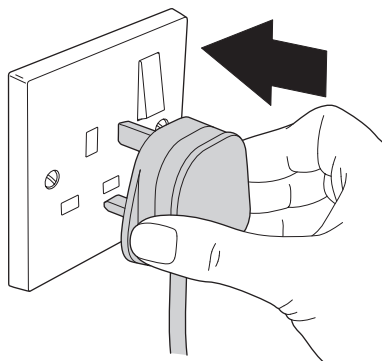

2. Place the food/liquid in a jug (not included). Leave a gap of at least 5cm to the top of the jug to allow space for blending.

 
3. Immerse the blade and shaft section of the blender fully into the ingredients in the jug.

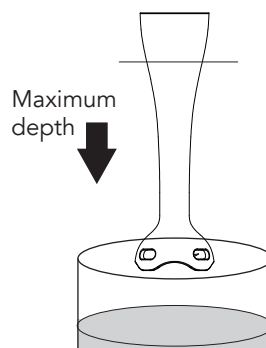



4. Turn on the blender by pressing and holding the power on/off button on the main handle of the blender. To switch off the blender simply remove your finger off the power button. Blend the ingredients by moving the blender up and down slowly or in a circular motion slowly.

 NOTE: Remember to only run the blender with load continuously for a maximum of 1 minute at a time. If the blender handle becomes hot, turn off and allow it to cool to room temperature.

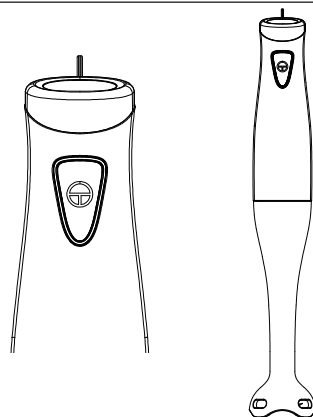

How to...

...clean your hand blender

Make sure the hand blender is switched off and disconnected from the power.

1. Carefully remove the blender shaft from the handle, beware of the sharp blade.
2. Wash the shaft in warm, soapy water and rinse under a hot tap.
3. The blender handle can only be wiped with a damp cloth.
4. Dry all parts thoroughly before storing.

 




How to...

...change the fuse

1. Only use a 3 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

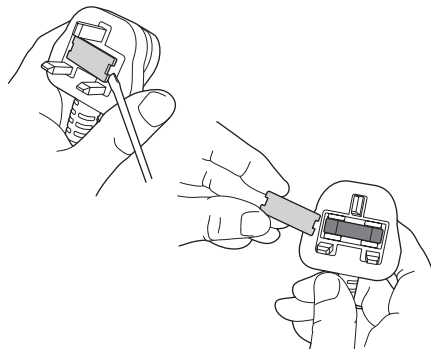



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.
UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described. Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.



We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number



Customer services information

If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

Call

0800 952 0101

Write

ASDA, Leeds LS11 5AD

Product name: **GHB301W-21 HAND BLENDER**

Product site code: **15A.09.22.205**







To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

Copyright

© 2023 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA, Leeds LS11 5AD/ ASDA, Antrim BT41 4GY

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

