 


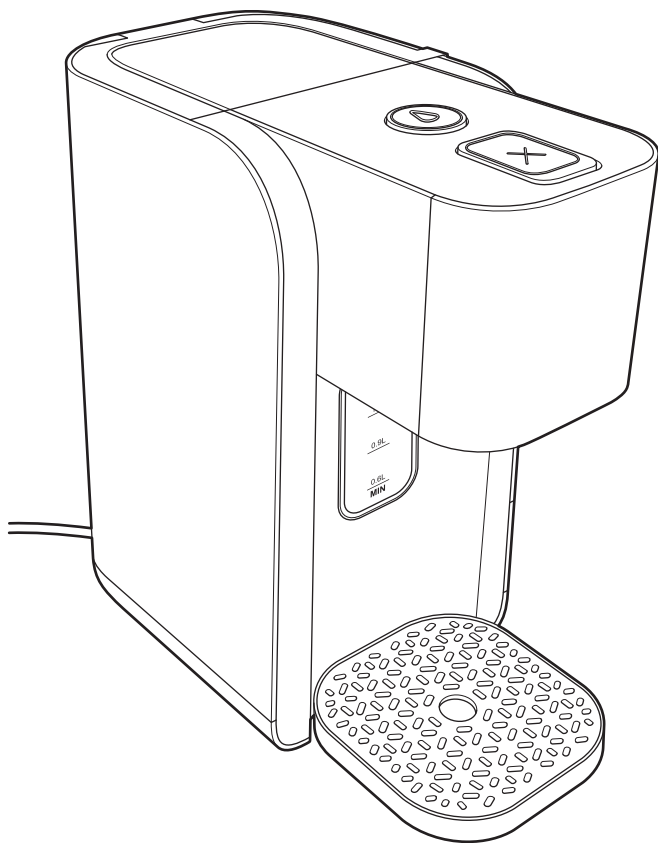

GHWD-22

Hot water dispenser

User Guide

220-240V~50-60Hz 1850-2200W

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We've written this manual to help you get the most from your hot water dispenser. Please keep hold of it for future reference.

WARNINGS:

 
THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATION PRECAUTIONS YOU SHOULD BE AWARE OF.

CAUTION. RISK OF SCALDING. DO NOT OPEN LID WHILST HOT WATER DISPENSER IS HOT. BE CAREFUL WHEN HOT WATER IS DISPENSING FROM YOUR HOT WATER DISPENSER AS THIS CAN RESULT IN INJURY.


1. Read all instructions before using.
2. Before connecting the hot water dispenser to the power supply, check and make sure that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the hot water dispenser.
3. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
5. Do not place on or near a hot gas or electric burner or in a heated oven.
6. Do not operate the appliance without any water in it to avoid damaging the heating elements.
7. Ensure that the hot water dispenser is used on a firm and flat surface, this will prevent the hot water dispenser from overturning and avoid any damage or injury.
8. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or hot water dispenser in water or other liquids.
9. While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
10. Do not open the lid when the water is being heated.
11. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
12. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
13. Keep the appliance and its cord out of reach of children aged less than 8 years.

- 14.** Children shall not play with the appliance.
- 15.** Do not touch the hot surface. Use the handle or the button.
- 16.** The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- 17.** Unplug the hot water dispenser from the outlet when not in use and before cleaning. Allow the hot water dispenser to cool before putting on or taking off parts, and before cleaning the appliance.
- 18.** To disconnect, press the stop button, then remove plug from wall outlet.
- 19.** Do not use the appliance for other than intended use.
- 20.** This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- 21.** Save these instructions.
- 22.** Never fill the hot water dispenser above the MAX marking. If the hot water dispenser is overfilled, the water will leak from the dispensing spout and boiling water may be ejected.
- 23.** Always make sure that hands are dry before handling the plug or switching on the hot water dispenser.
- 24.** Do not use this hot water dispenser if it has been dropped or any visible signs of damage or it is leaking.
- 25.** Never leave the hot water dispenser unattended when in use.
- 26.** Beware of steam coming from the dispensing spout or lid especially during refilling. Never open the lid during the boiling cycle.
- 27.** Never use the hot water dispenser without sufficient water and make sure the water level is between the MIN and MAX markers for it to operate correctly.
- 28.** Always make sure a cup or suitable container is placed below the dispensing spout when operating the hot water dispenser.
- 29.** Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.
- 30.** WARNING! Avoid spillage on the connector or the contact base.
- 31.** Regarding the instructions for cleaning surfaces in contact with food, please refer to chapter "Cleaning and maintenance".
- 32.** WARNING! Misuse may lead to injury.
- 33.** WARNING! The heating element surface is subject to residual heat after use.
- 34.** This appliance is not intended to heating liquid other than water.
- 35.** The power consumption was 0 W in the off mode.

What's in the box

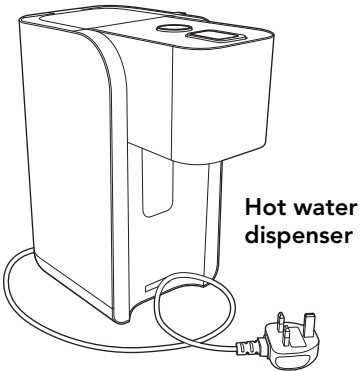

Features

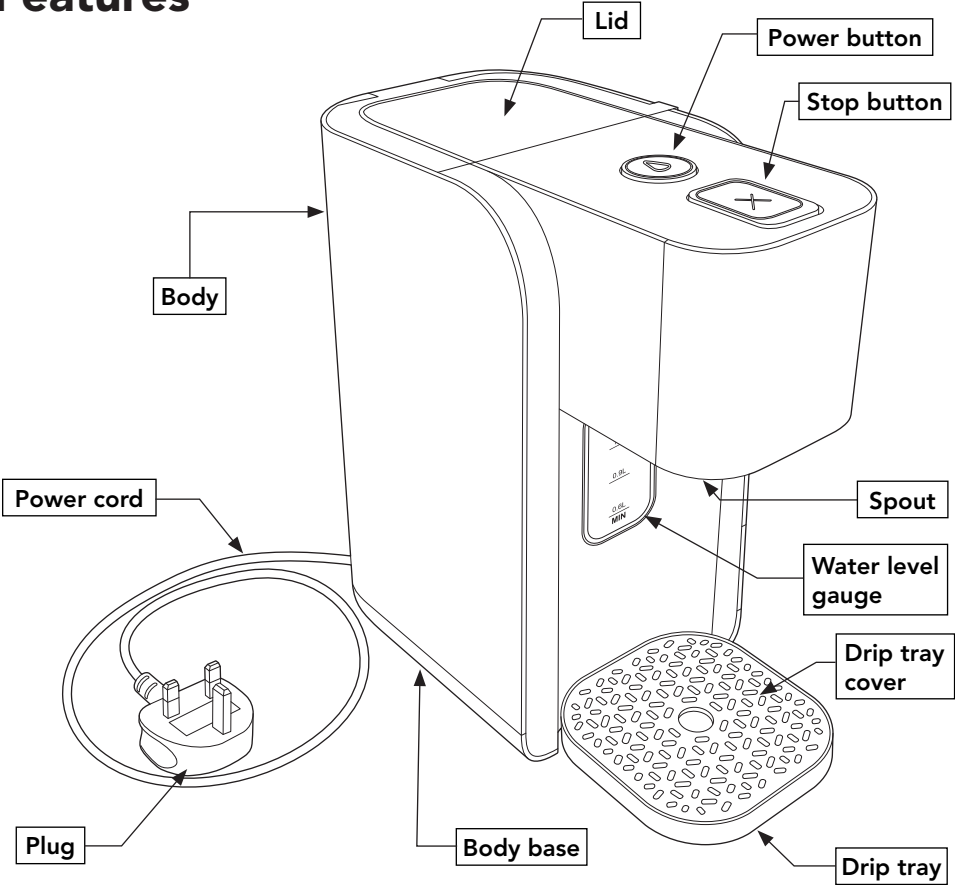 

Important:

 
If you're using the hot water dispenser for the first time, we recommend cleaning before use by boiling and discarding the full tank of water twice. Then simply wipe the surface down with a damp cloth.

If you accidentally boil the hot water dispenser when it's empty, the Hot water dispenser will switch off automatically. This hot water dispenser is protected from overheating. If this happens, remove the plug from the mains supply and allow the hot water dispenser to cool for 40-60 minutes before filling it with cold water and re-boiling.

You can shut off the power whilst the hot water dispenser is boiling by pressing the stop button.

Using your hot water dispenser


1. Place the hot water dispenser on a flat, level, heat resistant surface, within easy reach of a power socket.

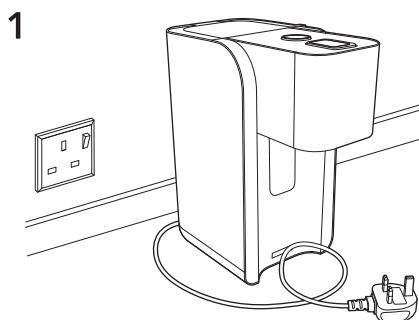


2. Slot the drip tray onto the front of the hot water dispenser.

Push the tab on the back of the drip tray into the hole in the front of the hot water dispenser body (a).

 Push the drip tray down to lock in place (b).

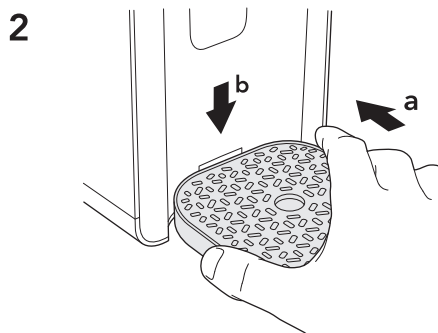

 
3. Lift the lid on the top of the hot water dispenser upwards until it is fully open.

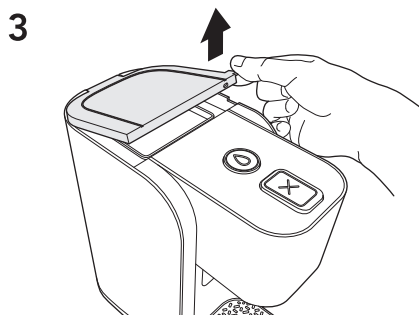

4. Fill the water tank using a jug or cup then close the lid.

IMPORTANT: Always ensure the lid is correctly closed before using the hot water dispenser.

 4

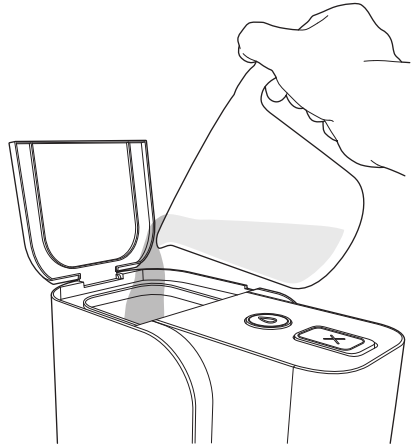


5. **IMPORTANT:** The water level MUST be within the MIN and the MAX level.

If there is not sufficient water in the hot water dispenser, it may still work and a small amount of water can come out of the dispensing spout. This is a reminder you should add the water into the water tank.

If this hot water dispenser switches off automatically before the water boils due to insufficient water in the hot water dispenser, this is quite normal and it is a safety feature and not a fault.

 
5

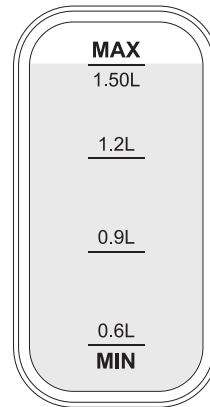

6. Place a cup on the drip tray so that it is directly below the spout.


IMPORTANT: Never operate the hot water dispenser without a cup placed below the dispensing spout. The cup must be able to hold 275ml of water at least.

 6

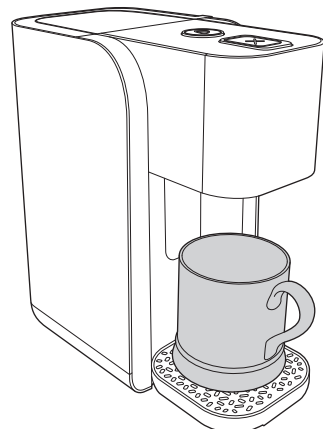

7. Plug the hot water dispenser into a mains socket and turn the power on if required.

 
IMPORTANT: Close the lid and press the stop button before plugging in. This can make sure the hot water dispenser will not start a boil cycle immediately when you plug the hot water dispenser into the socket.

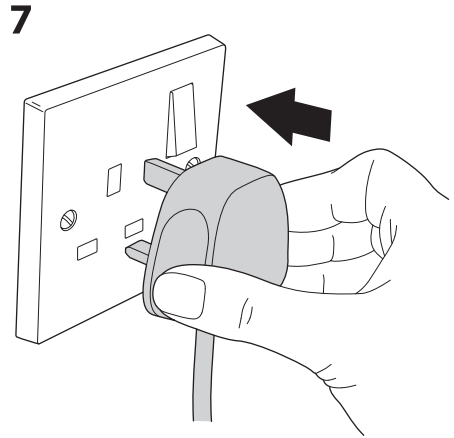

8. Press the **POWER** button on top of the hot water dispenser to start the boiling process.

When you press the **POWER** button the water tank will be illuminate.

 
If you want to stop the boiling process before the water has boiled, press the **STOP** button.

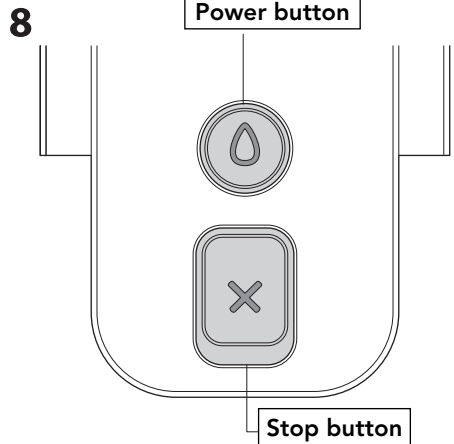

9. After the water has boiled, the hot water will be dispensed from the spout into the cup.

WARNING: The water coming out of the spout will be very hot, handle with care and never touch the water to prevent scalds.

 IMPORTANT: Always leave the hot water dispenser for 30 seconds between two continuous water-boiling cycles and leave for 5 minutes between two full tanks of water boiling.

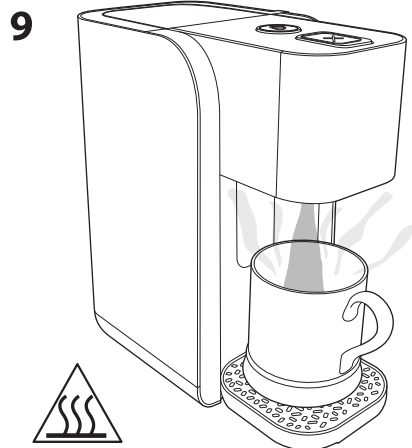

Emptying your hot water dispenser

Switch the hot water dispenser off and unplug from the mains socket, and make sure the hot water dispenser is cooled down to the room temperature completely before emptying your hot water dispenser.

1. Lift the lid on the top of the hot water dispenser upwards until it is fully open.
2. Hold your hot water dispenser over a sink and pour the water out.
3. Keep holding your hot water dispenser over the sink and turn it the right way up and allow any water to drain out of the dispensing spout.
4. Repeat steps 2 and 3 for several times until all the water has been emptied from your hot water dispenser.
5. If your hot water dispenser will not be used for a long period, we recommend emptying it first. Before using again boil and discard a full tank of water twice.

Cleaning and maintenance

Switch the hot water dispenser off and unplug from the mains socket. Always allow the hot water dispenser to cool down before cleaning or performing any maintenance.

1. **NEVER** immerse the body of the hot water dispenser in water or any other liquid.
2. Wipe the exterior with a damp cloth and a mild detergent.

CAUTION: NEVER use abrasive cleaning agents such as steel wool, scouring cleaning agents etc. to prevent damaging the surface of your hot water dispenser.

3. Empty the drip tray if it is full of water. Remove the drip tray from the bottom of the hot water dispenser and remove the drip tray cover.
4. Clean the drip tray and its cover using a mild detergent and a soft cloth. Assemble the drip tray and attach it to the bottom of the hot water dispenser as shown on page 5.

Descaling your hot water dispenser

Your hot water dispenser should be periodically de-scaled as the mineral deposits in tap water may form scale within this product and cause the hot water dispenser to operate less efficiently.

You can use a commercially available de-scaling agent and follow the instructions on the packaging. Alternatively, you can follow the instructions below using white vinegar.

1. Fill the hot water dispenser with 300ml of white vinegar, then add water to the MIN level.
2. Leave the solution in the hot water dispenser overnight.
3. Pour the contents of the hot water dispenser down the sink refer to 'Emptying your hot water dispenser' section, then fill the hot water dispenser to the MAX mark with clean water.
4. Boil the hot water dispenser and discard the water.
5. Repeat the boil process several times until the odour of the vinegar has been flushed away.
6. Any stains left inside the hot water dispenser can be removed by rubbing with a damp cloth.

Boil-dry protection

If you accidentally let the hot water dispenser operate without water, the boil dry protection will switch off the power automatically. This hot water dispenser is protected from overheating. If this happens, remove the plug from the mains supply and allow the hot water dispenser to cool for 40-60 minutes before filling it with cold water and re-boiling.

Notes



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.



We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number



Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product name.

Call

0800 952 0101

Write

ASDA, Leeds LS11 5AD

Product name: **GHWD-22 Hot Water Dispenser**

Product site code: **15A.09.22.225**



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

Copyright

© 2023 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA, Leeds LS11 5AD/

ASDA, Antrim BT41 4GY.

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

