145mm 145mm



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled. If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

- **EXCLUSIONS** ASDA shall not be liable to replace goods under the terms of the warranty where:
- 1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power
- surges or damage caused in transit. 2. The appliance has been used on a voltage supply other than that described on the product rating label.
- 3. Repairs have been attempted by persons other than our service staff (or authorised dealer) 4. Where the appliance has been used for hire purposes or
- 5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer. If for any reason this item is replaced during the 2 year warranty

period, the warranty on the new item will be calculated from

original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

#### Copyright

10mm

© 2022 ASDA Stores Limited. All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice. ASDA, Leeds LS11 5AD/ASDA, Antrim BT41 4GY Disposal

your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. For more information, please contact the local authority or your retailer ourchased the product.

# home



#### **GJK502SS-22 Stainless Steel Kettle**

User Guide


220-240V~50-60Hz, 1850-2200W


IMPORTANT: RETAIN FOR FUTURE REFERENCE

- 7. ASDA does not recommend allowing children to operate this
- 8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons
- Before connecting the kettle to the power, check the voltage shown on the appliance base corresponds with the voltage in your home. If it doesn't, contact your dealer and don't use
- 10. If the kettle is overfilled, boiling water may be ejected.
- containing hot water.
- cleaning. Allow to cool.
- base for any other purpose.
- handle and don't touch the body (as this can get very hot).
- 16. The cord shouldn't hang over the edge of a table or counter,
- 17. Keep away from hot gas and electrical burners.
- 18. Remove all packaging prior to use. Inspect the product for any damage before use. If damage is found, notify ASDA to
- 19. Keep away from harsh or abrasive cleaning agents or
- manufacturer.

knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- 6. Children shall not play with the appliance.
- in order to avoid a hazard.
- 11. Extreme caution must be used when moving an appliance
- 12. Always disconnect the kettle when not in use and before
- 13. Only use the kettle with the base provided. Do not use the
- 14. When pouring, don't tip the kettle too fast. Always use the
- 15. This appliance is not intended to heat liquid other than water.
- or touch a hot surface.
- exchange the product.
- 20. Do not use attachments not recommended by the

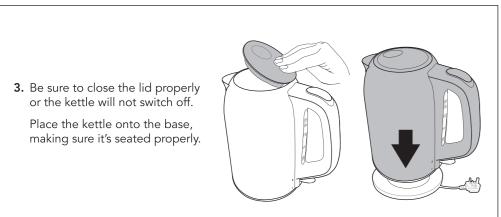

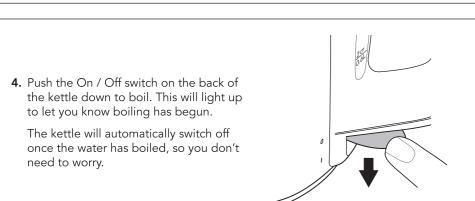

#### How to...

...de-scale your kettle

Your kettle should be de-scaled regularly, depending on how often you use it and how hard your water is. Excessive scale can cause the kettle to switch off before boiling and may damage the elements, affecting your warranty.


To de-scale, simply purchase an all-purpose de-scaling product suitable for your kettle and follow the instructions on the pack. Ensure the electric connections are completely dry before using the kettle.

### You should have Kettle & power base



### How to...

...recognise the parts of your kettle

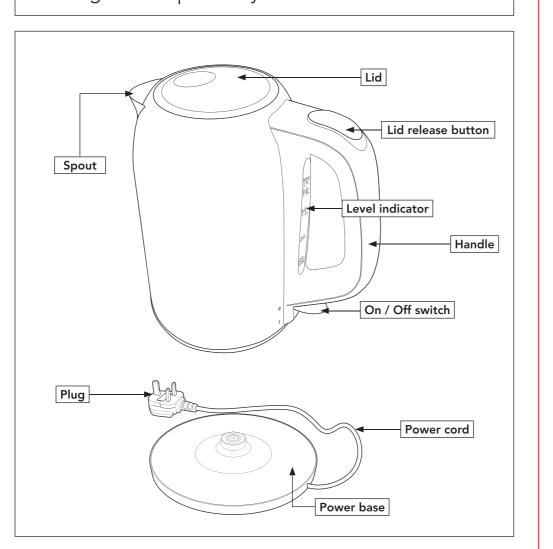

## About this guide

We're here to help you get the most from your kettle, so please keep hold of this manual for future reference.

#### **WARNINGS:**

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATION PRECAUTIONS YOU SHOULD BE AWARE OF.

CAUTION. RISK OF SCALDING. DO NOT OPEN LID WHILST KETTLE IS HOT. BE CAREFUL WHEN POURING BOILING WATER FROM YOUR KETTLE AS THIS CAN RESULT IN INJURY. ENSURE THE SWITCH IS NOT OBSTRUCTED OR THE KETTLE WILL NOT SWITCH OFF.

- 1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
- 2. For household use only. Not for use outdoors.
- 3. This appliance is only suitable for domestic use and is not designed for commercial purposes.
- 4. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- 5. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund. UK Mainland stores only.

furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described. Also excludes mattresses, which can't be returned for

Excludes franchises.

The guarantee excludes flat pack

hygiene reasons once used, unless faulty or mis-described.



ASDA4 echnical suppo 0333 600 7700

**Customer services information** If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

0800 952 0101 ASDA, Leeds LS11 5AD.

e: GJK502SS-22 Stainless Steel Kettle ct site code: **15A.09.22.179** 

21. Don't use the kettle for anything other than its intended use. 22. Please don't dismantle. If a fault occurs have the kettle

- inspected in a qualified repair shop or return to us at ASDA. 23. To avoid fire, electric shock, or injury, never immerse the kettle, cord or plug in water or liquid. Do not use with wet hands.
- 24. Always make sure the lid is closed while the kettle is boiling and avoid contact with the steam coming from the spout.
- 25. Always place on a firm, level surface, out of reach of children.
- 26. Be careful when refilling an already hot kettle. 27. Avoid boiling without water as this can damage the heating
- 28. WARNING! Avoid spillage on the connector.
- 29. Regarding the instructions for cleaning surfaces, please refer
- to the chapter "How to... clean the kettle". 30. WARNING! Misuse may lead to injury.
- 31. WARNING! The heating element surface is subject to residual heat after use.
- 32. Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.
- 33. The power consumption is 0 W in the off mode. The period after which the equipment reaches automatically off mode is less than 1 min.

### How to...

.clean the filter


Make sure the device is disconnected from the power outlet, and the kettle is empty

1. To clean the filter, remove it by

simply pulling the lip of the filter upwards and out of its housing.

**3.** Refit the filter by sliding it back into

its housing until it pushes home.

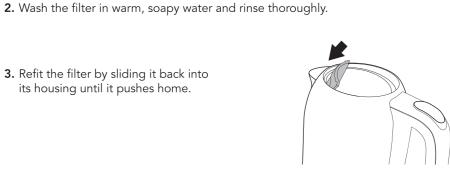


## How to...

..clean the kettle


Make sure the device is disconnected from the power outlet, and the kettle is empty To clean the kettle body, simply wipe with a damp cloth (do not use abrasive cleaners).

### How to...


...plug the power base in

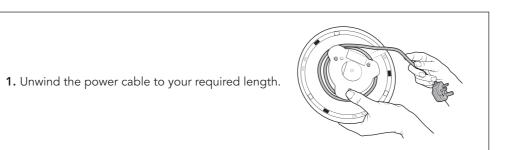

2. Fit the power cable firmly into the base slot so it's stable.

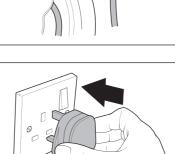

3. Pop the plug into an electrical socket and turn the power on.

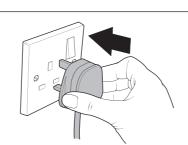

### How to...

..use the kettle


Please note If you're using the kettle for the first time, we recommend cleaning before use by

boiling and discarding a full kettle of water twice. Then simply wipe the surface down with a damp cloth. If you accidentally boil the kettle when it's empty, the kettle will switch off automatically. If this happens, allow the kettle to cool before filling it with cold water and re-boiling. You can shut off the power whilst the kettle is boiling by pushing the on/off switch up.

1. Push the lid release button on the top of the handle downwards and the lid Then fill the kettle with water to your desired level.

Take care not to exceed the MAX fill

level on the water gauge.

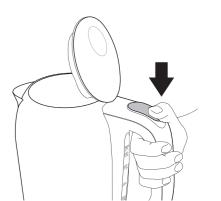

**2.** The inside of your kettle is equipped with a '1 CUP' indicator. If you only wish to boil enough water for one cup, please fill your kettle with water to just above this level. Filling the kettle below the one cup mark can overheat the elements and cause damage.

