



70克双胶,黑白印刷,骑马钉

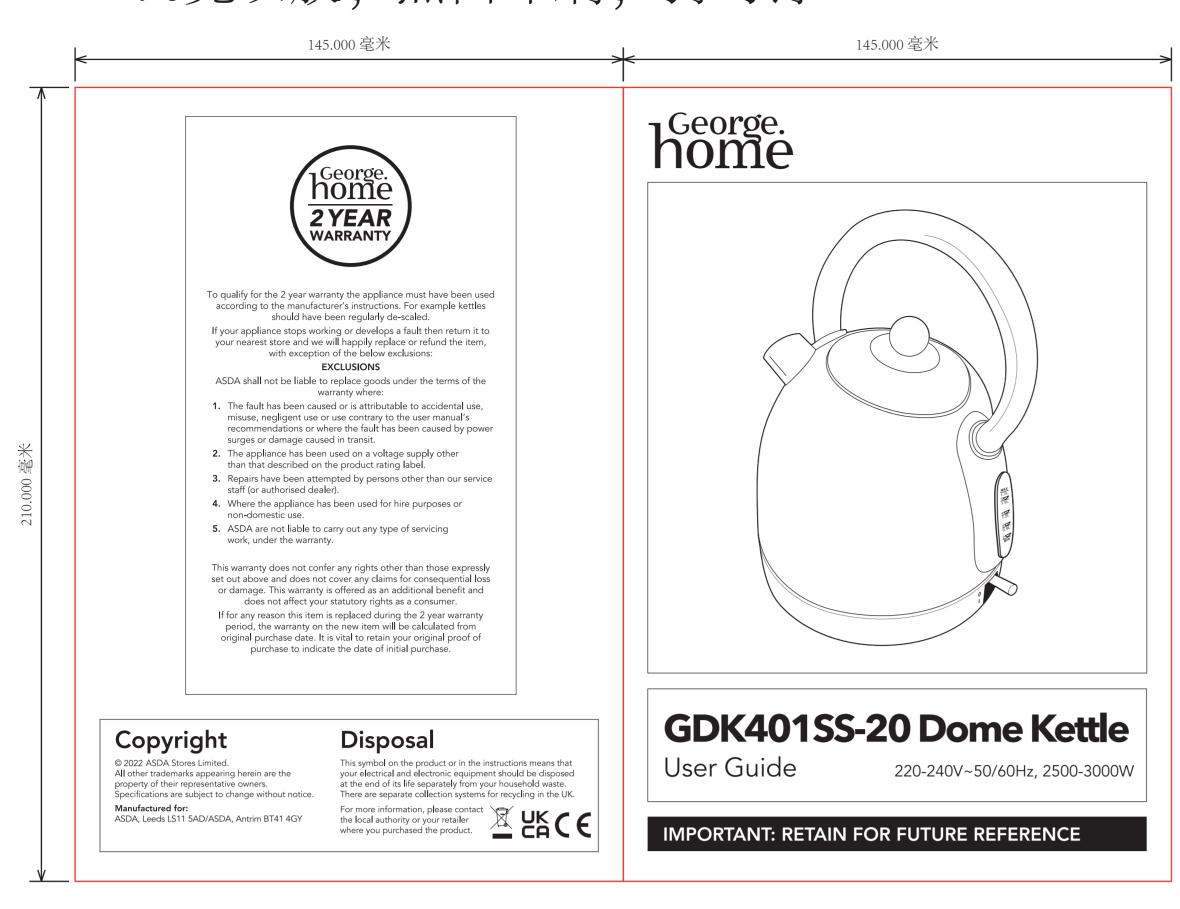

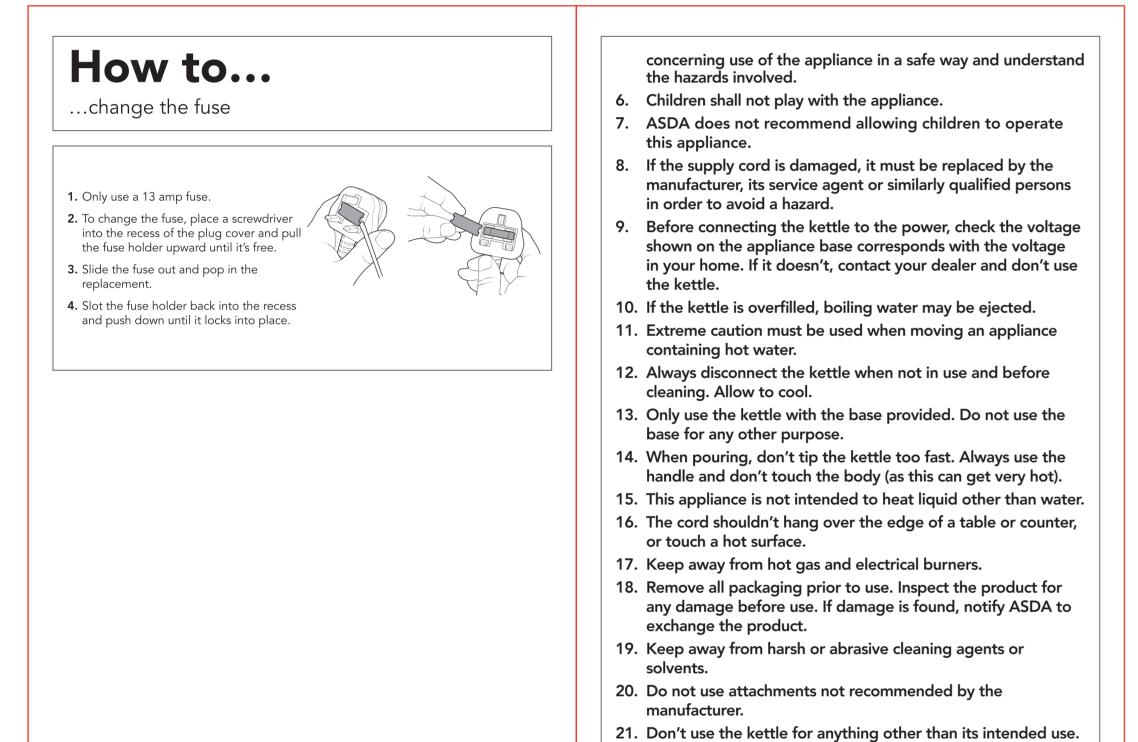

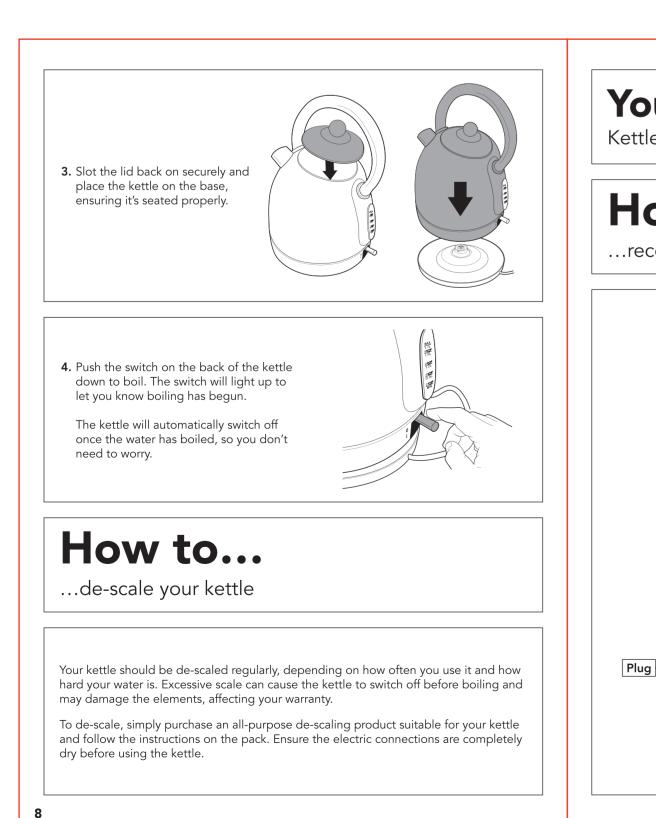

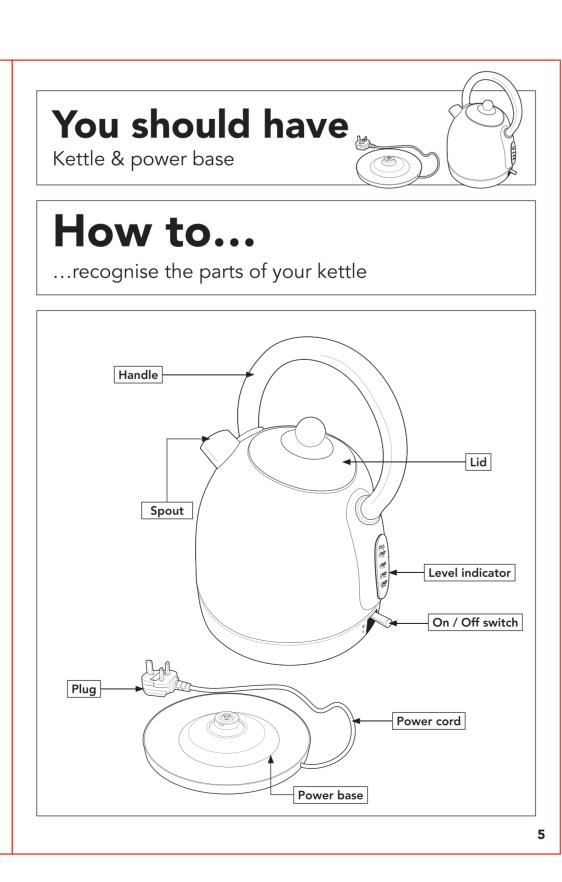

About this guide

We're here to help you get the most from your kettle, so please keep hold of this manual for future reference.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATION PRECAUTIONS YOU SHOULD BE AWARE OF.

CAUTION. RISK OF SCALDING. DO NOT OPEN LID WHILST KETTLE IS HOT. BE CAREFUL WHEN POURING BOILING WATER FROM YOUR KETTLE AS THIS CAN RESULT IN INJURY. ENSURE THE SWITCH IS NOT OBSTRUCTED OR THE KETTLE WILL NOT SWITCH OFF.

- 1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
- 2. For household use only. Not for use outdoors.
- 3. This appliance is only suitable for domestic use and is not designed for commercial purposes.
- 4. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully

assembled unless faulty or mis-described. Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

Need something else? www.GEORGE.com We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number

0333 600 7700

Customer services information

If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

0800 952 0101 WriteASDA, Leeds LS11 5AD.

Product site code: 15A.09.22.180

11

22. Please don't dismantle. If a fault occurs have the kettle

- inspected in a qualified repair shop or return to us at ASDA.23. To avoid fire, electric shock, or injury, never immerse the kettle, cord or plug in water or liquid. Do not use with wet hands.
- 24. Always make sure the lid is closed while the kettle is boiling and avoid contact with the steam coming from the spout.
- 25. Always place on a firm, level surface, out of reach of children.
- 26. Be careful when refilling an already hot kettle.27. Avoid boiling without water as this can damage the heating
- elements.
- 28. WARNING! Avoid spillage on the connector.29. Regarding the instructions for cleaning surfaces, please refer
- to chapter "How to clean the kettle".

 30. WARNING! Misuse may lead to injury.
- 31. WARNING! The heating element surface is subject to residual heat after use.
- heat atter use.

 32. WARNING! Position the lid so that steam is directed away
- from the handle.

 33. WARNING! Do not remove the lid while the water is boiling.
- 34. Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.
- 35. The power consumption is 0 W in the off mode.

 The period after which the equipment reaches automatically off mode is less than 1 min.

How to...

...clean the filter

Make sure the device is disconnected from the power outlet, and the kettle is empty and completely cool.

- The filter can be seen when you look inside the spout.
- 1. Remove the filter by simply inserting your finger into the spout and pushing the filter through so it falls into the kettle.
- 2. Lift the filter out of the kettle then wash the filter in warm, soapy water and rinse thoroughly.
- **3.** Refit the filter by placing it back inside the spout from the inside of the kettle. There is a rubber seal around the filter so it will just squeeze into place until the 4 outer lugs stop the filter going any further.

How to...

...clean the kettle


Make sure the device is disconnected from the power outlet, and the kettle is empty and completely cool.

To clean the kettle body, simply wipe with a damp cloth (do not use abrasive cleaners).


How to...

..plug the power base in


Unwind the power cable to your required length.

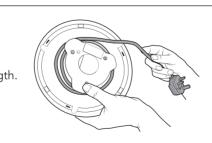

2. Fit the power cable firmly into the base slot so it's stable.

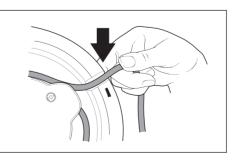

3. Pop the plug into an electrical socket and turn the power on.

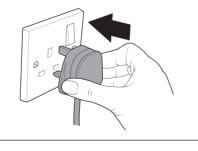

How to...

...use the kettle

Please note

If you're using the kettle for the first time, we recommend cleaning before use by boiling and discarding a full kettle of water twice. Then simply wipe the surface down with a damp cloth.

If you accidentally boil the kettle when it's empty, the kettle will switch off automatically. If this happens, allow the kettle to cool before filling it with cold water and re-boiling. You can shut off the power whilst the kettle is boiling by pushing the on/off switch up.

 Lift the lid off the top of the kettle and fill to your desired level.
 Do not exceed the MAX marker on the

water gauge.

2. If you're filling a kettle after it has been boiled,

be cautious of steam emitted from the kettle.

