 


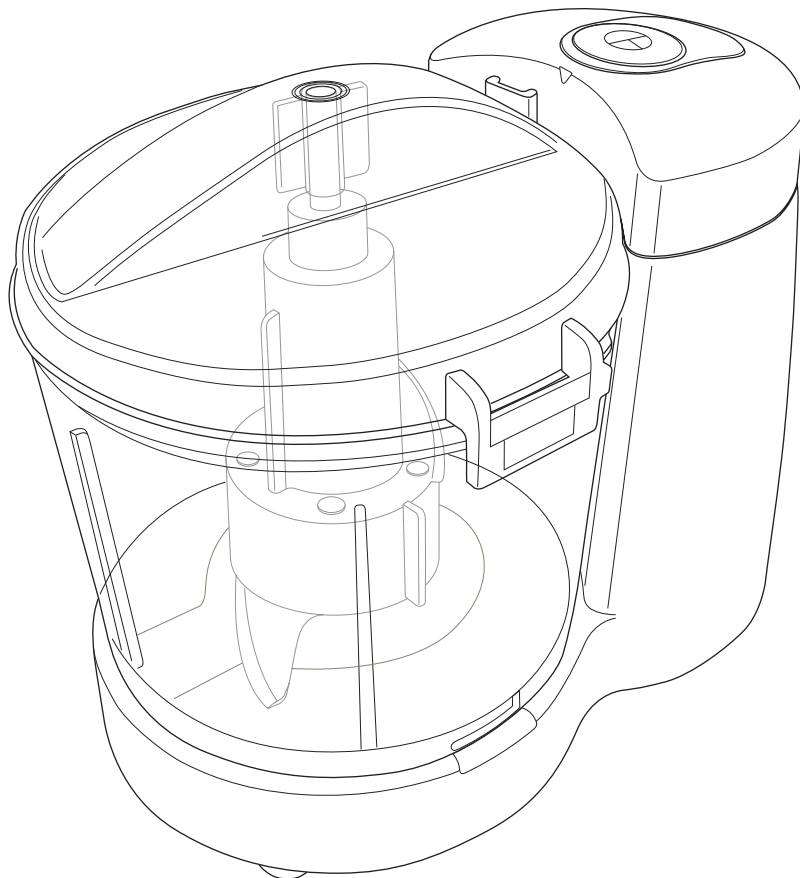

GMC201W-18 Mini chopper

User Guide

220-240V~50/60Hz, 120W

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We're here to help you get the most from your mini chopper, so please keep hold of this manual for future use.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATION PRECAUTIONS YOU SHOULD BE AWARE OF.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
3. Do not use if the appliance, cord or plug is damaged.
4. Before connecting the mini chopper to the power, check the voltage shown on the appliance corresponds with the voltage for the mains supply of the country you are in. If it doesn't, contact your local store.
5. To avoid fire, electric shock, or injury, never immerse the mini chopper, cord, or plug in water or liquid. Do not use with wet hands.
6. Please don't dismantle. If a fault occurs, have the mini chopper inspected in a qualified repair shop or return to us at ASDA.
7. Remove all packaging prior to use. Inspect the product for any damage before use. If damage is found, notify ASDA to exchange the product.
8. This appliance is only suitable for domestic use and it is not designed for commercial purposes.
9. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

10. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
11. Children shall not play with the appliance.
12. Always place on a firm, level surface, out of reach of children.
13. The cord shouldn't hang over the edge of a table or counter, or touch a hot surface.
14. Do not use the mini chopper for anything other than its intended use.
15. Do not use attachments not recommended by the manufacturer.
16. Do not continuously operate for more than 1 minute (4 consecutive pulses of 15 seconds each) as this can overheat the motor. Always allow the motor to cool to room temperature before continuing to use (at least 2 minutes).
17. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
18. Never leave unattended when in use.
19. Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that move in use.
20. Do not operate when the bowl is empty, as this could lead to damage.
21. Care is needed when handling sharp cutting blades, emptying the bowl and during cleaning.
22. Keep away from harsh or abrasive cleaning agents or solvents.
23. Keep fingers, hair, clothing and utensils away from all moving parts when the mini chopper is plugged in.
24. Never use with boiling or extremely hot liquids.
25. Avoid overfilling the bowl.
26. If using to prepare food for babies or elderly, ensure the bowl, lid and blade are cleaned thoroughly.
27. The bowl, lid and blade are dishwasher safe, top rack only.

 
28. Do not use the chopper to chop ingredients that are very hard.
29. Regarding the instructions for cleaning surfaces in contact with food, please refer to chapter "How to disassemble & clean your mini chopper".
30. **WARNING!** Misuse may lead to injury.
31. Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.
32. Power consumption of OFF mode: 0.1 W.Period after which the equipment reaches automatically OFF mode: 0 minute.

SAFETY INFORMATION

The steel blade is very sharp. Handle this with caution and keep fingers clear of the edges. For your safety, this mini chopper has been fitted with a safety interlock mechanism and so will not operate unless correctly assembled. Please ensure the bowl has been pushed firmly onto the base assembly and the plastic lid slots in correctly over the blade assembly.


You should have

Mini chopper body, bowl, lid & blade

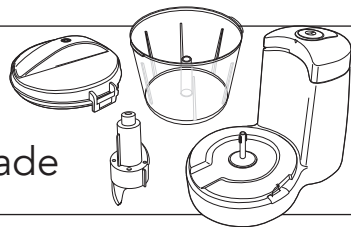

How to...

 ...recognise the parts of your mini chopper

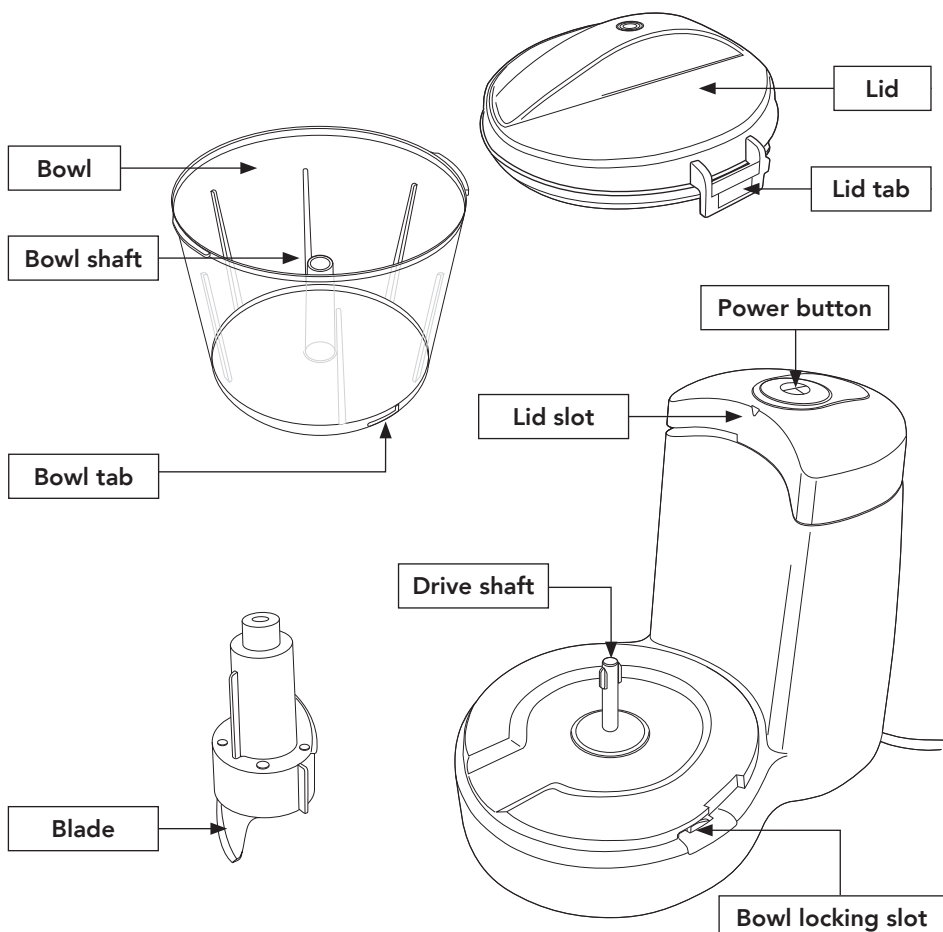


How to...

...assemble and use your mini chopper

Before use, remove all packaging and wash all items apart from the base in warm soapy water. Dry thoroughly before use.


IMPORTANT: Various spices such as cloves, dill or cumin seeds can have an adverse effect on the bowl and should not be chopped. Before chopping nuts or bread crumbs etc., ensure that both the food and the blade, bowl and lid are thoroughly dry. Best results are obtained from chopping small quantities at a time into small pieces. If you are preparing baby food always check that all the ingredients are thoroughly chopped before feeding. Beware of over processing some ingredients. Stop and check the consistency frequently. To ensure even processing, stop and scrape down any food from the sides of the bowl with a plastic spatula.

 1. Slot the bowl onto the base section and align the tabs on the bottom of the bowl with the bowl locking slots on the base (1). Turn the bowl clockwise to lock onto the base (2).

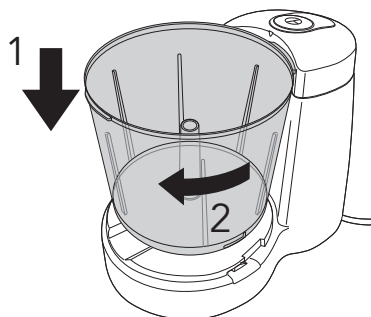


2. Slot the blade over the drive shaft. You may need to rotate the blade to get it to fit correctly. Then place the ingredients you wish to chop into the bowl.

 
CAUTION: The blade is very sharp, handle with care.

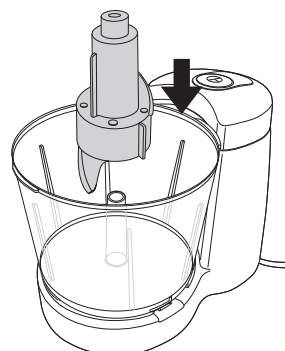

 3. Place the lid on top of the bowl. Align the arrow on the lid with the corner of the chopper body. Turn the lid clockwise to lock in place. The arrow on the lid will align with the arrow on the motor unit.

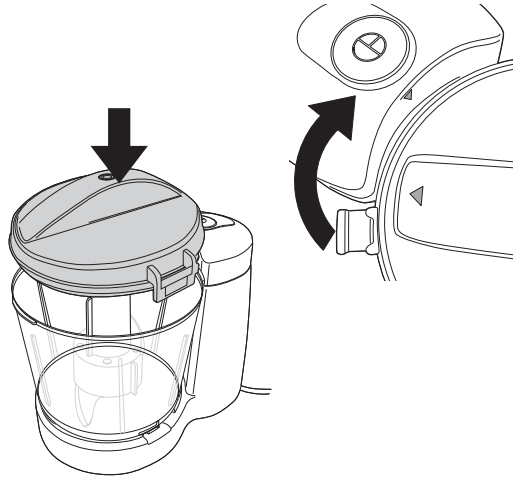


 4. Slot the plug on the mini chopper into a wall socket and turn the power on.

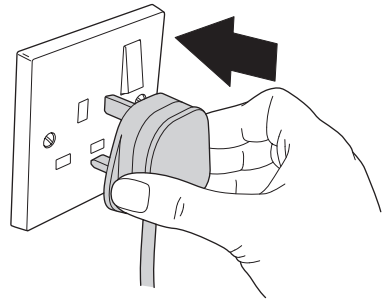

5. Press the power button on the top of the base to start the mini chopper. Release the power button to turn the mini chopper off.

 IMPORTANT: Avoid running the motor continuously for more than 15 seconds without a rest, with a maximum running time of 1 minute. Then leave the chopper for at least 2 minutes for the machine to cool down to room temperature.

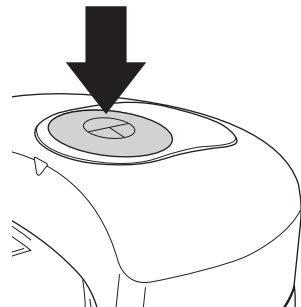


How to...

...disassemble & clean your mini chopper

Please note


Ensure the mini chopper is disconnected from the mains supply before disassembling and cleaning.

 1. Remove the lid by turning anticlockwise (1) and pulling away from the bowl (2).

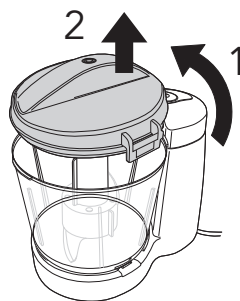


2. Remove the blade by pulling it upwards.

 CAUTION: The blade is very sharp, handle with care when removing.

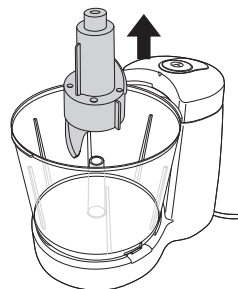

 3. Remove the bowl by turning anticlockwise (1). Pull the bowl away at a slight angle to remove (2).

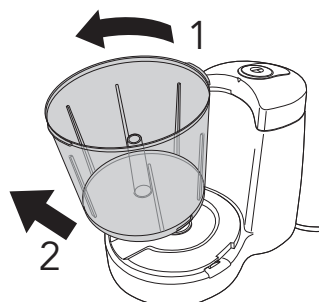


4. Wash the bowl, lid and blade in warm, soapy water and dry thoroughly. Alternatively place on the top rack in the dishwasher.
5. Wipe the main base with a damp cloth only.
6. Store the mini chopper fully assembled to protect the blade.
7. Some food may discolour the bowl. This is natural and will not harm the bowl or affect the flavour of any food placed in it. Rub the bowl with a cloth dipped in vegetable oil to remove any discolouration.

How to...

...change the fuse

 1. Only use a 3 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

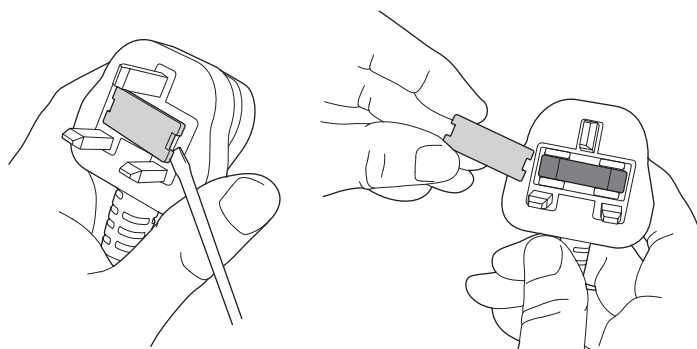



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

**Need
something
else?**

www.GEORGE.com

We have a wide range of accessories and other products that can be ordered direct to your door.

For PDF copy of this manual please scan QR code and search for model number



ASDA 
technical support
0333 600 7700

Customer services information

If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

Call

0800 952 0101

Write

ASDA, Leeds LS11 5AD

Product name: **GMC201W-18 Mini chopper**

Product site code: **15A.09.22.138**



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

Copyright

© 2018 ASDA Stores Limited.
All other trademarks appearing herein are the property of their representative owners.
Specifications are subject to change without notice.

Produced for ASDA,
Leeds LS11 5AD/ASDA,
Antrim BT41 4GY.

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

