

George.
home



GST401B-19 Sandwich toaster

User Guide

230V~50Hz, 1400W

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We're here to help you get the most from your sandwich toaster, so please keep hold of this manual for future use.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.



CAUTION. DANGER OF BURNS. THE SANDWICH TOASTER MAY BECOME HOT DURING USE. DO NOT TOUCH HOT SURFACES. DANGER OF FIRE OR ELECTRIC SHOCK. DO NOT INSERT METAL FOIL, TOOLS, OR BREAD THAT IS TOO THICK INTO THE SANDWICH TOASTER.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. To avoid fire, electric shock, or injury, never immerse the toaster, cord, or plug in water or liquid.
3. Keep away from harsh or abrasive cleaning agents or solvents.
4. Remove all protective wrapping prior to use.
5. Avoid outdoor and commercial use. This appliance is for household use only. Avoid bathroom use.
6. Do not use if the appliance, cord or plug is damaged.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Always place on a firm, level surface, out of reach of children.
9. Before connecting the toaster to the power, check the voltage shown on the appliance corresponds with the voltage

 
in your home. If it doesn't, contact your local store.

10. Make sure there is at least 10cm (4") of space around the sandwich toaster to allow the air to circulate.
11. Surfaces may become hot during use, so always place on a heat-resistant surface and use with caution.
12. The temperature of accessible surfaces may be high when the appliance is operating.
13. Bread may burn, therefore toasters mustn't be used near or below flammable materials.
14. The cord shouldn't hang over the edge of a table or counter, or touch a hot surface.
15. Keep away from hot gas and electrical burners.
16. Unplug when not in use and before cleaning.
17. Do not use attachments not recommended by the manufacturer.
18. Do not leave the sandwich toaster unattended when in use.
19. The appliance is not intended to be operated by means of an external timer or separate remote-control system. Don't use the sandwich toaster for anything other than its intended use.
20. Please don't dismantle. If a fault occurs have the toaster inspected in a qualified repair shop or return to us at ASDA.
21. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
22. ASDA does not recommend allowing children to operate this appliance.
23. Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.

23. This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
24. The working state of the product is supervised, and the power is disconnected at the end of the work, so low power mode is not required.
25. Regarding the instructions for details on how to clean the surfaces in contact with food, please refer to the section 'How to clean your sandwich toaster'.


You should have

Sandwich toaster

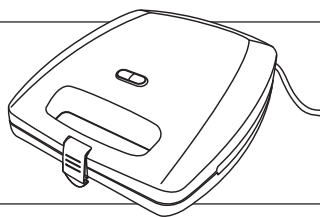

How to...

 ...recognise the parts of your sandwich toaster

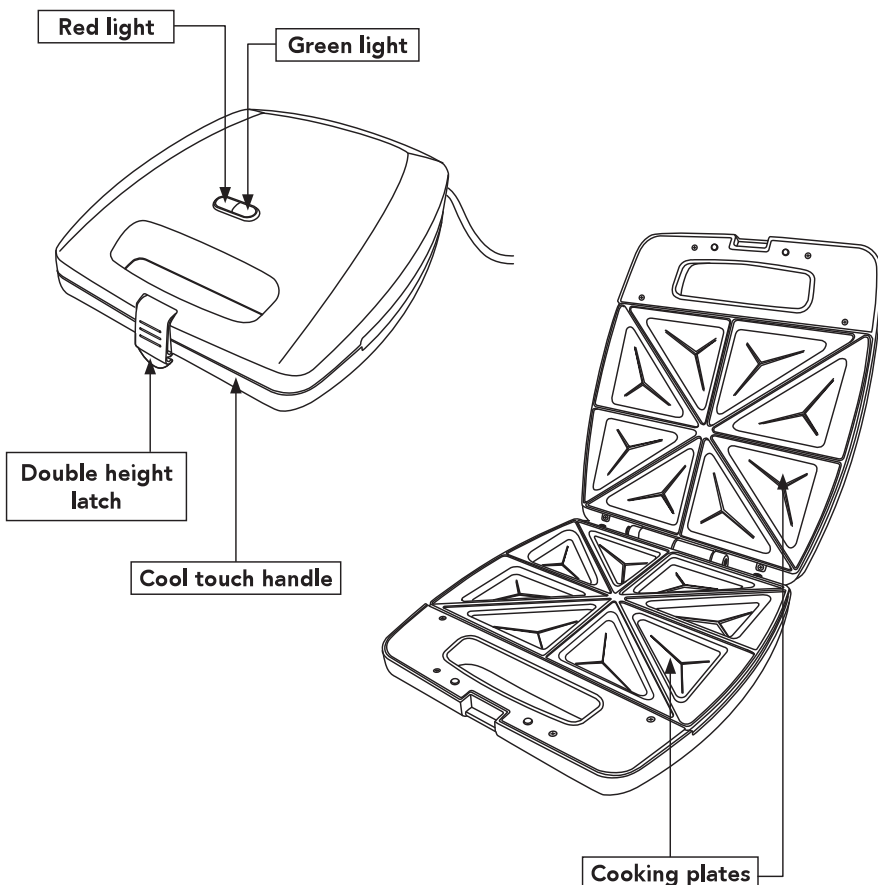


How to...

...use your sandwich toaster


Be careful not to burn yourself on the steam emitted from the cooking plates whilst the sandwich is cooking. When using for the first time, wipe the cooking plates down with a damp cloth and dry thoroughly. There will also be a slight odour and some light smoke may be visible when used for the first time. This is perfectly normal and will disappear over time.

1. Ensure the toasting plates are clean and free of dust (wipe down if necessary).

 2. Place the toaster on a flat, level surface and close the lid.

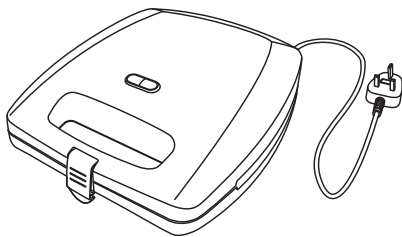


 3. Slot the plug into the mains socket and turn the power on.
The red light will come on.

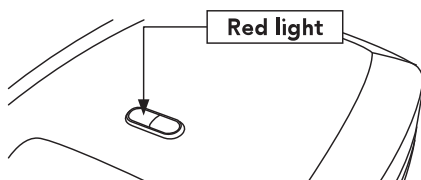

4. Allow your toaster to heat up until the green light also illuminates.

 NOTE: The green light will come on periodically; this is perfectly normal and is simply an indication that the appliance is getting back up to the necessary temperature.

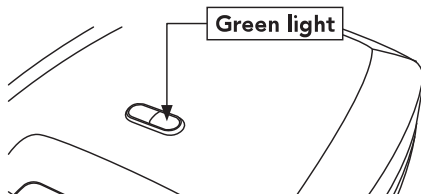

5. Prepare the bread and fillings (we recommend buttering each slice).
6. Once the green light is on, place one slice of bread, butter side down, onto the bottom heating plate. Push the bread down with a non-metal spoon to form two hollows, then place your filling inside the hollows of the bread.
7. Place the remaining bread on top, butter side upwards, and carefully close the lid by squeezing the handles together and pushing the latch down to lock. Always keep the lid closed and locked when cooking. There are two height settings for the latch to allow for thick sliced bread.
8. Cooking time will vary depending on the filling and thickness of the bread. Generally it's good to allow 2-4 minutes, or until the bread is golden or crispy to your liking.
9. Open the lid by flipping the latch upwards. Ensure your face is not near the steam that will be emitted.
10. Remove the toasted sandwiches using plastic or wooden tongs (never use metal utensils).
11. To make more sandwiches, close the lid and ensure the green light is on, then repeat the above steps.
12. Once you've finished making your sandwiches, switch the toaster off and unplug it. Allow the plates to cool fully before cleaning with a damp cloth.

How to...

...get the best results from your sandwich toaster

1. For the best results, we recommend buttering the outside of your bread (you can also add extra flavour by mixing herbs or garlic into the butter). Please do not use spray oils as these can damage the cooking plates.
2. Most types of bread can be used, but be aware that sweet breads with high amounts of sugar will brown quicker.
3. Never overfill the sandwiches as this will cause the filling to leak into the toaster.
4. Be careful when biting into freshly toasted sandwiches as the filling can be very hot. It's best to leave them to cool slightly before eating.

How to...

...clean your sandwich toaster

Make sure the toaster is disconnected from the power and is completely cool.

 
1. The toaster should be unplugged before cleaning and allowed to cool thoroughly.
2. Wipe clean with a damp cloth. Avoid using abrasive cleaning liquids or scourers as these may damage the product. Toaster plates should be dried fully before use. Do not immerse the sandwich toaster in water or other liquids. Do not hold the appliance under running water.
3. Metal utensils should not be used to remove toasted sandwiches or residue from the sandwich maker, as they will damage the non-stick coating on the sandwich plates.

How to...

...store your sandwich toaster

Before storing, ensure the cooking plates and the outside of the toaster are clean, dry and cool.

1. Stand the toaster upright and wind the power cord around the base.

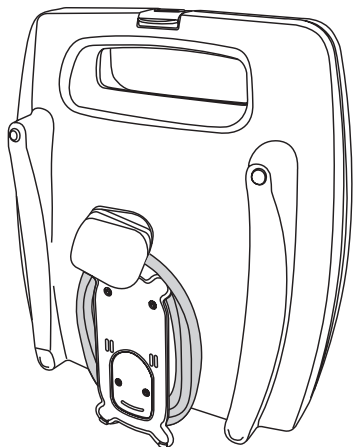

How to...

 
...change the fuse

1. Undo the screw in the middle of the plug using an appropriate screwdriver. Remove the fuse from the plug and replace with a 10 amp fuse.

Replace the cover.

WARNING:

Only ever use a 10 amp fuse.

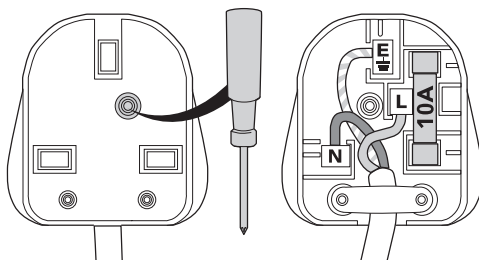

Notes...



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.



For PDF copy of this manual please scan QR code and search for model number



ASDA
technical support
0333 600 7700

Customer services information

If you have any problems, or just need some advice or more information on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

Call

0800 952 0101

Write

ASDA, Leeds LS11 5AD

Product name: **GST401B-19 Sandwich toaster
4 portion**

Product site code: **15A.09.22.169**



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

Copyright

© 2020 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA, Leeds LS11 5AD/ASDA, Antrim BT41 4GY

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

