 


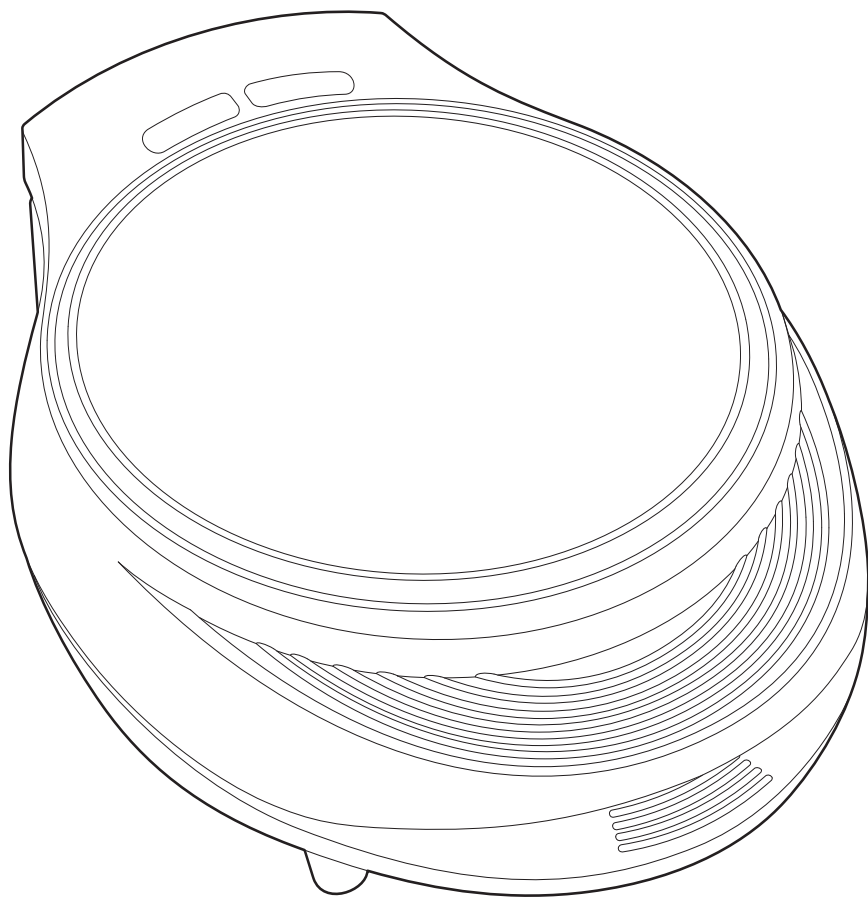

GWM101B-21 Waffle maker

User Guide

220-240V~50Hz, 800-1000W

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We've written this manual to help you get the most from your waffle maker. Please keep hold of it for future reference.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS THAT YOU SHOULD BE AWARE OF.



CAUTION. DANGER OF BURNS. THE WAFFLE MAKER MAY BECOME HOT DURING USE. DO NOT TOUCH HOT SURFACES.

READ ALL INSTRUCTIONS BEFORE USING.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. To avoid fire, electric shock, or injury, never immerse the waffle maker, cord, or plug in water or liquid.
3. Keep away from harsh or abrasive cleaning agents or solvents.
4. Remove all protective wrapping prior to use.
5. Avoid outdoor and commercial use. This appliance is for household use only. Avoid bathroom use.
6. Do not use if the appliance, cord or plug is damaged.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Always place on a firm, level surface, out of reach of

 
children.

9. Before connecting the waffle maker to the power, check the voltage shown on the appliance corresponds with the voltage in your home. If it doesn't, contact your local store.
10. Make sure there is at least 10cm (4") of space around the waffle maker to allow the air to circulate.
11. Surfaces may become hot during use, so always place on a heat-resistant surface and use with caution.
12. The temperature of accessible surfaces may be high when the appliance is operating.
13. The waffle maker mustn't be used near or below flammable materials.
14. The cord shouldn't hang over the edge of a table or counter, or touch a hot surface.
15. Keep away from hot gas and electric burners; do not place on a hob.
16. Unplug when not in use and allow to cool before cleaning.
17. Do not use attachments not recommended by the manufacturer.
18. The appliance is not intended to be operated by means of an external timer or separate remote-control system. Don't use the waffle maker for anything other than its intended use.
19. Please don't dismantle. If a fault occurs have the waffle maker inspected in a qualified repair shop or return to us at ASDA.
20. Do not leave the waffle maker unattended when in use.
21. Avoid overfilling the waffle plates with batter.
22. This appliance can be used by children aged from 8 years and above and persons with reduced physical,


sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.

- 23.** ASDA does not recommend allowing children to operate this appliance.
- 24.** Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/ batteries should not be disposed of with household waste.
- 25.** This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- 26.** The working state of the product is supervised, and the power is disconnected at the end of the work, so low power mode is not required.
- 27.** Regarding the instructions for details on how to clean the surfaces in contact with food, please refer to the section 'Cleaning your waffle maker'.

What's in the box

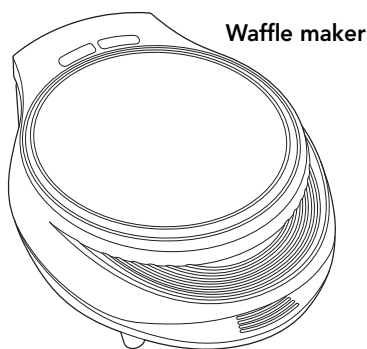

Features

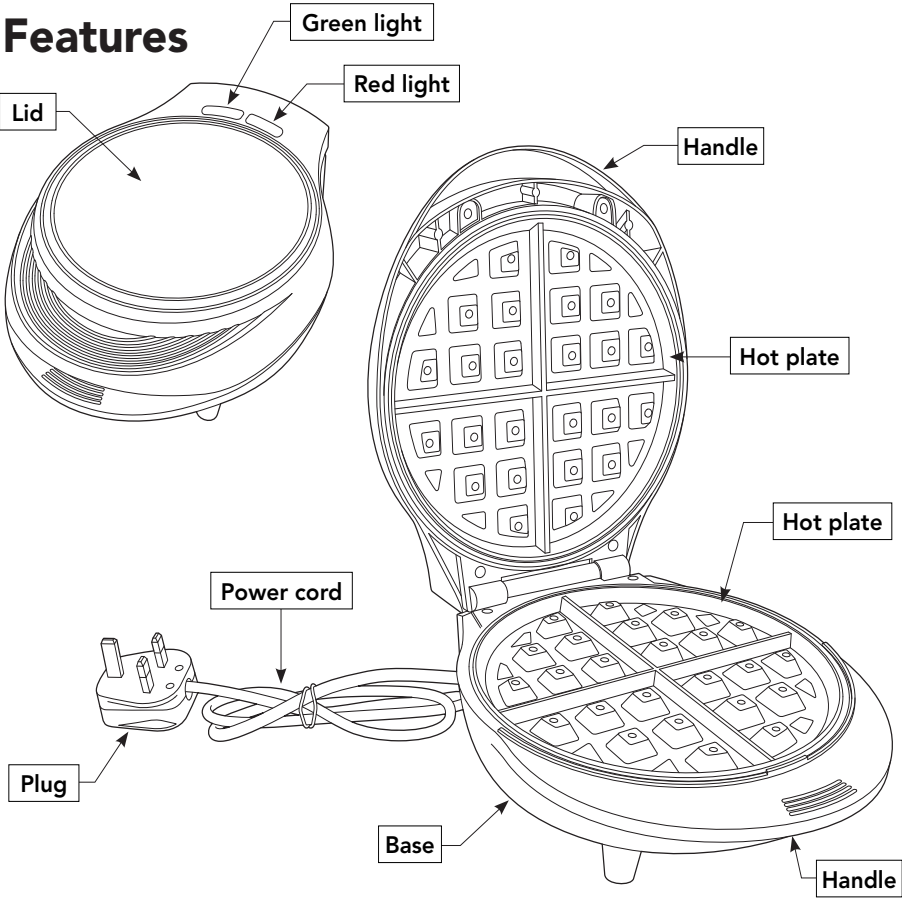 

Preparing your waffle maker

CAUTION: Never immerse your waffle maker in water. No parts of your waffle maker are dishwasher safe.

1. Place your waffle maker on a stable, level, heat resistant surface, with 10cm (4") of clear space on all sides and within easy reach of a mains socket.

 
 
 
 
 
2. Wipe the hot plates inside your waffle maker with a damp sponge and a mild detergent, then dry with a soft cloth.

IMPORTANT: NEVER use abrasive cleaning agents or metal scourers to clean your waffle maker.

3. Wipe the outside of the waffle maker with a damp cloth, then dry with a soft dry cloth.
4. Plug the waffle maker into the mains socket and allow it to warm up until the GREEN light comes on, leave for 5 minutes then remove the plug from the mains socket and allow to cool.

NOTE: When you first heat your waffle maker there may be some smoke and a slight odour, this is common for appliances with nonstick coatings.

5. Wipe the inside and outside of the waffle maker with a damp cloth, then dry. Your waffle maker is now ready for use.

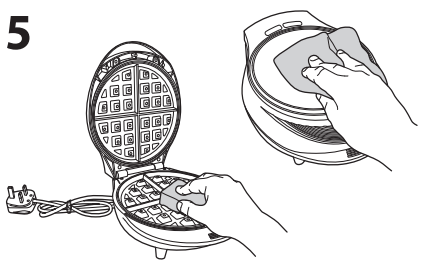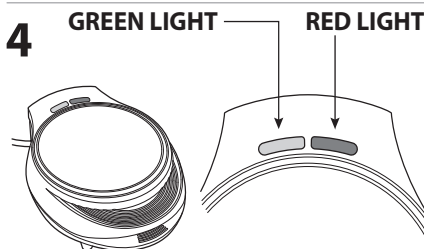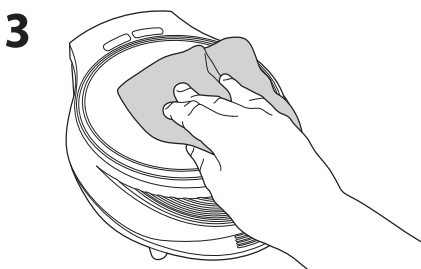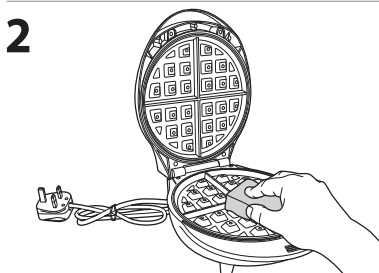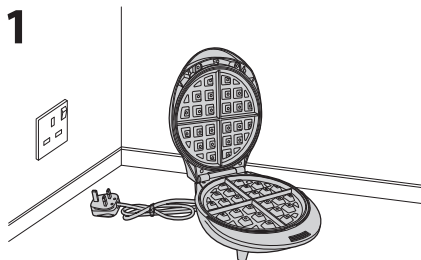

Using your waffle maker

Follow the recipe on page 10 to make your waffle batter.

Plug the waffle maker into a mains socket to turn it on.

Note: The waffle maker does not have a on/off switch you must remove the plug from the mains socket to turn it off.

1. The RED light will come on, when the GREEN light comes on, lift the lid of the waffle maker upwards using an oven glove.

 
 
 
 
2. **Optional:** brush a light coating of vegetable oil over the hot plates.

Place approximately 6 desert spoons of the batter into the bottom hot plate or until the waffle squares are covered.

3. Close the lid and allow the batter to cook for approximately 8-10 minutes or until golden brown, the time may vary depending on the ingredients used.

4. Remove the plug from the mains socket and lift the lid upwards using an oven glove. Remove the waffles from the waffle maker using plastic or wooden spatula or tongs. NEVER use metal utensils as they will damage the surface.

IMPORTANT: Always clean the waffle maker after it has cooled down.

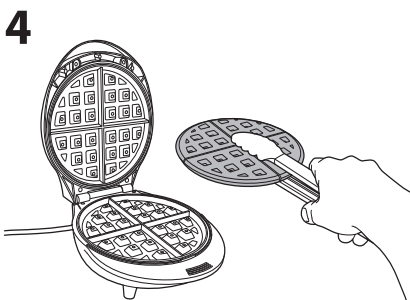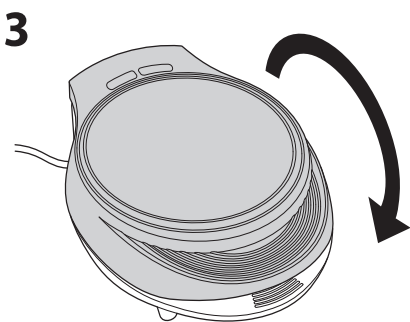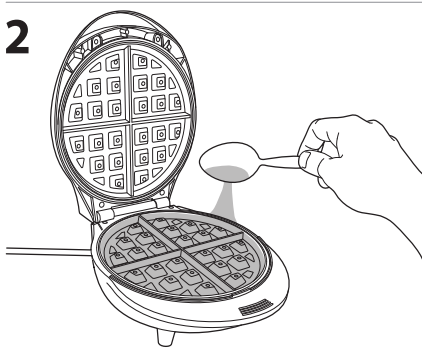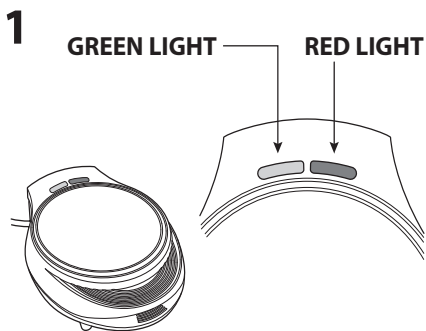


Cleaning your waffle maker 1

CAUTION: Ensure your waffle maker has cooled down and the plug has been removed from the mains socket before cleaning.

NEVER take your waffle maker apart for cleaning.


 
NEVER immerse the power cord, plug or the waffle maker in water or any other liquids.

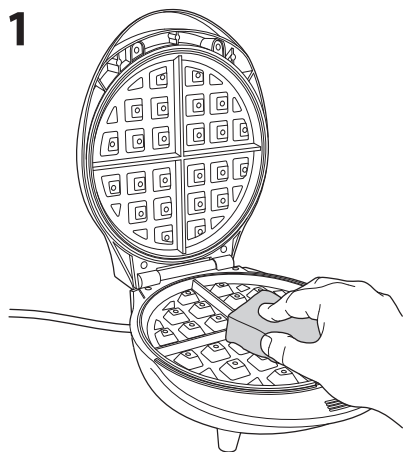

1. Wipe the hot plates with a damp sponge and a mild detergent. After cleaning wipe with a soft cloth to dry.

NEVER use abrasive cleaning agents or harsh scourers as they will damage the nonstick surface of the hot plates.

  2. If the batter has burnt onto the hot plate, cover in a small amount of vegetable oil and leave for a few minutes until it has softened. Now clean as shown in step 1 above.
3. Wipe the outside of the waffle maker with a damp cloth, then dry with a soft dry cloth.

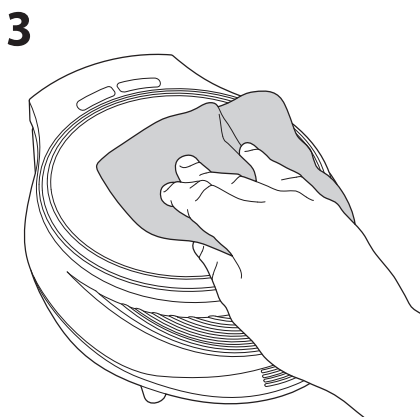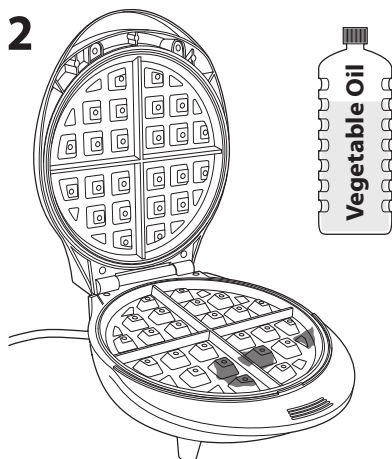


Storing your waffle maker

IMPORTANT: Before storing your waffle maker, ensure that it is clean and dry.

Wrap the power cord around the cable tidy attached to underside of the waffle maker.

 Store your waffle maker in a dry place away from young children.

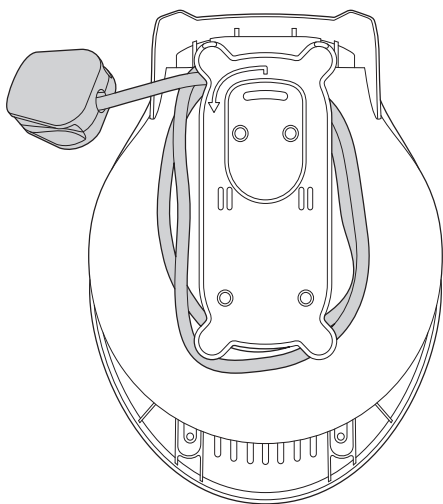

How to...

 
...change the fuse

1. Undo the screw in the middle of the plug using an appropriate screwdriver. Remove the fuse from the plug and replace with a 10 amp fuse.

Replace the cover.

WARNING:

Only ever use a 10 amp fuse.

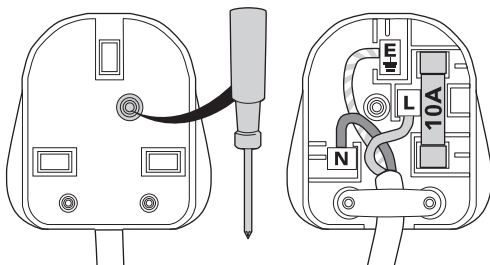

Waffle batter

Ingredients

Makes: 6

- ❑ 2 eggs
- ❑ 250 grams plain flour
- ❑ 415 ml milk
- ❑ 120 ml vegetable oil
- ❑ 1 tablespoon sugar
- ❑ 4 teaspoons baking powder
- ❑ 1/4 teaspoon salt
- ❑ 1/4 teaspoon vanilla extract

Method

1. Whisk the eggs until light and fluffy.
2. Add all of the other ingredients to the bowl and beat into the eggs until there are no lumps.



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.



For PDF copy of this manual please scan QR code and search for model number



Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product name.

Call

0800 952 0101

Write

ASDA, Leeds LS11 5AD

Product name: **GWM101B-21 Waffle Maker**

Product site code: **15A.09.22.177**



To qualify for the 2 year warranty the appliance must have been used according to the manufacturer's instructions. For example kettles should have been regularly de-scaled.

If your appliance stops working or develops a fault then return it to your nearest store and we will happily replace or refund the item, with exception of the below exclusions:

EXCLUSIONS

ASDA shall not be liable to replace goods under the terms of the warranty where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or use contrary to the user manual's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that described on the product rating label.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non-domestic use.
5. ASDA are not liable to carry out any type of servicing work, under the warranty.

This warranty does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an additional benefit and does not affect your statutory rights as a consumer.

If for any reason this item is replaced during the 2 year warranty period, the warranty on the new item will be calculated from original purchase date. It is vital to retain your original proof of purchase to indicate the date of initial purchase.

Copyright

© 2021 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA, Leeds LS11 5AD/
ASDA, Antrim BT41 4GY.

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.

