


Goblin®

GOCSVN001B5M 3-In-1 Slimline Corded Vacuum Cleaner

User Guide

220-240V~50-60Hz, 450W

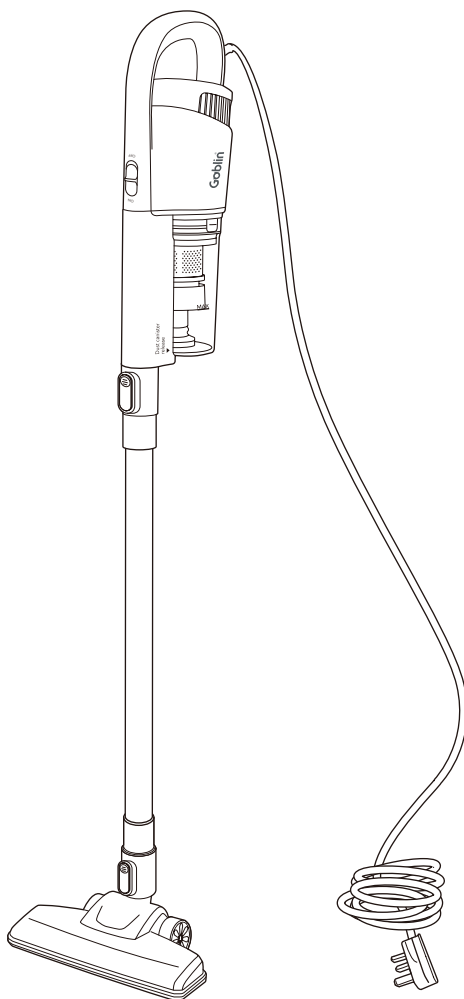

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We're here to help you get the most from your vacuum cleaner , so please keep hold of this manual for future use.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. Don't use the vacuum cleaner for anything other than its intended use. The appliance is not suitable for commercial use. This appliance is only for household domestic indoor use and car cleaning.
3. Do not use if the vacuum cleaner, cord or plug is damaged.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
5. Remove all packaging prior to use. Inspect the product for any damage before use. If damage is found, notify ASDA to exchange the product.
6. Before connecting the vacuum cleaner to the power, check the voltage shown on the appliance corresponds with the voltage in your home. If it doesn't, contact your local store.
7. Keep the vacuum cleaner away from heat sources or direct sunlight.
8. WARNING: Keep the appliance dry.
9. To avoid electric shock or injury, never immerse the vacuum cleaner body, cord or plug in liquid or water.
10. Do not handle the appliance with wet hands.
11. Keep away from harsh or abrasive cleaning agents or solvents.

- 12.** Ensure you assemble the vacuum cleaner correctly before use.
- 13.** Do not use attachments not recommended by the manufacturer.
- 14.** Always disconnect the appliance from the power supply before assembling, disassembling or cleaning.
- 15.** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 16.** ASDA does not recommend allowing children to operate this appliance.
- 17.** Cleaning and user maintenance shall not be made by children without supervision.
- 18.** Only carry the vacuum cleaner by the carry handle.
- 19.** DO NOT use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water.
- 20.** Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, pull the cord around sharp corners or edges, or expose the cord to heated surfaces.
- 21.** Ensure fingers and objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped in the vacuum cleaner if used improperly.
- 22.** Keep hair, loose clothing, jewellery, fingers, feet and all parts of your body away from openings and moving parts.
- 23.** Keep all air vents clear and free of dust, lint, hair and anything else that may reduce air flow.
- 24.** Avoid directing the vacuum cleaner near naked flames as the air discharged may extinguish gas fires and pilot lights or disturb ashes in an open fire.

- 25.** DO NOT use the vacuum cleaner to suck up large objects or objects that are likely to damage the vacuum cleaner.
- 26.** DO NOT attempt to vacuum long hair, string, pieces of cloth etc., as these may clog the vacuum cleaner.
- 27.** DO NOT vacuum hot items e.g. cigarettes, matches, ashes.
- 28.** DO NOT vacuum fine dust, such as brick dust, plaster dust etc. This may damage the vacuum cleaner.
- 29.** DO NOT vacuum hard or metal objects, nails, pins etc.
- 30.** DO NOT pick up toxic or flammable materials or use in the presence of explosive or toxic dust, liquids or vapour.
- 31.** DO NOT put objects into openings.
- 32.** Use only on dry indoor surfaces.
- 33.** Never use to suck up water or liquids.
- 34.** DO NOT use without all the filters in place or with any filter blocked.
- 35.** DO NOT use the vacuum cleaner to clean animals.
- 36.** Switch the vacuum cleaner off before plugging or unplugging the vacuum cleaner into the mains supply, and when attaching or removing accessories.
- 37.** Take extra care when vacuuming stairs.
- 38.** Keep any attachments away from your face and body.
- 39.** This vacuum cleaner has a thermal safety device which cuts off the power when overheated. If this happens, unplug the vacuum cleaner and allow it to cool down completely before reusing.
- 40.** Wrap the cord loosely around the handle and dust canister before storing.
- 41.** The appliance shall not be left unattended while it is connected to the supply mains.
- 42.** Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.

AUTOMATIC THERMAL CUT OUT


A safety thermostat inside the vacuum cleaner protects the motor from overheating if the airways or filters are clogged. If the vacuum cleaner suddenly stops working during operation, switch off and unplug immediately. Allow the motor to cool for an hour, empty the dust canister and thoroughly clean the filters and airways. Plug in the vacuum cleaner again and switch on. The vacuum cleaner should now operate normally.

This is a vacuum cleaner for general purpose, of which measurement and calculation methods used comply with EN 60312-1 & EU regulation No. 666/2013


What's in the box

- vacuum cleaner main body
- Dust canister
- Filter assembly
- Circular sponge filter
- Extension pole
- Floor head
- Crevice/brush multi-tool
- Wall mount bracket and fixings
- User guide

Features

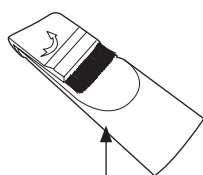


**Crevice/brush
multi-tool**

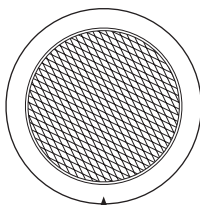

**Circular
sponge filter**




**Wall mount
bracket**

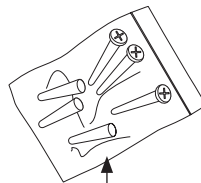

**Wall mount
fixings**

Features

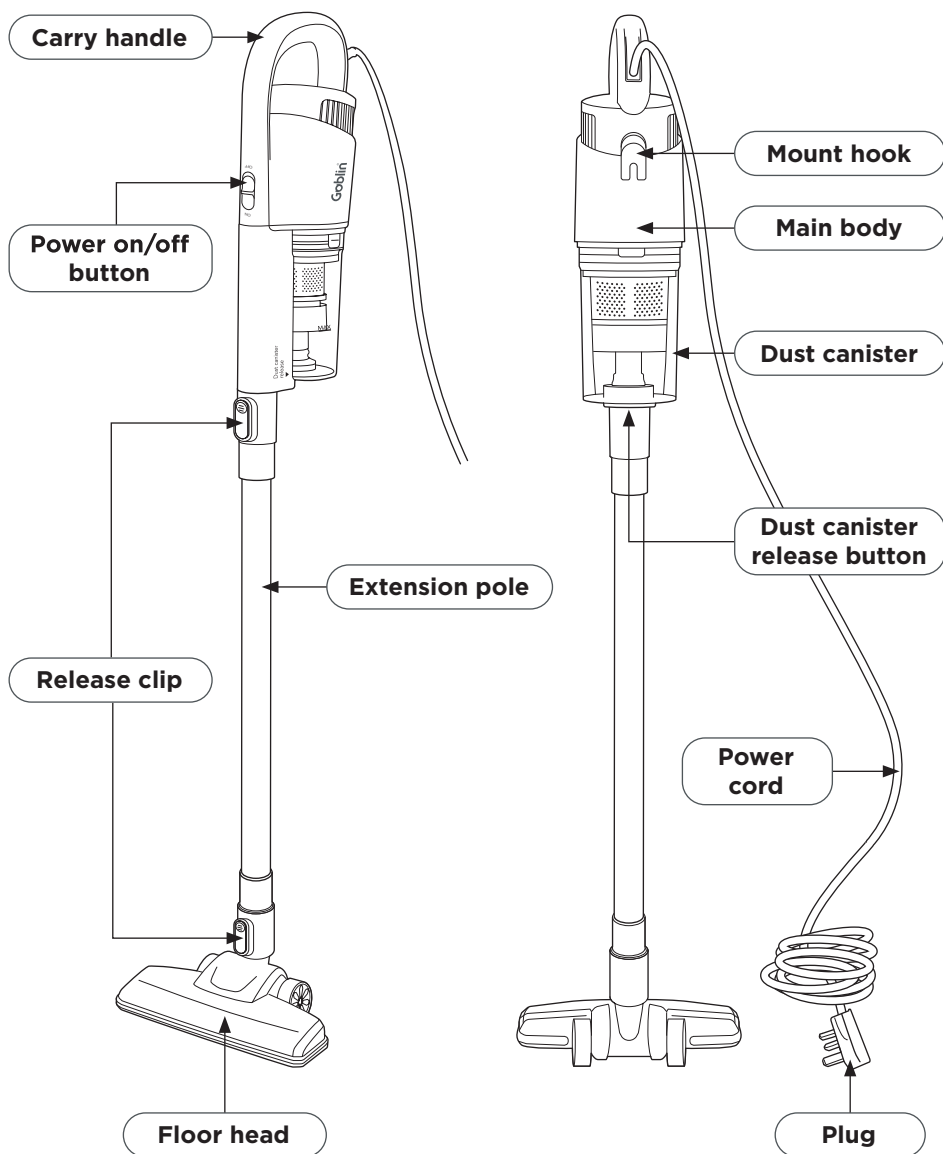


Assembling/disassembling and using the vacuum cleaner

Before assembling or disassembling attachments, ensure the vacuum cleaner is not plugged into the mains supply and is switched off.

1. Align the top of the extension pole with the bottom of the vacuum cleaner main body and push up until the extension pole clicks into place.
2. Push the other end of the extension pole into the top of the floor head. Again it should click into place.

The vacuum cleaner is now assembled, ready for use.

3. Pop the plug into an electrical socket and turn the power on.

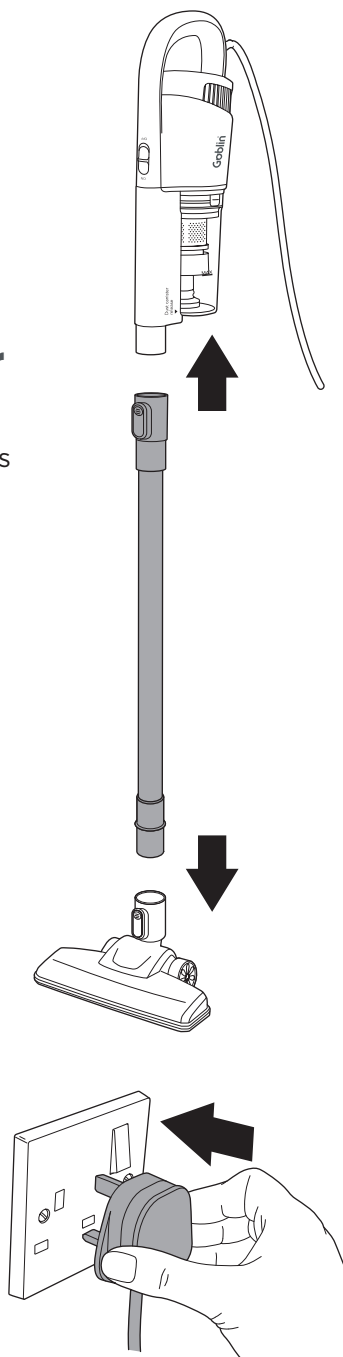


4. Turn the vacuum cleaner on by pushing the power on/off switch downwards.

5. Move the floor head back and forth over the surface. Use even strokes. Don't press hard; allow the floor head to suck away the debris.

6. When finished turn the power off on the vacuum cleaner and at the mains supply

Note: Lean the vacuum cleaner safely against a wall or surface, or lay the vac down on the floor when not in use.

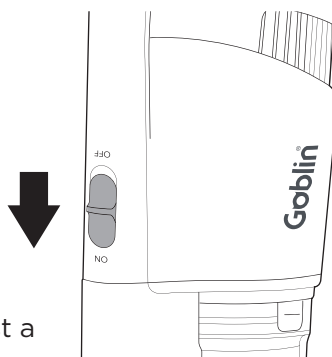


Replacing the attachments

When changing the attachments ensure the vacuum cleaner is switched off.

The floor head and crevice/brush multi-tool can fit directly onto the main body for close up vacuuming and low level dusting and cleaning. For high level cleaning the crevice/brush multi-tool can fit on the end of the extension pole.

1. To use the vacuum cleaner more as a handheld vac, remove the extension pole and replace with the floor head. Press the release clip on the top of the extension pole (1) and pull the extension pole away from the main body (2).


2. Remove the floor head from the extension pole in the same way by pressing the release clip on the floor head and pulling away the extension pole.

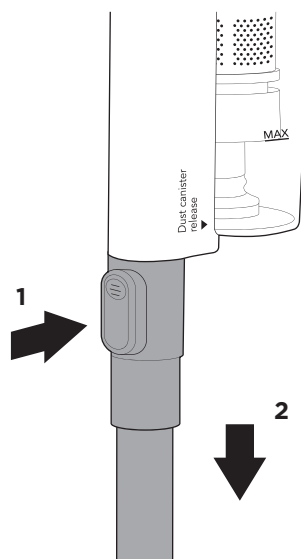


3. Align the main body with the top of the floor head and push down until it clicks into place. Turn on the power.

This set up is useful when cleaning stairs or sofas. When finished turn the power off on the vacuum cleaner and at the mains supply.


Note: Take care when vacuuming stairs. It is best to plug in the vacuum cleaner at the bottom of the stairs and work upwards so the cable isn't in the way and doesn't become a trip hazard.

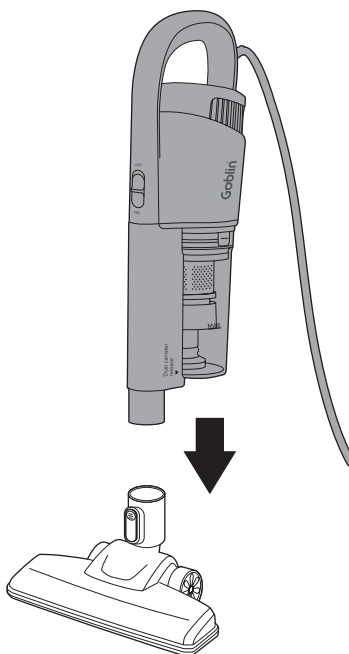


4. For low level cleaning with the crevice/brush multi-tool, simply slide the attachment directly onto the end of the main body. For high level cleaning, slide the attachment onto the end of the extension pole.

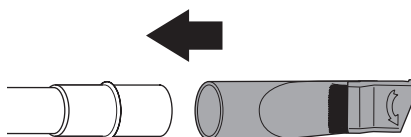

5. To use the brush attachment on the crevice tool, pull the top brush section in the direction of the arrow until it clicks into place.

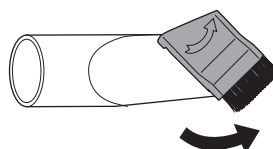

6. To use the crevice tool, simply push the brush back to the reverse position.

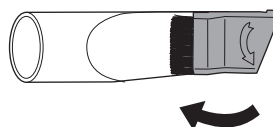

Removing and emptying the dust canister




Ensure the vacuum cleaner is switched off before emptying the dust canister. As a tip, it is easier to remove the dust canister without any attachments on the vac.

1. Press the dust canister release button located underneath the dust canister **(1)** and pull away from the main body, keeping the dust canister fairly upright **(2)**.
2. Pinch either side of the filter assembly and pull upwards away from the dust canister. Empty the debris from the dust canister into a household bin.

Note: Do not allow the dust canister to overfill. Don't exceed the MAX level marker. Empty regularly.

Everytime you empty the dust canister, check the filter assembly and tap gently over the household bin to remove any excess dust.






3. Replace the filter assembly into the dust canister. Hook the channel on the top of the dust canister with the lug on the main body **(1)**. Push the dust canister back towards the main body until you hear it click into place **(2)**.

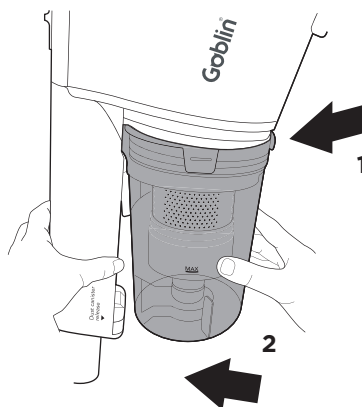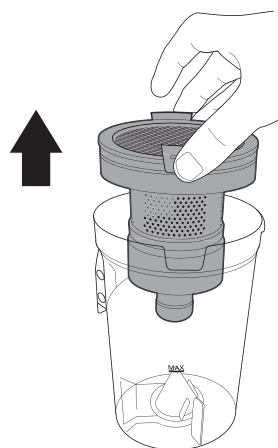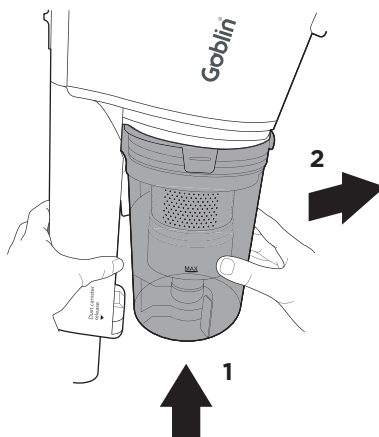

Cleaning the filters

Before starting any cleaning, ensure the vacuum cleaner is not plugged into the mains supply and is switched off.

1. Remove the dust canister and filter assembly and empty as shown in the 'Removing and emptying the dust canister' section of this manual.
2. Remove the circular sponge filter from the filter assembly by pinching the material tab at the top of the filter and pulling upwards. Tap the filter over a household bin to remove any debris then set aside.
3. Remove any excess dust from the filter assembly using a soft brush or a clean paint brush. The filter can be broken down into three parts. Hold the top section and twist the lower section, following the arrow and wording markings on the filter assembly that say 'UNLOCK'.
4. Rinse the dust canister, filter assembly parts and circular sponge filter under warm water until the water runs clear and leave to dry for 24 hours.
5. Once all the parts are thoroughly dry, reassemble the filter assembly, using the markings for 'LOCK', and place back into the dust canister. Don't forget to put the circular sponge filter back in the top of the filter assembly.
6. Replace the dust canister to the main body as shown in the 'Removing and emptying the dust canister' section of this manual.

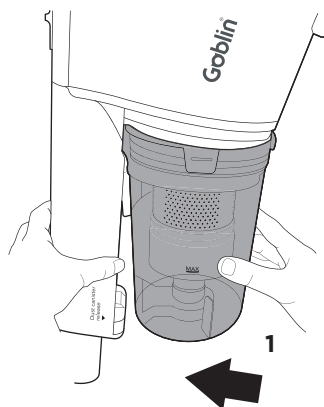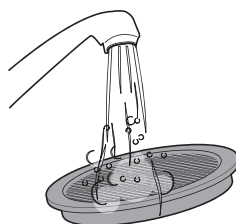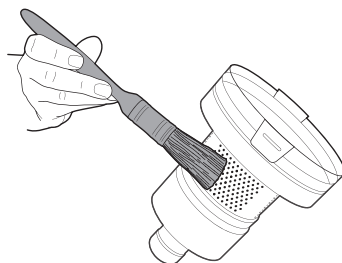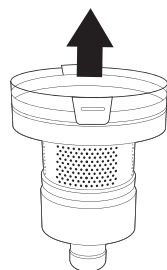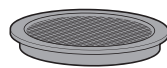

It is important to regularly maintain and clean the filters.
A clogged filter reduces suction power and can shorten the life of your vacuum cleaner.

Below is a recommended guide for how often you should clean the filters:

Filter Type	Recommended cleaning times
Filter assembly	• Shake out debris when you empty the dust canister. • Rinse under warm water once a month or more often if required.
Circular sponge filter	• Shake out debris when you empty the dust canister. • Occasionally remove any dust/debris as necessary. It can also be rinsed under warm water once a month.

Clearing a blockage

Ensure the vacuum cleaner is not plugged into the mains supply and is switched off before dismantling the vac.

The vacuum cleaner would only become blocked if the dust canister has exceeded the 'MAX' level, the filters are clogged up or a large object has been sucked up.


1. Check the dust canister and empty if necessary.
2. Check the 2 filters in the unit, remove any debris/dust and wash if necessary.
3. If the floor head, crevice/brush multi-tool or extension pole were in use, detach them from the main body and each other and check for blockages. Remove any blockages.

Storing the vacuum cleaner

Your vacuum cleaner can be stored safely and securely by hanging from the wall mount supplied with your product or by removing all the attachments and stowing together in a cupboard. Either way will help avoid the product falling over and causing damage.


Always turn off and unplug from the mains supply before storing.

1. Remove any attachments if the vacuum cleaner was last used with them on.
2. Wrap the cord over the top of the handle and underneath the dust canister.
3. Store the vacuum cleaner and accessories away safely in a dry place.

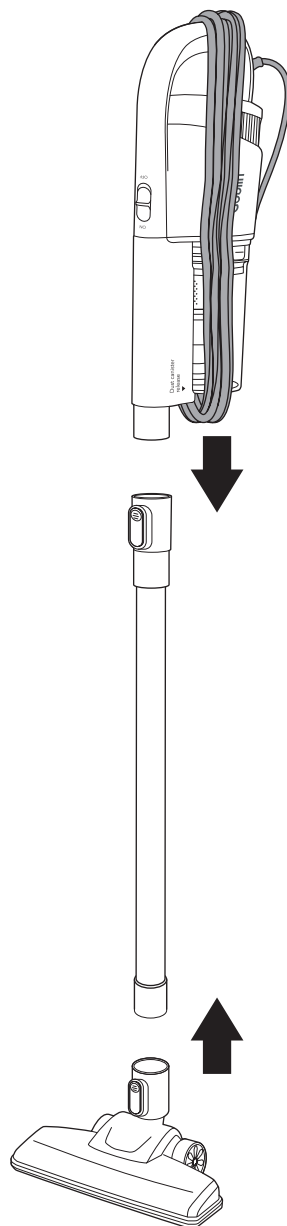

Storing the vacuum cleaner with the wall mount

1. Find a suitable spot in your household where you'd like to secure your vacuum cleaner.
2. Mark the desired screw hole positions on the wall using a pencil. We recommend that the vacuum cleaner hangs slightly lifted off the floor.
3. Use the wall mount fixings supplied only if suitable for your wall type.
4. Screw the wall mount bracket and fixings to the wall (see illustration for which way the mount should hang on the wall).
5. Wrap the cord over the top of the handle and underneath the dust canister.
6. The vacuum cleaner can then be mounted on the wall mount bracket. The mount hook can be found on the back on the main body near the handle.

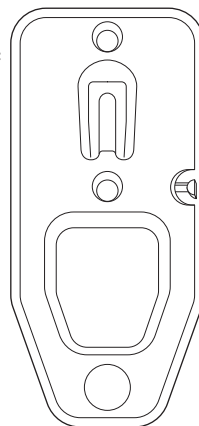

ENERGY CONSUMPTION

Information for power consumption and maximum time to reach applicable low power condition:

Off mode:

0.0W

The maximum time needed to reach the applicable low power condition:

At once after power switch was turned to OFF

Goblin®

**Your
28 day
no quibble refund**

If you're not delighted with your product, simply bring it back within 28 days for a no quibble refund. Don't forget to include all of the product's original components (for example remote control, power cable or stand) and packaging, along with your receipt or other proof of purchase.

**1 year
guarantee**

This product is covered by a full 1 year Asda guarantee from the day you buy it. In the unlikely event that your product is faulty or you are simply struggling to set it up, don't worry - here's what you should do.

1. First call our Customer Helpline as they may be able to help you with the problem 2. If the problem can't be resolved, you will receive a reference number. 3. Take the reference number, along with the item, all its components and your receipt, to your nearest store for a full refund.

Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product site code.

Call

0333 600 7700

Write

ASDA, Leeds LS11 5AD

Product name: **GOCSVN001B5M 3-In-1 Slimline
Corded Vacuum Cleaner**

Product site code: **15A.06.25.060**

For PDF copy of this manual please scan
QR code and search for model number



ASDA 
technical support
0333 600 7700

Copyright

© 2025 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA,
Leeds LS11 5AD/ASDA,
Antrim BT41 4GY

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.



Goblin[®]