 


Goblin[®]

GHVWD101B-20 Wet & dry handheld cordless vacuum

User Guide

45W, 7.4V

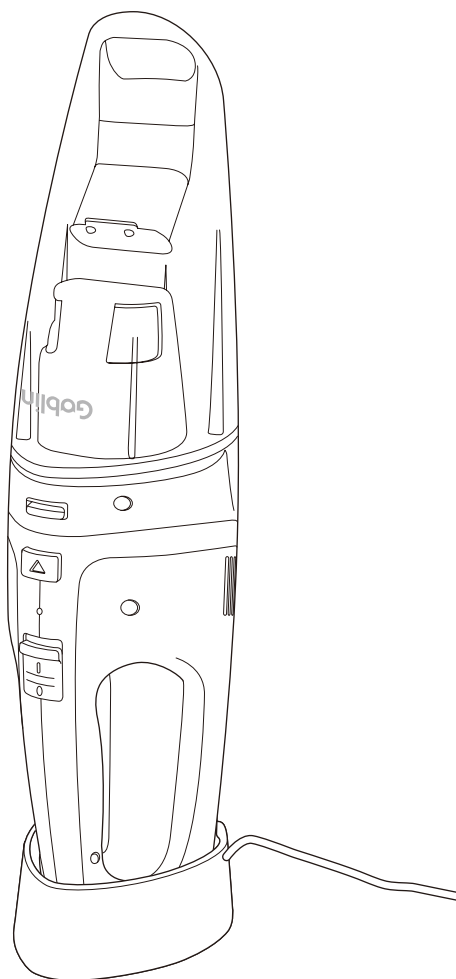

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We are here to help you get the most from your wet & dry cordless vacuum, so please keep hold of this manual for future use.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. Don't use the wet & dry vac for anything other than its intended use. The appliance is not suitable for commercial use. This appliance is only for household domestic indoor use and car cleaning.
3. Do not use if the vac or charger are damaged.
4. If the charger is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
5. Remove all packaging prior to use. Inspect the product for any damage before use. If damage is found, notify ASDA to exchange the product.
6. Before connecting the vac charger to the power, check the voltage shown on the charger corresponds with the voltage in your home. If it doesn't work, contact your local store.
7. Please don't dismantle. If a fault occurs, have the vac inspected in a qualified repair shop or return to us at ASDA.
8. Keep the vac away from heat sources or direct sunlight.
9. WARNING: Keep the appliance dry.
10. To avoid electric shock or injury, never immerse the vac or charger in liquid or water.
11. Do not handle the charger or appliance with wet hands.
12. Keep away from harsh or abrasive cleaning agents or solvents.


- 13.** Ensure you assemble the vac fully before use.
- 14.** Do not use attachments, spare parts or accessories not recommended by the manufacturer.
- 15.** Always disconnect the appliance from the charger and ensure it is switched off before assembling, disassembling or cleaning.
- 16.** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 17.** ASDA does not recommend allowing children to operate this appliance.
- 18.** Cleaning and user maintenance shall not be made by children without supervision.
- 19.** Only carry the vac by the carry handle.
- 20.** DO NOT use the vac if it has been dropped, damaged, left outdoors or dropped into water.
- 21.** Ensure fingers and objects are never placed in any part of the vac. Clothing or hair may become trapped in the vacuum if used improperly.
- 22.** Keep hair, loose clothing, jewellery, fingers, feet and all parts of your body away from openings and moving parts.
- 23.** Keep all air vents clear and free of dust, lint, hair and anything else that may reduce air flow.
- 24.** Avoid directing the vac near naked flames as the air discharged may extinguish gas fires and pilot lights or disturb ashes in an open fire.
- 25.** DO NOT use the vac to suck up large objects or objects that are likely to damage the appliance.
- 26.** DO NOT attempt to vacuum long hair, string, pieces of cloth etc., as these may clog the appliance.

- 27.** DO NOT vacuum hot items e.g. cigarettes, matches, ashes.
- 28.** DO NOT vacuum fine dust, such as brick dust, plaster dust etc. This may damage the appliance.
- 29.** DO NOT vacuum hard or metal objects, nails, pins etc.
- 30.** DO NOT pick up toxic or flammable materials or use in the presence of explosive or toxic dust, liquids or vapour.
- 31.** DO NOT put objects into openings.
- 32.** Only suck up water or liquids using the correct attachments.
- 33.** When sucking up liquids, always hold at a 40-90 degree angle. Do not hold horizontally and allow water to access the motor as this could damage the vacuum.
- 34.** DO NOT use without all the filters in place or with any filter blocked.
- 35.** DO NOT use the vac to clean animals.
- 36.** Switch the vac off when charging and attaching or removing accessories.
- 37.** Take extra care when vacuuming stairs.
- 38.** Keep any attachments away from your face and body.
- 39.** Use only the charger supplied to charge the appliance.
- 40.** Do not charge the unit outdoors, in a bathroom or anywhere the appliance may get wet.
- 41.** The appliance shall not be left unattended while it is connected to the supply mains.
- 42.** Don't wrap the cord around the charger when storing.
- 43.** Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.
- 44.** The battery must be removed from the appliance before it is scrapped.
- 45.** The appliance must be disconnected from the supply mains when removing the battery. The battery is to be disposed of safely.


What's in the box

1. Wet & dry vac main body
2. Charger
3. Charging base
(can be wall mounted)
4. Crevice tool
5. Squeegee tool
6. Wall mount fixings
7. User guide


Features

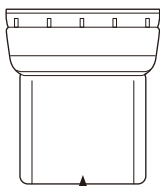


Squeegee tool
(stored in the base)

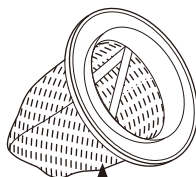


Filter

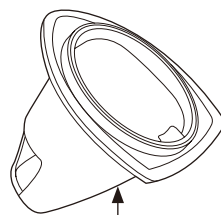


Filter cover

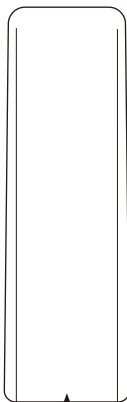

Crevice tool
(stored in the base)

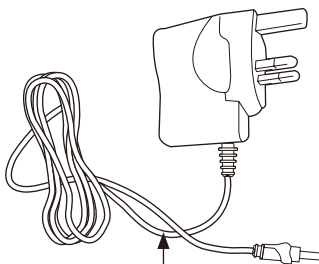


Charger

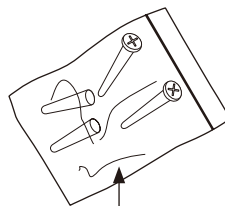

Wall mount
fixings




Features

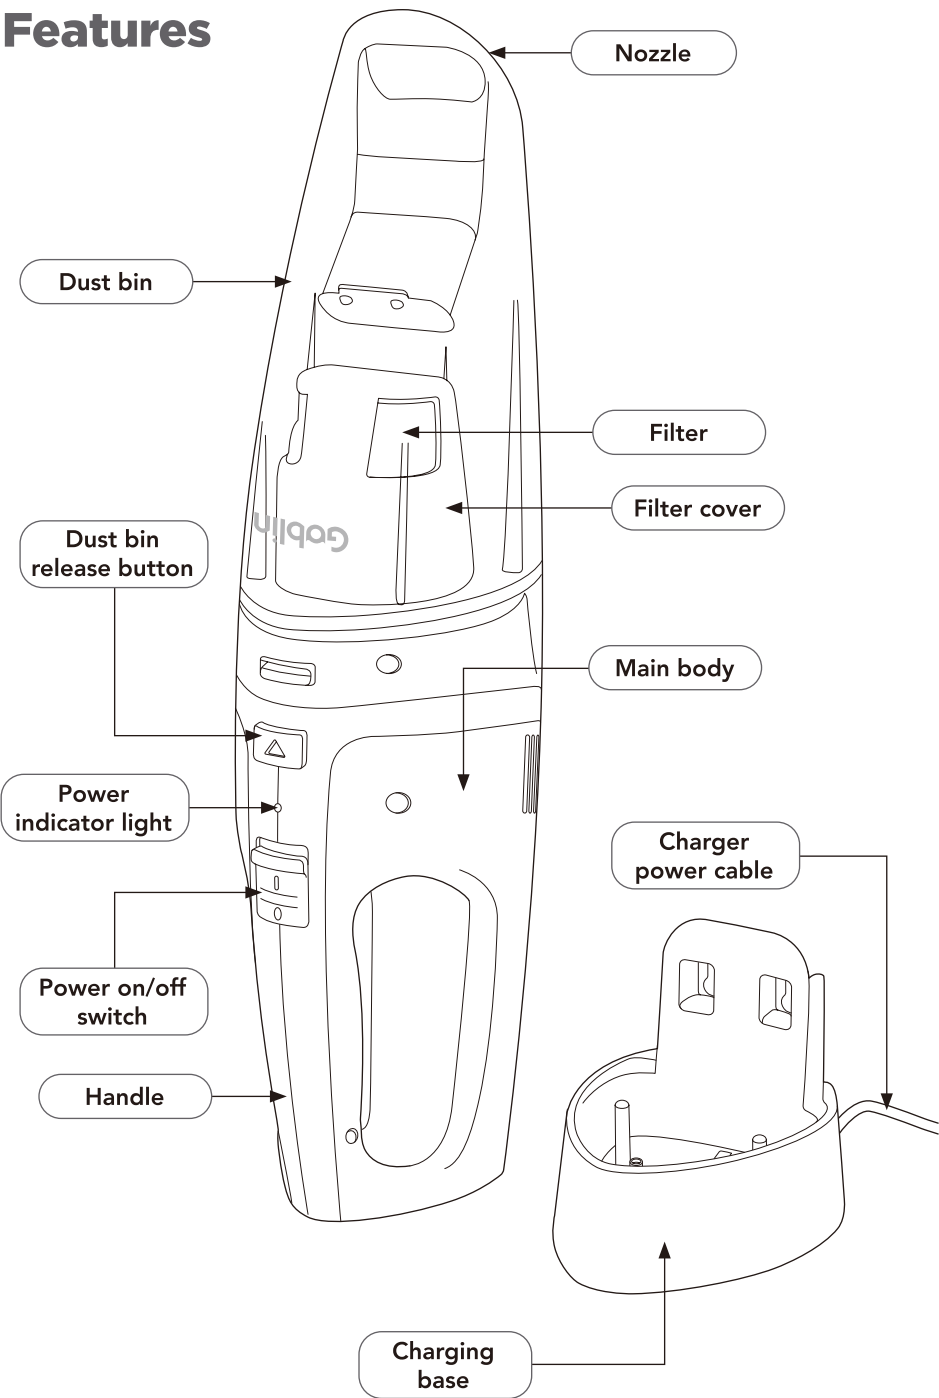

Setting up the charging base

The charging base can be mounted on a wall or placed on a flat, level surface.

1. Attach the charger to the charging base by feeding the end of the charger through the hole in the bottom of the charging base, working from underneath upwards.
2. Push the charger end towards the front of the base **(1)** with one hand and, with the other hand underneath the base, twist the end of the charger clockwise **(2)** so it secures into place.
3. Turn the charging base over and feed the charger cable through the cable tidy. The charging base is now ready to use or be wall mounted.
4. To fit the charging base to a wall, firstly find a suitable spot in your household where you'd like to secure your vac. Ensure it's close to a plug but place to the side a little distance away. Check there are no plumbing, electrical or gas supplies behind the area you wish to place the vac.
5. Mark the desired screw hole positions on the wall using a pencil. We recommend that the charging base is fixed above table height for easy access.
6. Use the wall mount fixings supplied only if suitable for your wall type.
7. Screw the wall mount fixings and charging base to the wall.
8. The vac can then be seated on the charging base.

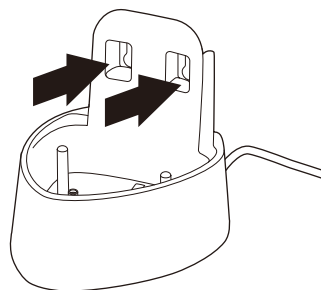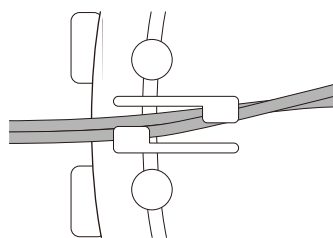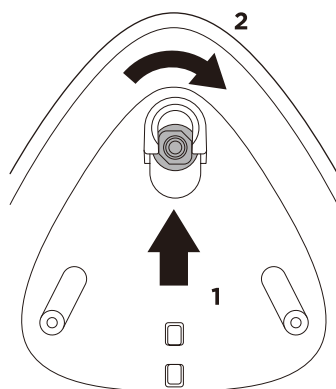


Charging the wet & dry cordless vacuum

Before use we recommend that the vac is charged fully for 4 hours. When first purchased there will be some charge so it may not take the full amount of time to fully charge. Subsequent charging times will vary depending on usage. Once fully charged, the vac has an approximate running time of 20 minutes.


1. Place the charging base on a flat, stable surface or attach it to a wall as shown in the setting up the charging base section of this manual.
2. Align and lower the base of the main body with the charging base and push down until it is secured into place.
3. Pop the charger plug into an electrical socket and turn on the mains power.
4. When charging, the power indicator light will flash with a red colour. Once fully charged the light turns green and stops flashing.

Note: If in use the battery becomes low, the power indicator light will flash for approximately 30 seconds and then shut down. Replace back on the charging base to charge.


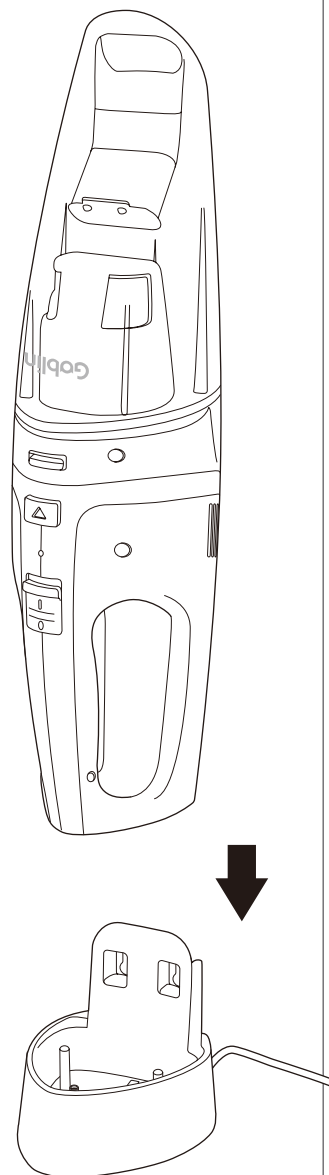


Using the wet & dry vac


The vac can be used to pick up dry debris and dust or small wet spillages. Ensure the vac is set up properly for the application for which it will be used. The attachments are stored in a compartment in the base of the vac's main body. To access them push down the latch and open the compartment door towards you **(1)** and slide the tools out **(2)**.

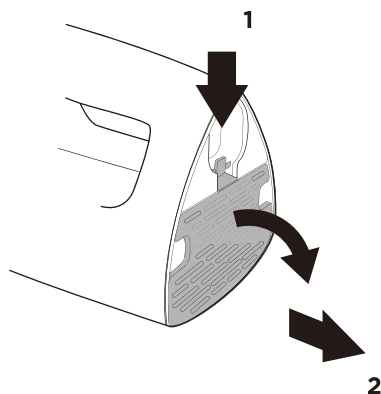

1. Detach the vac from the charging base by lifting it out using the handle.
2. Turn the vac on by pushing the power on/off switch forward, away from you. The power indicator light will illuminate green.
3. Move the nozzle of the vac back and forth over the surface to be cleaned. Don't press hard; allow the vac to suck up any dust and dirt. When finished, turn the power off on the vac and replace it on the charging base/wall mount.
4. To access hard to reach areas, such as the side of a sofa, it is best to use the crevice tool. Simply push the crevice tool into the end of the nozzle. Turn on the vac and vacuum as normal.

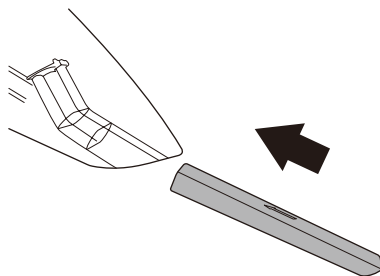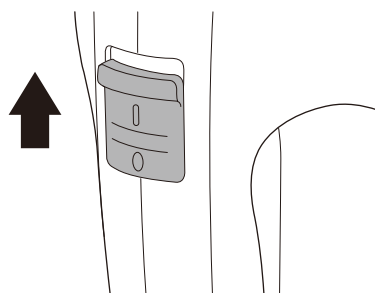


5. When sucking up liquids, the squeegee tool must be used. Fit the squeegee by pushing it into the end of the nozzle. The vac must be held in a position between 40 and 90 degrees with the nozzle pointing down. Don't shake or tilt the vac horizontally as this will cause liquid to get into the motor. Empty the dust bin as soon as finished clearing the spillage.

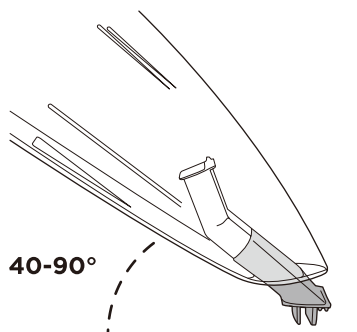

Note: Do not pick up solvent based solutions, inflammable or combustible liquids. Do not exceed the MAX marker on the dust bin. For optimum performance, don't mix wet and dry functions. Ensure the dust bin is empty of any debris before cleaning up a liquid. Before dry vacuuming, the filter and dust bin must be thoroughly dry before use. Always use the correct tool for the type of vacuuming.

For more information about emptying the dust bin and cleaning the filter please refer to the following section of this manual.

6. When finished, turn the power off and place the vac back on the charging base/wall mount. Ensure all parts are dry and the dust bin is empty before storing.

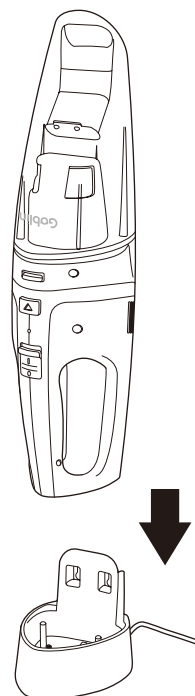

Emptying the dust bin and cleaning the filter

Ensure the vac is switched off and removed from the charging base.

1. Press the dust bin release button **(1)** and pull the dust bin away from the main body **(2)**, keeping the nozzle facing downwards.




2. With the nozzle pointing downwards, pull out the filter and the filter cover. The filter cover has a lug to use to help pull it out of the dust bin.

Place the filter and filter cover aside and empty the contents of the dust bin into a household waste bin. If used to clear up a liquid spillage, pour the contents down the sink.

3. Rinse the dust bin, filter cover and filter under warm water until the water runs clear and leave to dry for 24 hours.

It is important to do this everytime the vac is used to pick up liquid spillages.


4. Once all the parts are thoroughly dry, reassemble the dust bin. First put in the filter cover and push down until it reaches the internal plastic shelving on all sides. Then place the filter back inside the filter cover.

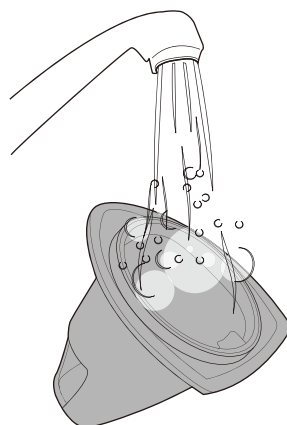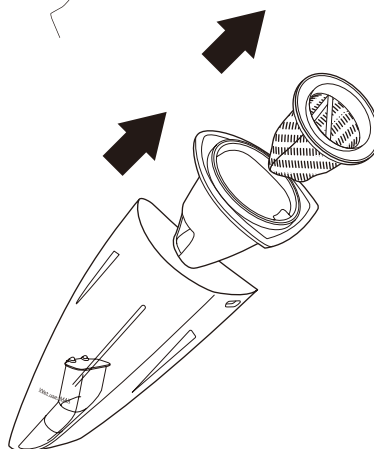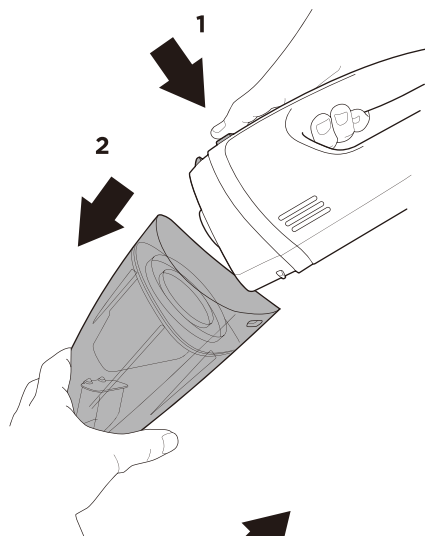

5. Attach the dust bin back onto the main body. It is best to hook the underneath side **(1)** of the vac first before pushing the top section closed **(2)**. Ensure it is completely locked into place.

6. It is important to regularly maintain and clean the filter. A clogged filter reduces suction power and can shorten the life of your vac.

Here is a recommended guide for how often you should clean the filter:

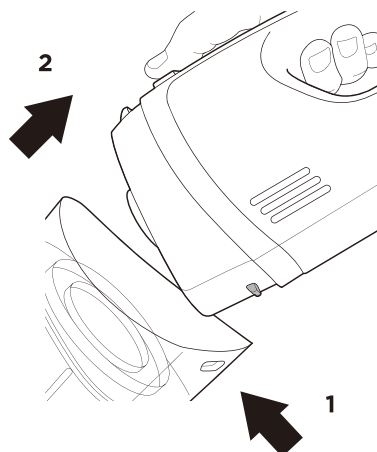

Filter type	Recommended cleaning times
Filter and filter cover	1. Shake out debris when you empty the dust bin. Use a soft dusting brush to gently remove any dust build-up. 2. For dry vacuuming, rinse under warm water once a month as required. 3. Every time the vac is used for liquid spillages, rinse under warm water and dry thoroughly before reassembling.

Clearing a blockage

Ensure the vac is not in the charging base before investigating for a blockage. The vac would only become blocked if the dust bin has exceeded the MAX level, the filter is clogged or a large object has been sucked up.

1. Check the dust bin and empty if necessary.
2. Check the filter and filter cover in the unit, remove any debris/dust and wash if necessary.
3. If the crevice or squeegee tool were in use, detach them from the main body and check for blockages. Remove any blockages.

Troubleshooting

Problem	Possible problem	What to do
The vac won't charge	1. The mains adapter is not switched on. 2. The vac isn't seated properly in the charging base.	1. Switch on at the mains. If still a problem, check the fuse box to see if anything has tripped. 2. Check the end of the charger is fitted in the base properly. Push the vac into the charging base until it is down as far as it will go.
The suction is reduced	1. The nozzle or tool is blocked. 2. The dust bin is full. 3. The filter is blocked.	1. Check the tool and nozzle, remove any blockages. 2. Empty the dust bin. Refer to the section emptying the dust bin and cleaning the filter. 3. Clean the filter. Refer to the section emptying the dust bin and cleaning the filter.

Technical specification

Input voltage for adapter: 100-240V AC

Output for adapter: 9.6V DC 0.5A

Rating for Vacuum Cleaner: 7.4V DC

Battery specifications: Lithium battery 7.4V 2000mAh

After being fully charged, the appliance will automatically enter standby mode(low power consumption mode).

The power consumption in standby mode is 0.02W.

Goblin®

Your 28 day no quibble refund

If you're not delighted with your product, simply bring it back within 28 days for a no quibble refund. Don't forget to include all of the product's original components (for example remote control, power cable or stand) and packaging, along with your receipt or other proof of purchase.

1 year guarantee

This product is covered by a full 1 year Asda guarantee from the day you buy it. In the unlikely event that your product is faulty or you are simply struggling to set it up, don't worry - here's what you should do.

1. First call our Customer Helpline as they may be able to help you with the problem 2. If the problem can't be resolved, you will receive a reference number. 3. Take the reference number, along with the item, all its components and your receipt, to your nearest store for a full refund.

Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product site code.

Call

0333 600 7700

Write

ASDA, Leeds LS11 5AD.

Product name: **GHVWD101B-20 Wet & dry handheld cordless vac**

Product site code: **15A.09.22.163**

For PDF copy of this manual please scan
QR code and search for model number



ASDA
technical support
0333 600 7700

Copyright

© 2020 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA,
Leeds LS11 5AD/ASDA,
Antrim BT41 4GY.

Company number 00464777

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.



Goblin®