

GH Dressing Table

Assembly Guide


WARNINGS:

• IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

- **Choking hazard:** Unassembled parts may be a choking hazard to children 3 years and younger.
- The hardware contains small screws with sharp points. Keep unassembled parts out of the reach of small children due to possible risk of injury. **Adult assembly required.**
- Please check the assembly of the toy regularly and frequently tighten the bolts. Do not over tighten. If regular maintenance is not carried out the product may cease to function properly.
- Do not allow children to sit, stand, play or climb on the top surface. Failure to do so may cause the product to become unstable.
- Your toy is only meant to be assembled once.
- After you have assembled your toy do not dismantle it again as this may weaken the joints and screws leaving the toy unsafe for use.
- Use the toy on a flat level surface only. It is not suitable for outdoor use. The coatings will become scratched and product damage may occur.
- Please do not use the seating if any part is broken, damaged or missing and use only spare parts approved by the manufacturer.
- Dresser - Max load 30 kg. Stool - Max child weight 30 kg.
- DO NOT place this product near a window as it can be used as a step by the child and cause the child to fall out of the window.
- DO NOT place this product near a window where cords from blinds or curtains could strangle a child.
- Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.

You will need...

A Philip's / Cross-head screwdriver for fittings supplied.

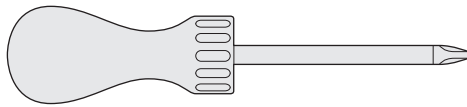


Getting started...


1. Unpack the components and check against the list below.
2. Place the components on a clean surface to prevent them from being damaged.
3. After you have assembled your toy, dispose of all packaging.

You will have...


A x1

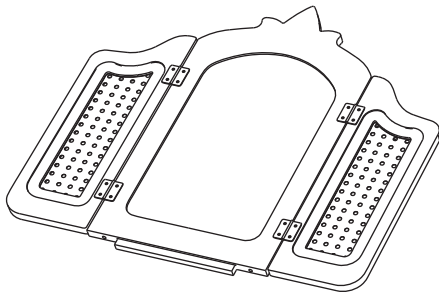


B x1

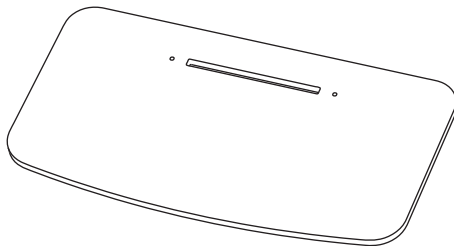


C x1

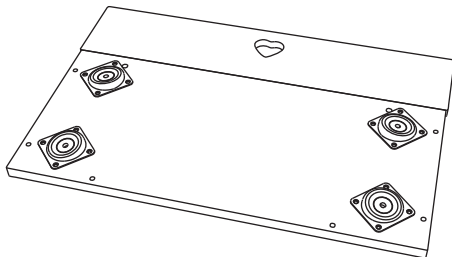


D x1

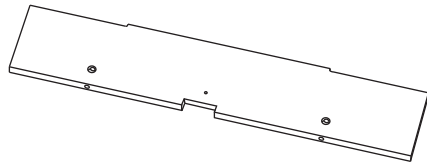


E1 x1

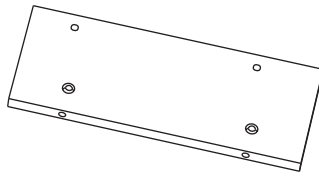


E2 x1

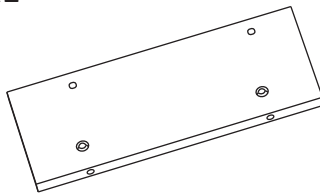


F x1

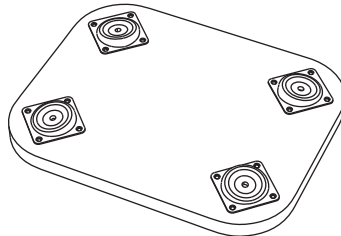


G x4

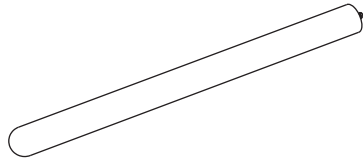

H x4

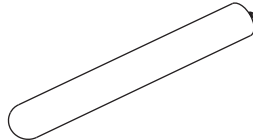


I x4

 


M4x22

 J x8




M4x35

K x1

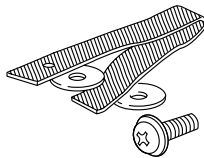


Assembly...


Step 1

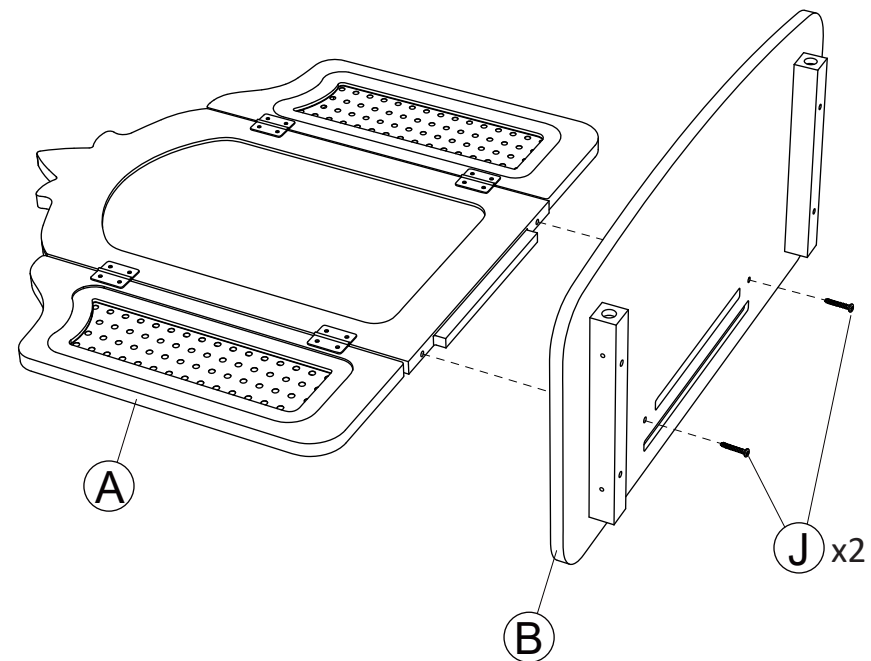


Step 2

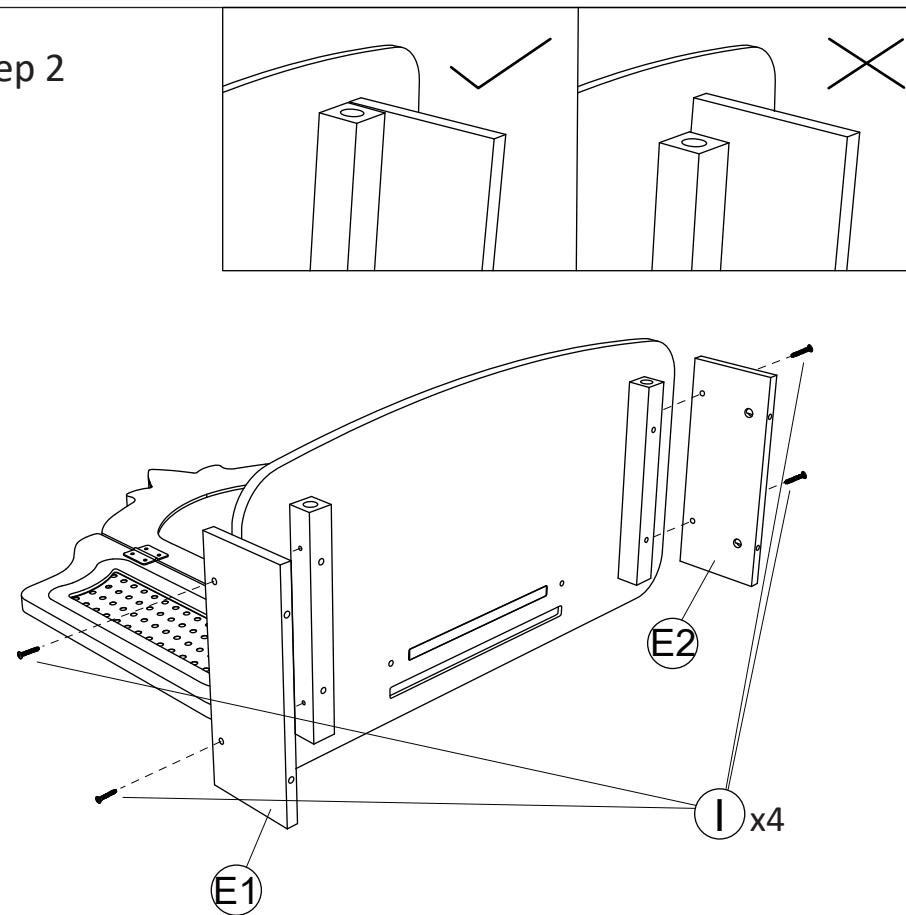


Step 3

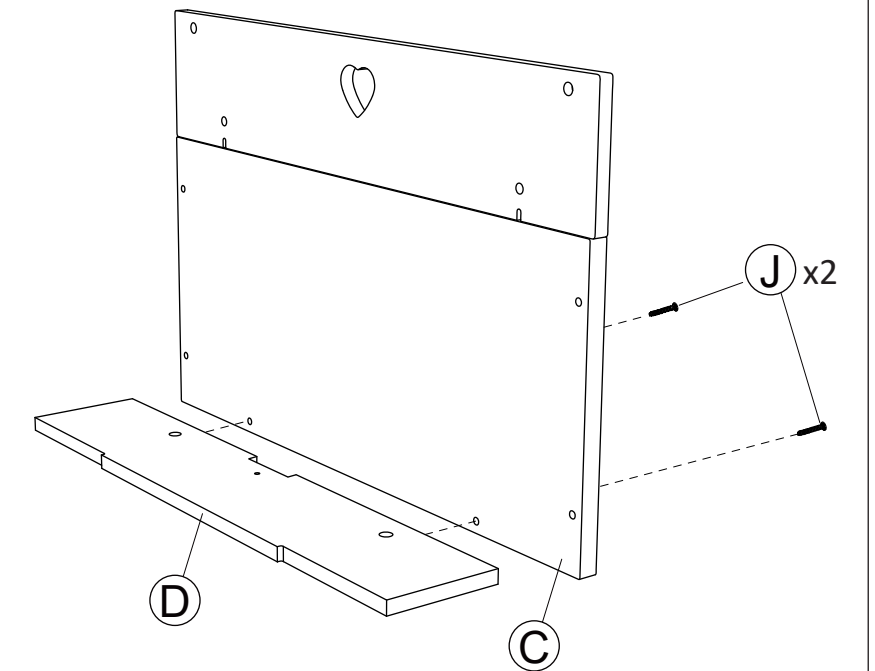

Step 4

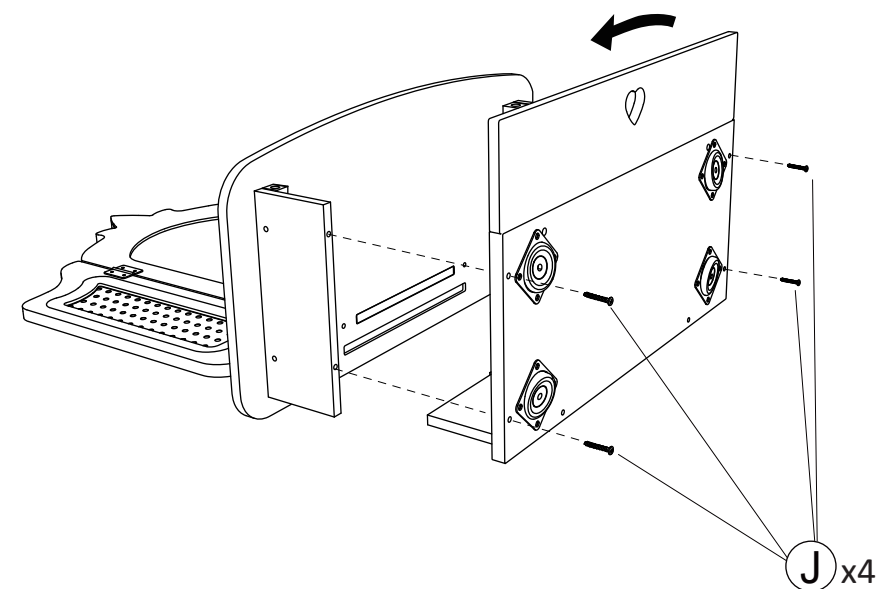


Step 5

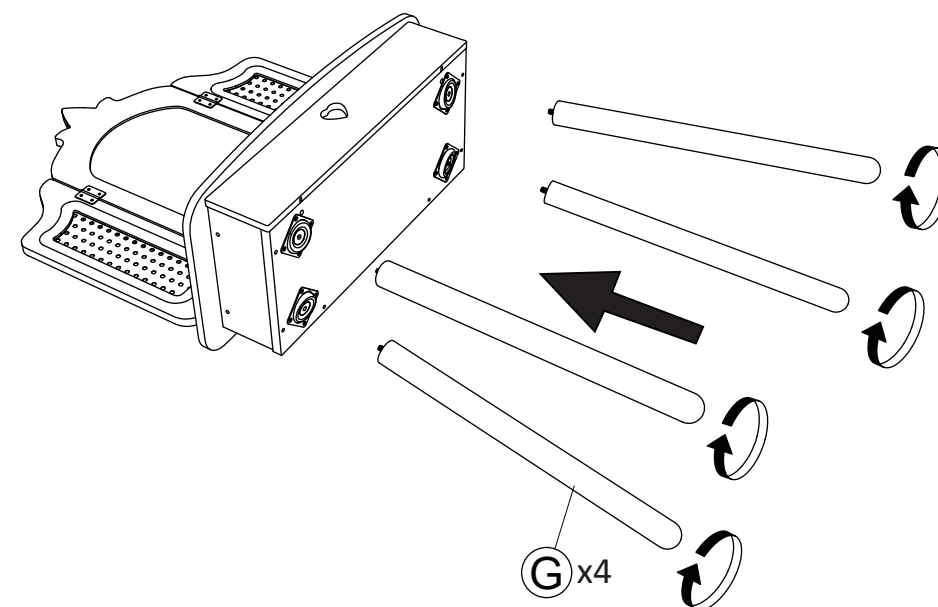


Please check the assembly of the toy regularly and frequently tighten the bolts. Do not over tighten. If regular maintenance is not carried out the product may cease to function properly.

Step 6

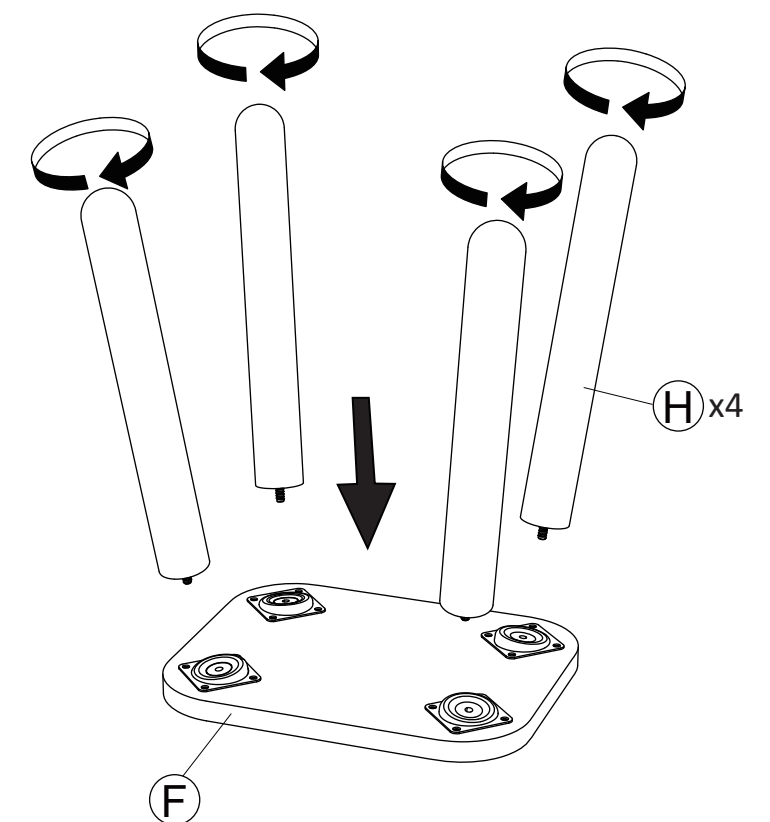


Step 7

Please use the correct fixings for the wall type you are securing to.

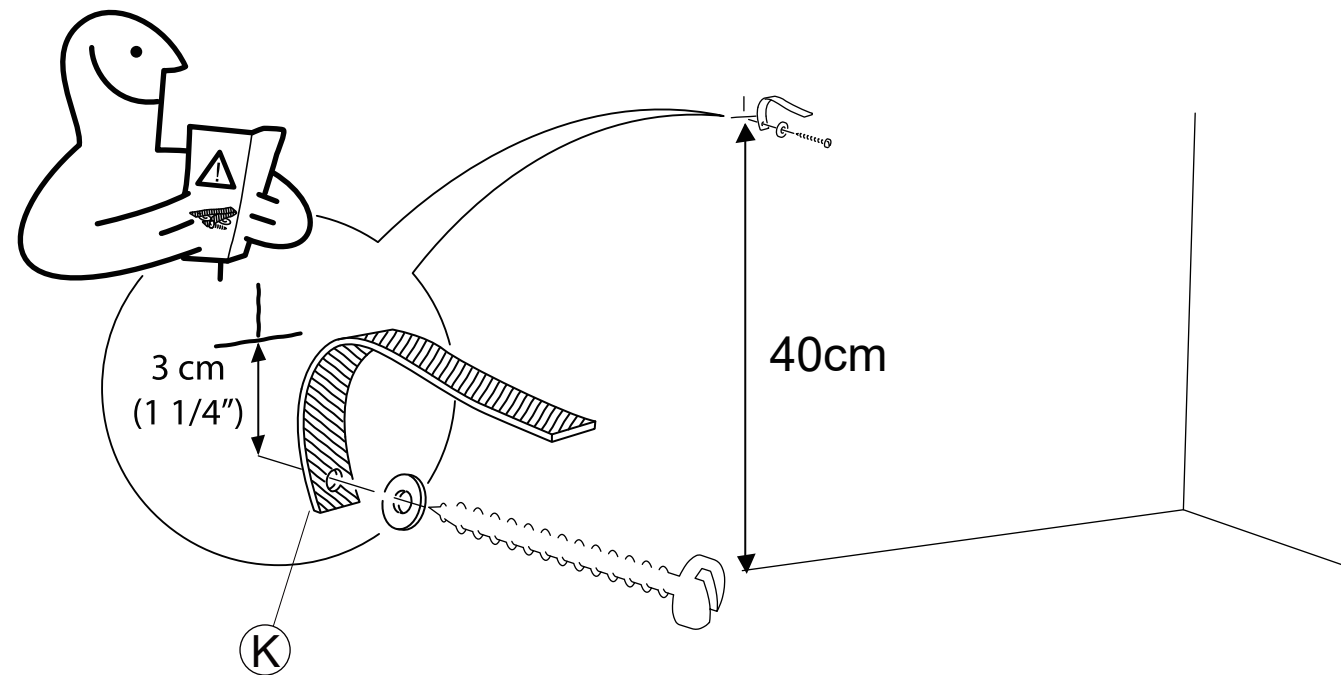

Step 8

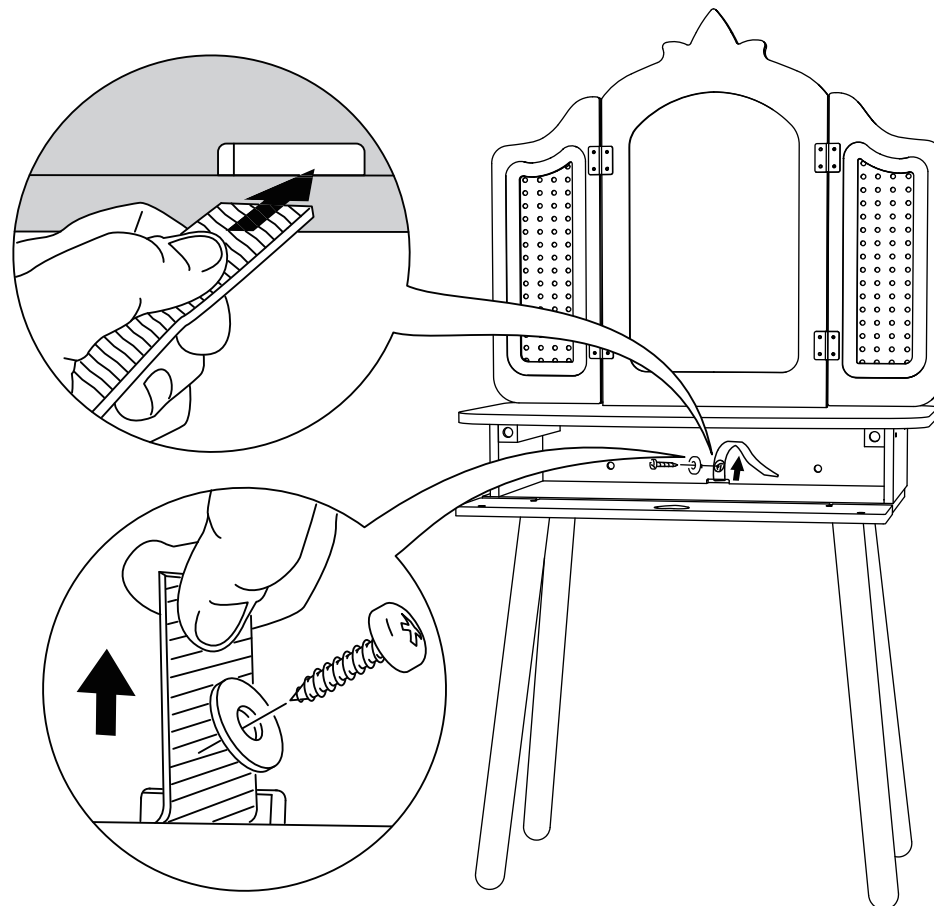

CARE INSTRUCTION

- Clean with a damp cloth and allow to air dry.

TECHNICAL INFORMATION

- Dresser Table - Tested in accordance with FRQG and EN71 (excluding structural tests).
- Stool - Tested in accordance with EN17191 and EN71 (excluding structural tests).
- Play Accessories - Tested in accordance with EN 71, and UKCA/CE marked.

There are many more wooden role-play toys to purchase and enjoy
www.george.com



Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product name and product code.

Call
0800 952 0101

Write
Asda Stores Ltd.
Asda House, Southbank, Great Wilson Street,
Leeds LS11 5AD / Antrim BT41 4GY

Product name: GH Dressing Table