

60122472  
GH TEEPEE TENT  
Assembly Guide

**IMPORTANT: RETAIN FOR FUTURE REFERENCE**

## WARNINGS:

### About this product:

- Inspires imaginative play and improves gross motor skills
- Supports the development of communication and social skills

### Care Instructions:

- Examine the toy regularly for wear before giving it to a child.
- Discard or replace if the toy is damaged.
- Regularly check and tighten fastenings/fittings.
- Suitable for use on flat indoor surfaces only, which are clear from obstacles or potential hazards.
- Hand wash fabric and air dry.
- Store in a dry place.
- Keep out of direct sunlight.

### Instructions for Use:

- Attach the top section poles (with the hole for threading at the top) to the base poles using the connectors.
- Thread the poles into the pockets at each corner of the fabric teepee.
- Thread the fabric ties through the holes at the top the poles to pull the fabric up/tight, then wrap around all four poles to pull them together before tying to secure.
- Adult assembly required!

### WARNING!

- Not suitable for children under the age of 3 years - choking hazard.
- Components of this product may break off into small parts presenting a choking hazard.
- Long cord. Strangulation hazard.
- To be used under adult supervision.
- Conforms to EN71.
- Please retain this information for future reference.

# Getting started...

1. Unpack the components and check against the list below.
2. Place the components on a clean surface to prevent them from being damaged.
3. After you have assembled your toy, dispose of all packaging.

## You should have...

### Components

Regularly check that the product is not damaged. If the product is damaged dispose of immediately.

**A** x4




**B** x4




**C** x4




**D** x1

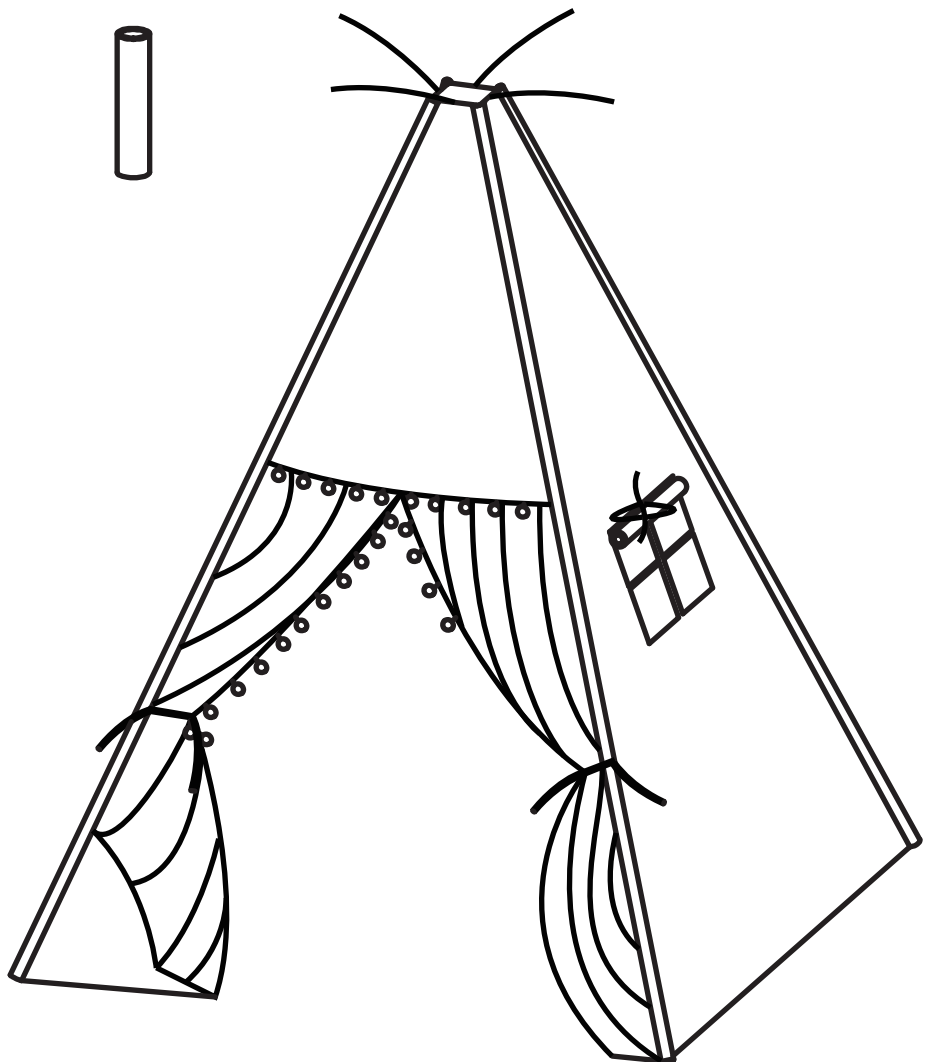


Step 1

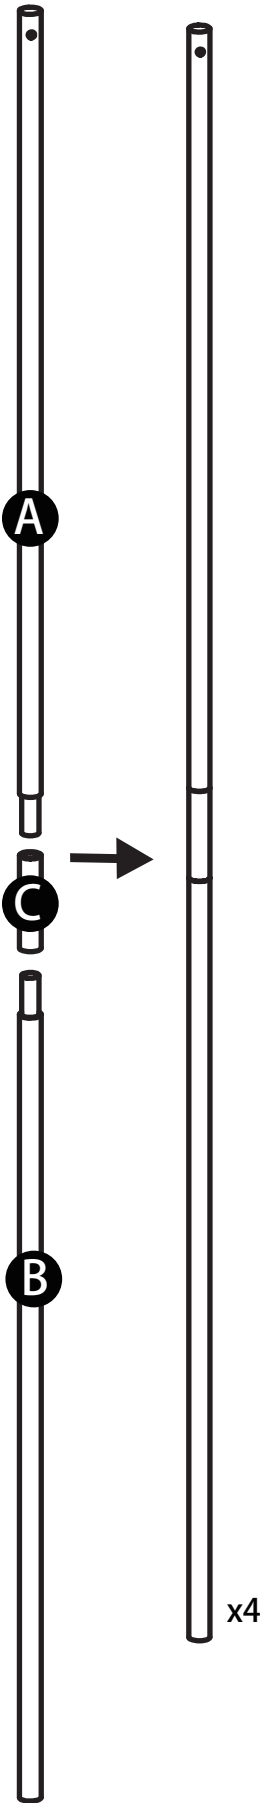

Step 2

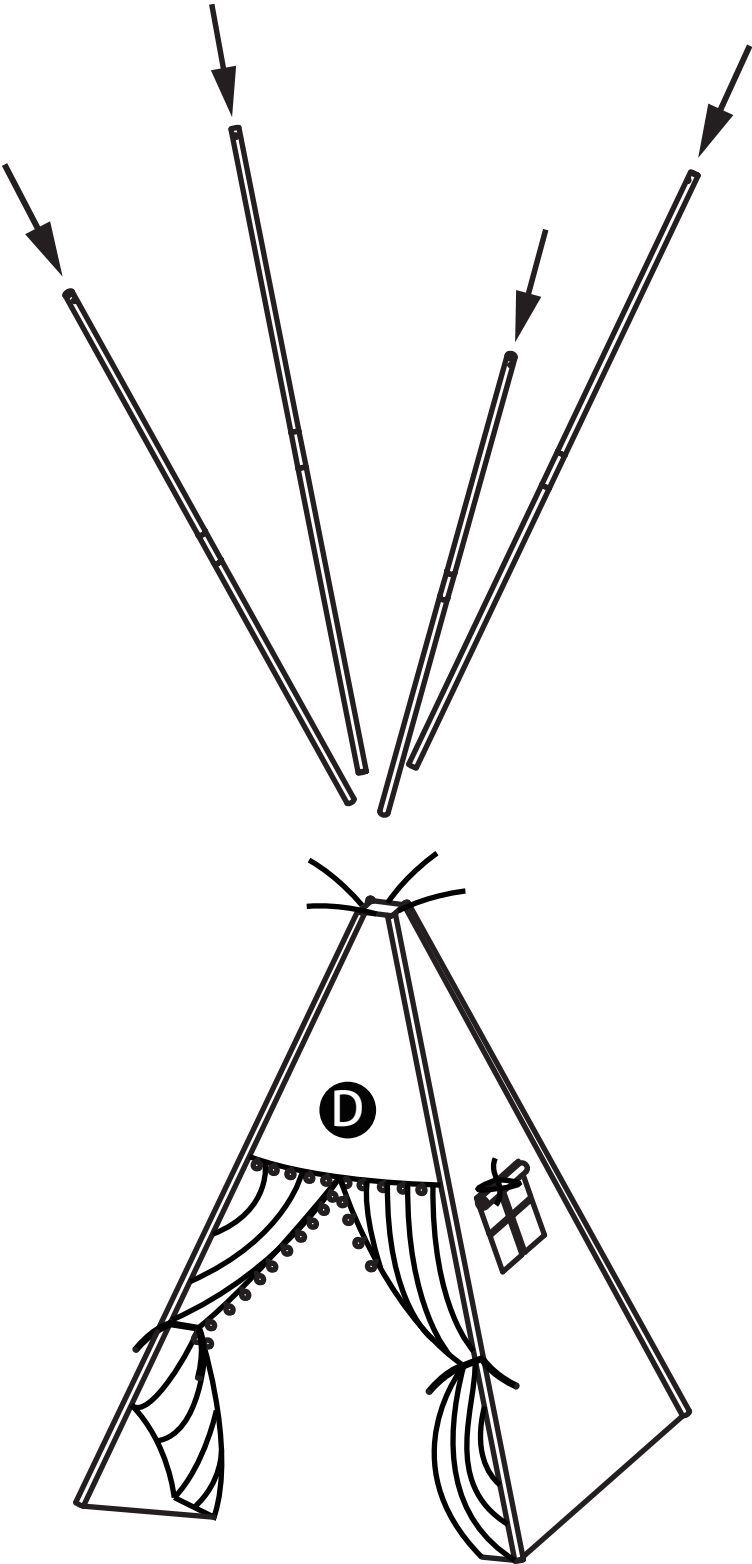

Step 3

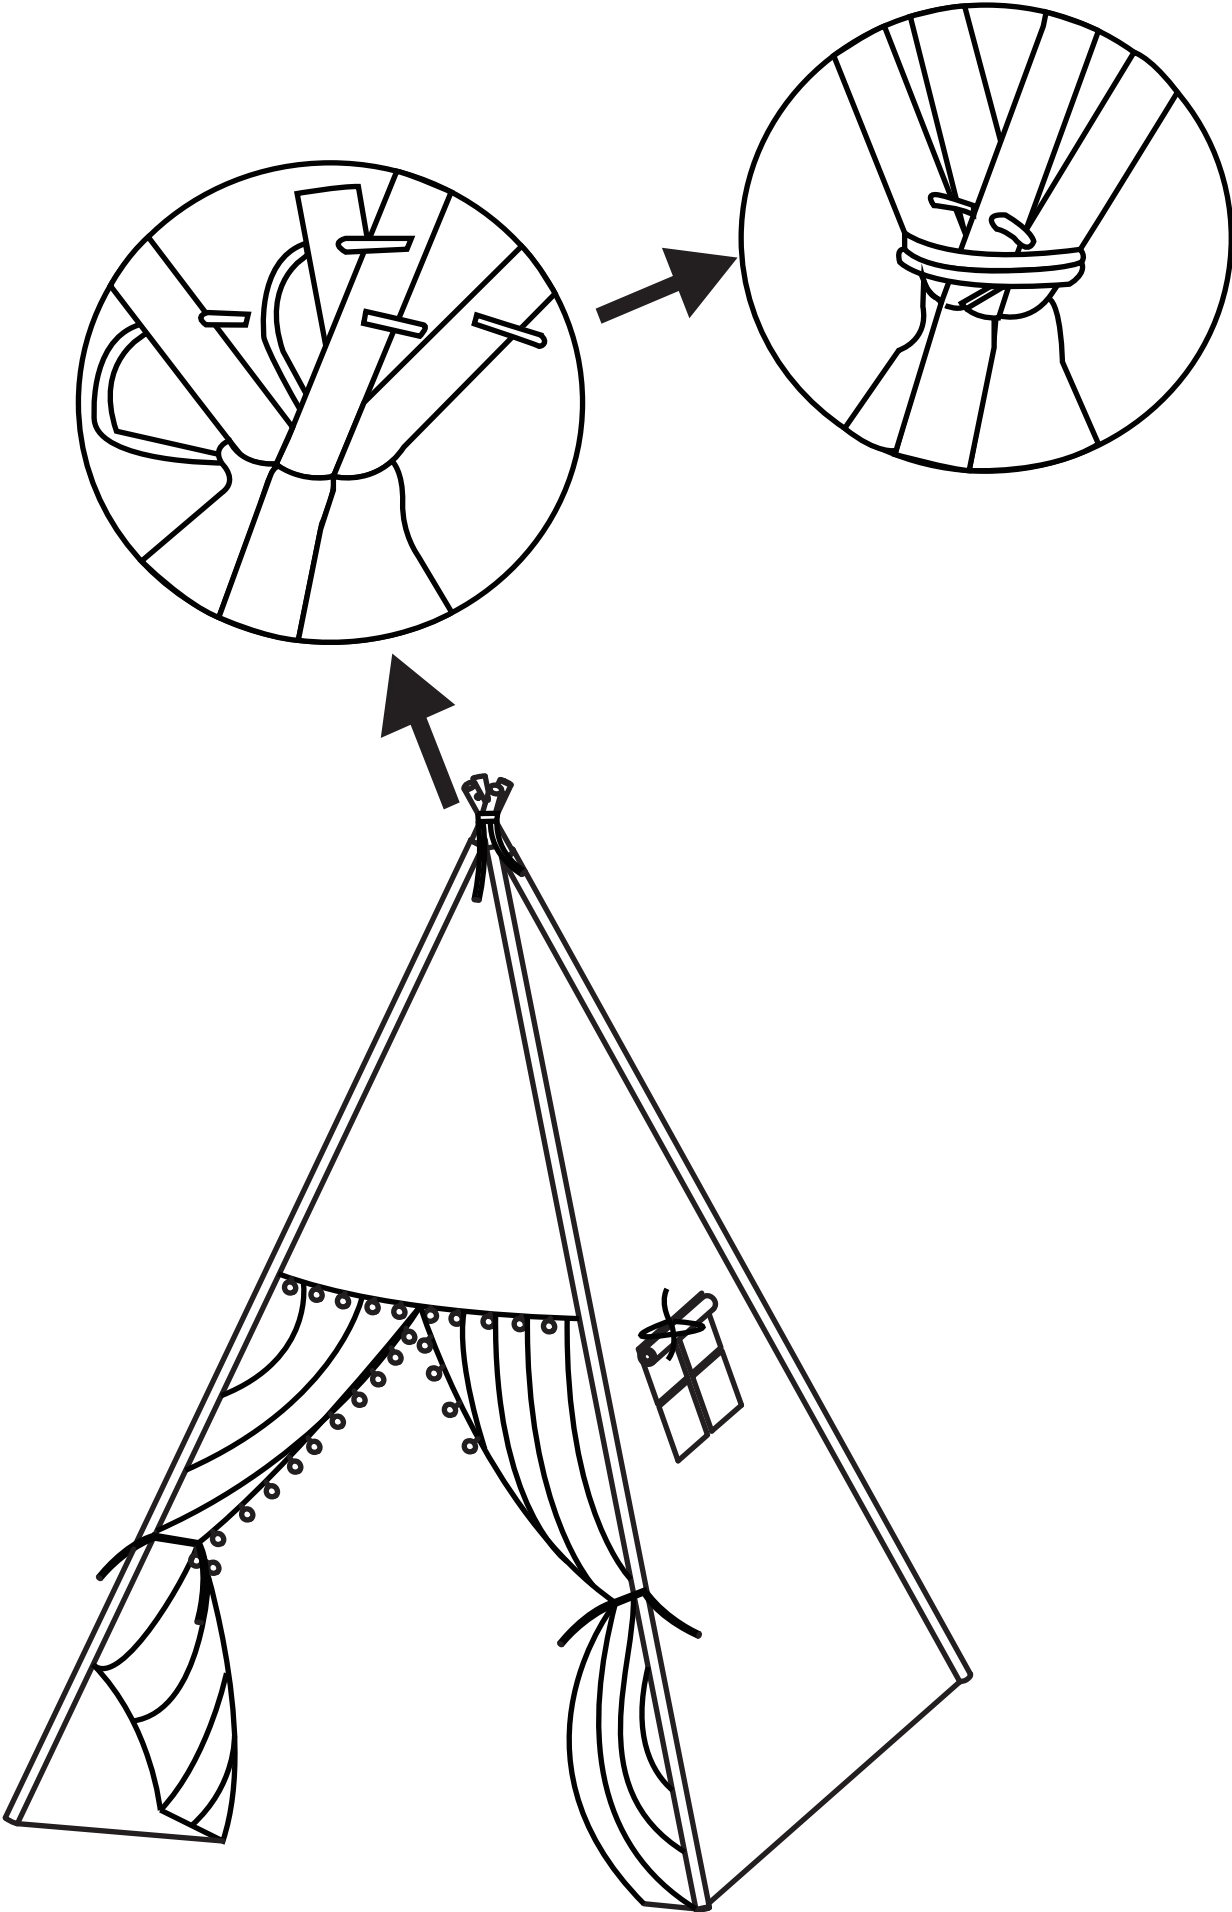

# There are many more wooden role-play toys to purchase and enjoy

**100DAY**  
**SATISFACTION**  
**GUARANTEE**

If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund. UK Mainland stores only. Excludes franchises.

The guarantee excludes flat pack furniture, which cannot be returned if it has been partly or fully assembled unless faulty or mis-described. Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described

**Need  
something  
else?**

**www.GEORGE.com**

We have a wide range of accessories and other products that can be ordered direct to your door.

## Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product name.

**Call 0800 952 0101**

## Write

Asda Stores Ltd. Leeds, LS11 5ad/Asda  
,Antrim, BT41 4GY

Product name: 60122472 GH TEEPEE TENT

Product spec code: 506308997216.2025

## Copyright

© 2017 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

Asda Stores Ltd. Leeds, LS11 5ad/Asda  
,Antrim, BT41 4GY

