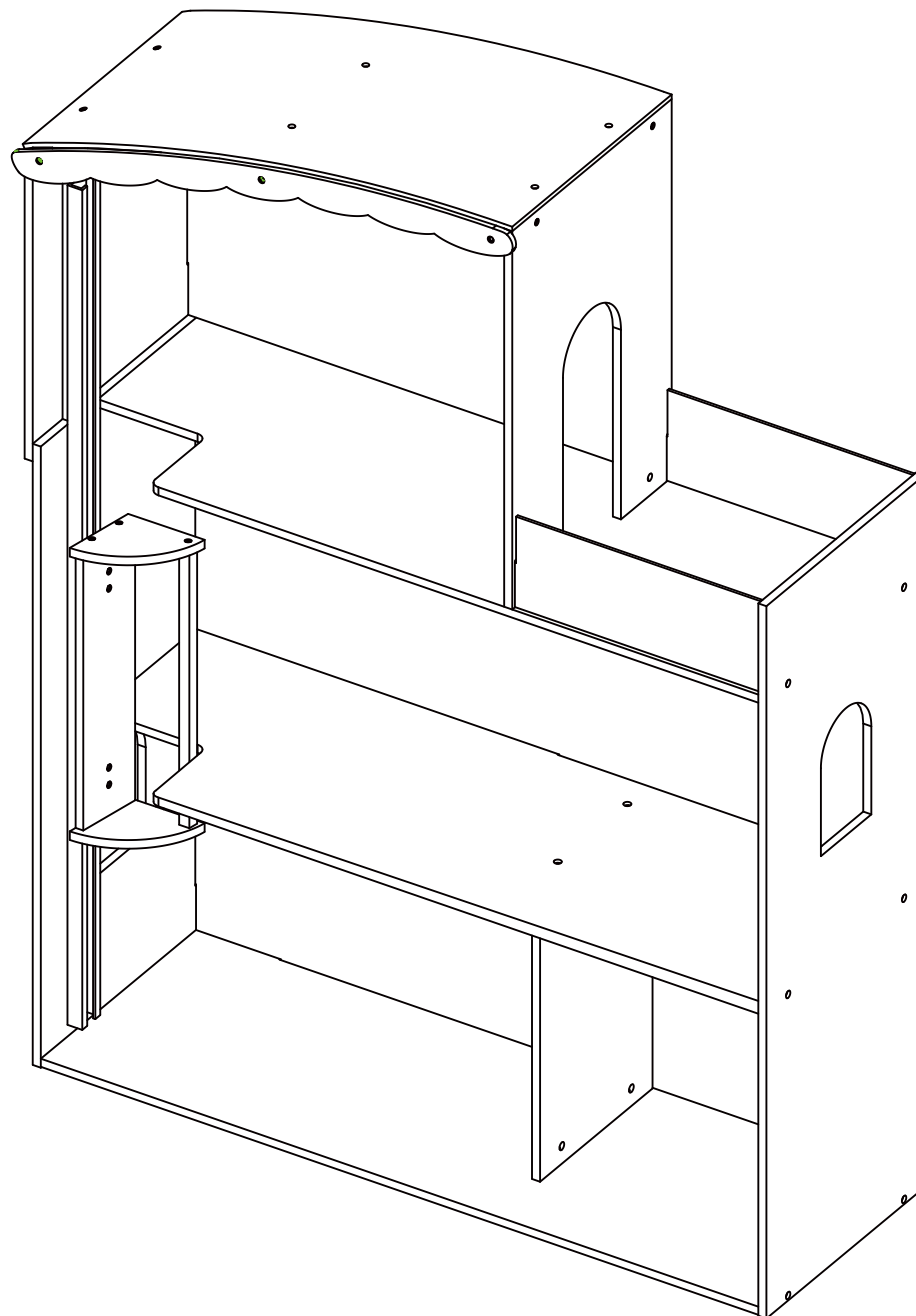 


George.
home



54146

Wooden Mansion

Assembly Guide

IMPORTANT: RETAIN FOR FUTURE REFERENCE

WARNINGS:

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND RETAIN FOR FUTURE REFERENCE.

Assembly to be carried out by a competent adult only.

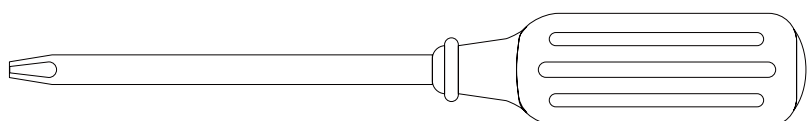 
- Use under direct adult supervision.
 - The hardware contains small screws with sharp points. Keep unassembled parts out of the reach of small children due to possible risk of injury.
 - **WARNING!** Not suitable for children under the age of 3 years. Components of this product may break off into small parts presenting a choking hazard.
 - Choking hazard: Unassembled parts may be a choking hazard to children 3 years and younger.
 - To avoid the danger of suffocation, keep any bags or packaging away from babies and children. Any packaging or bags are not part of the toy and must be disposed of immediately before assembling the toy.
 - Do not allow children to sit, stand, play or climb on the top surface as this may cause the product to become unstable.
 - Do not use this item if any components are missing or damaged.
- Your toy is only meant to be assembled once.
- After you have assembled your toy, do not dismantle it again as this may weaken the joints and screws, leaving the toy unsafe for use.
 - Regularly check that all of the screws are fully tightened (but do not over-tighten).
 - Use the toy on a flat level surface only.
 - Please check the assembly of the toy regularly and frequently tighten any screws or bolts. If regular maintenance is not carried out, the product may cease to function properly.

Getting started...

1. Unpack the components and check against the list below.
2. Place the components on a clean surface to prevent them from being damaged.
3. After you have assembled your toy, dispose of all packaging.


You will need...

Cross head / Philips screwdriver
suitable for use with the
screws provided.



Using barrel nuts and long bolts

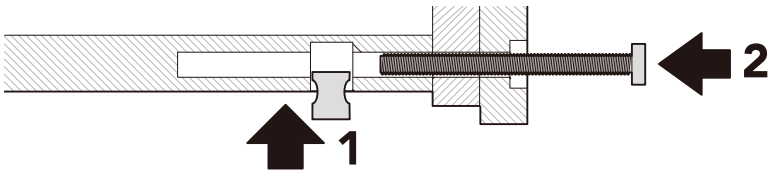  
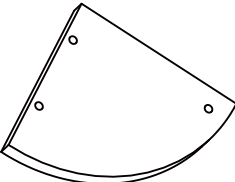 
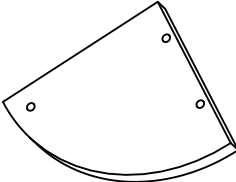 

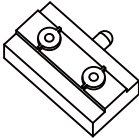 
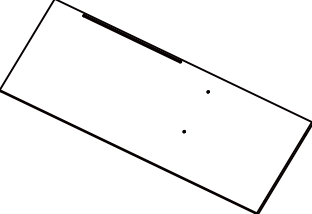 
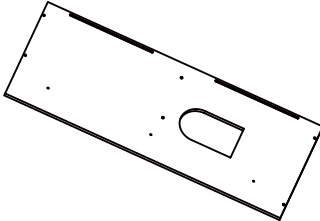 
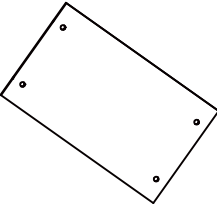 
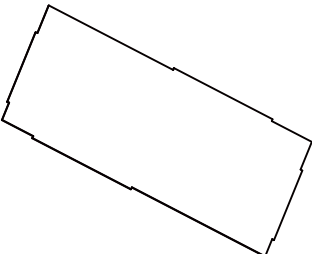 
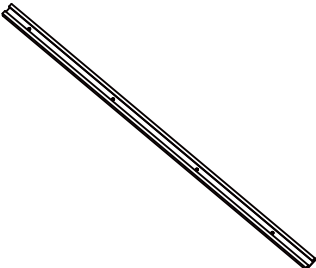 
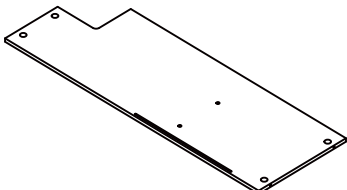 
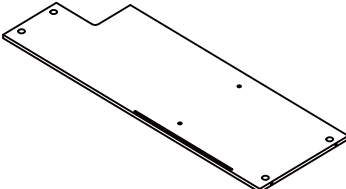 
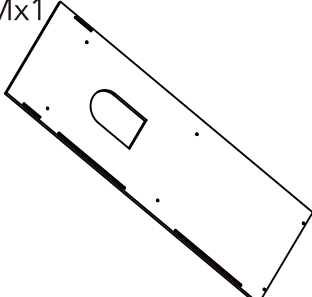 
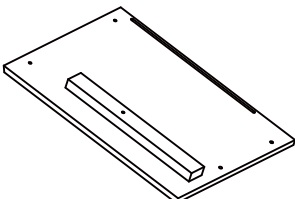 
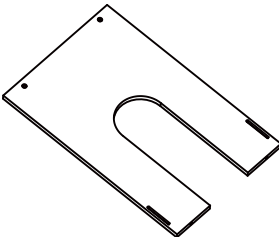 
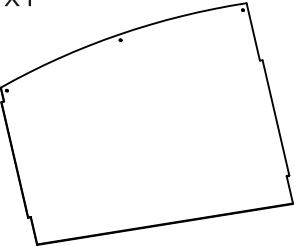 
Unscrew the barrel nuts from the long bolts before beginning assembly.
Slot the barrel nuts (**L1**) into the larger holes in the rails or bases (**1**), ensure the slot in the top of the barrel nut is facing outwards so you can rotate it with a screwdriver if needed.
Align the holes in all of the components then slot the long bolts (**K1**) through the holes (**2**). Tighten the long bolts into the barrel nuts using a cross-head screwdriver.



IMPORTANT: You may find it easier to assemble your toy if you only half tighten the bolts until the product is fully assembled.






















You should have...

Components

Ax1 	Bx1 	Cx1 	Dx1 
Ex2 	Fx1 	Gx1 	Hx1 
I1x1/I2x1 	Jx1 	Kx1 	Lx1 
Mx1 	Nx1 	Ox1 	Px1 

You should have...

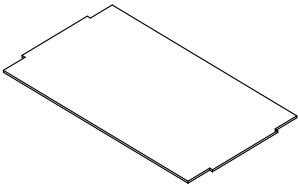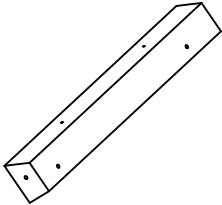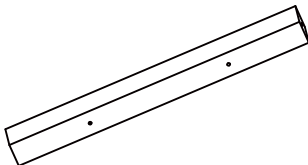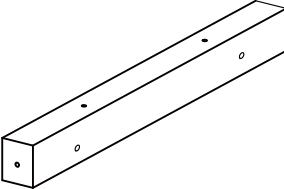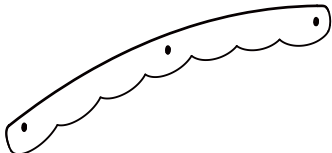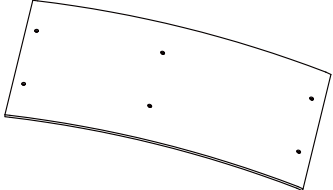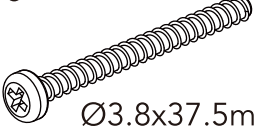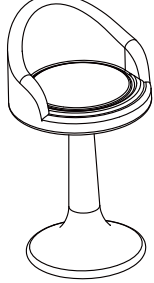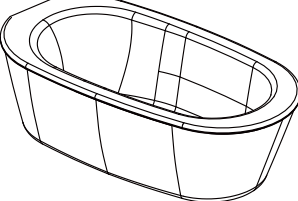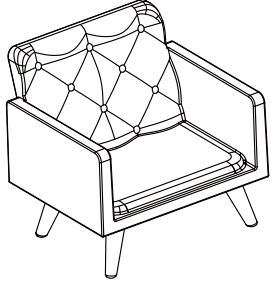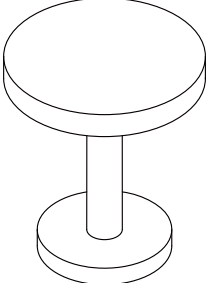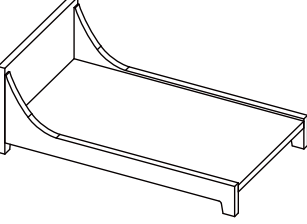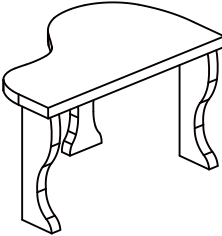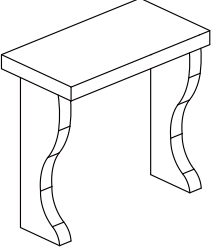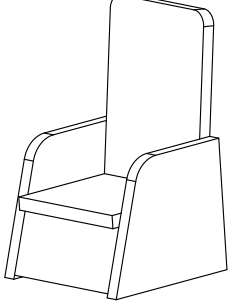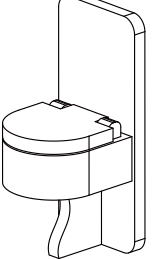                    
Components

Qx1 	Rx1 	Sx1 	Tx1 
Ux1 	Vx1 	Wx4  Ø3x16mm	Xx18  Ø3.8x37.5mm
Zx22  Ø3.5x21mm	A1x4  Ø3x10mm	A2x2 	A3x1 
A4x2 	A5x1 	A6x1 	A7x1 
A8x1 	A9x1 	A10x1 	A11x1  A12x1 


How to...

...prepare your toy for playtime

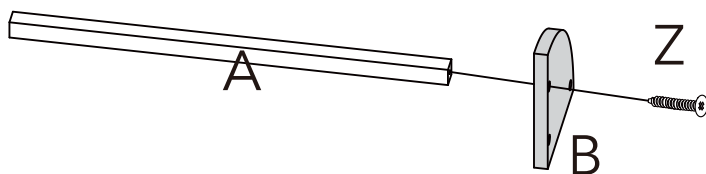 
Step 1



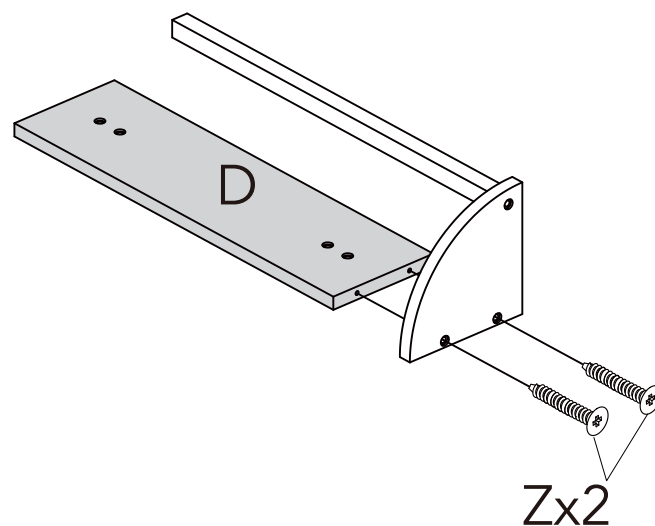 
Step 2



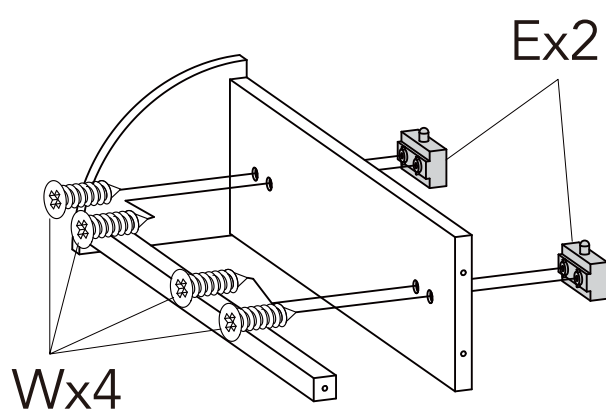 
Step 3



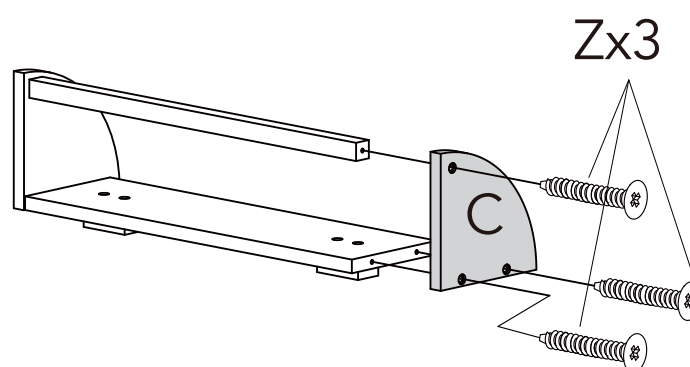 
Step 4



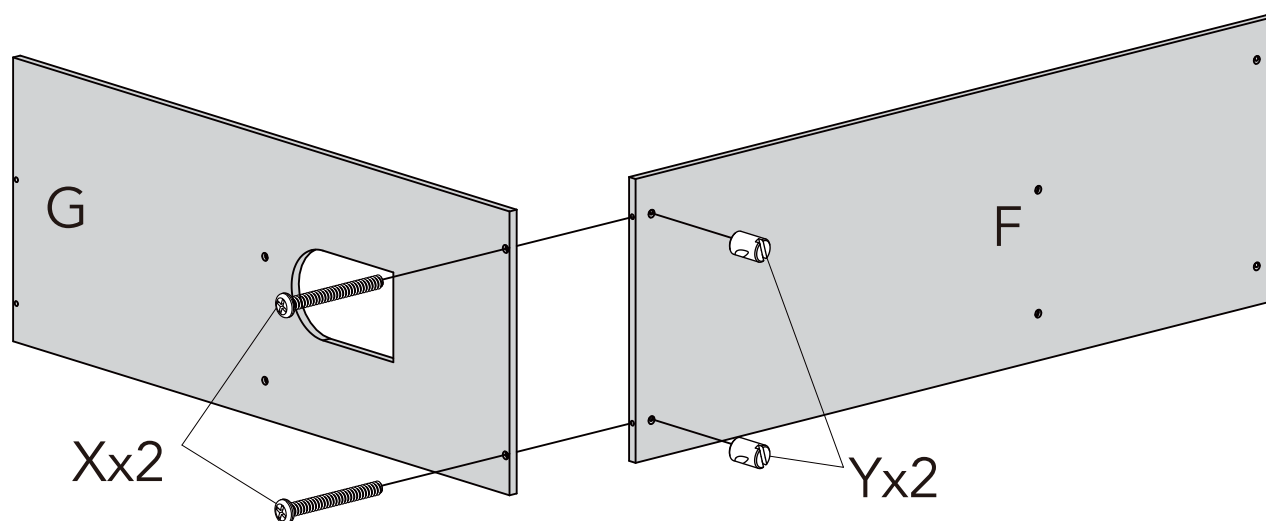 
Step 5



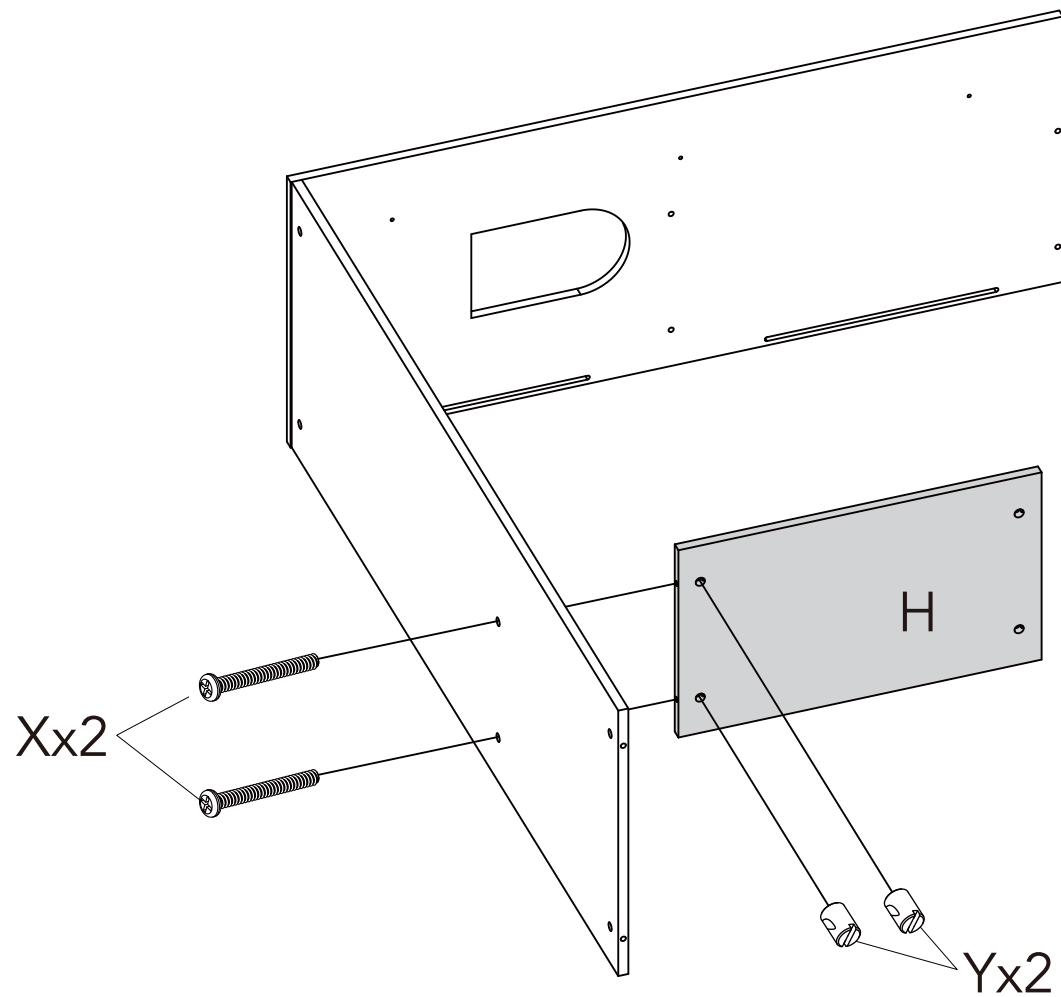 
Step 6



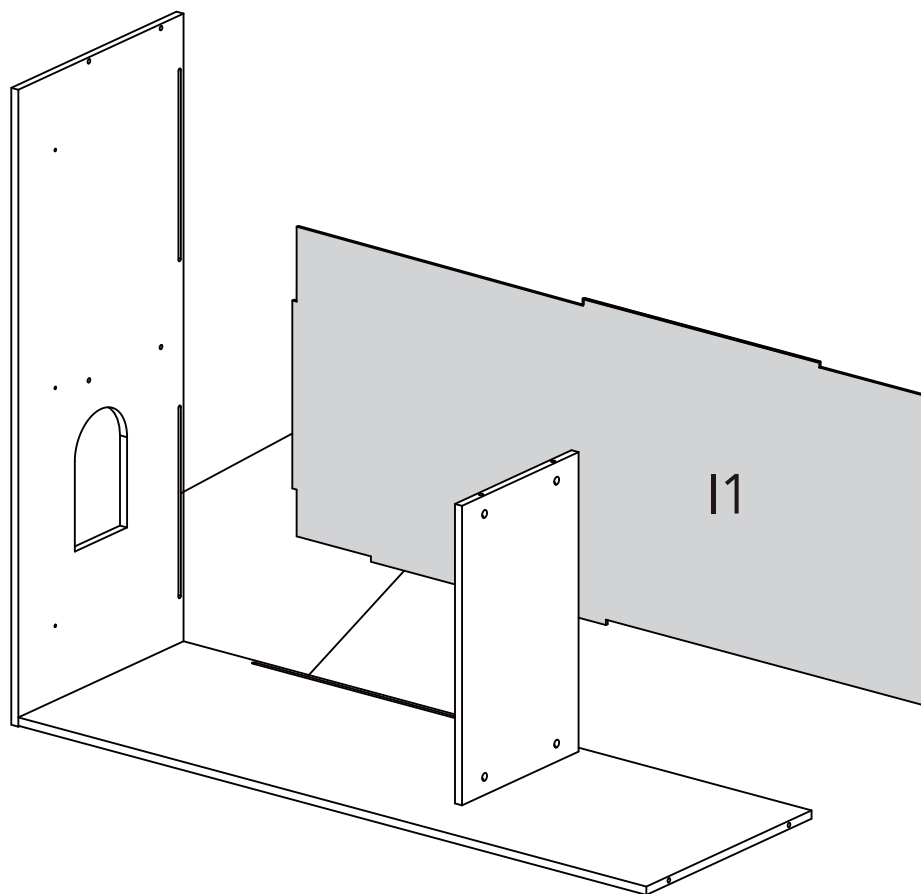 
Step 7



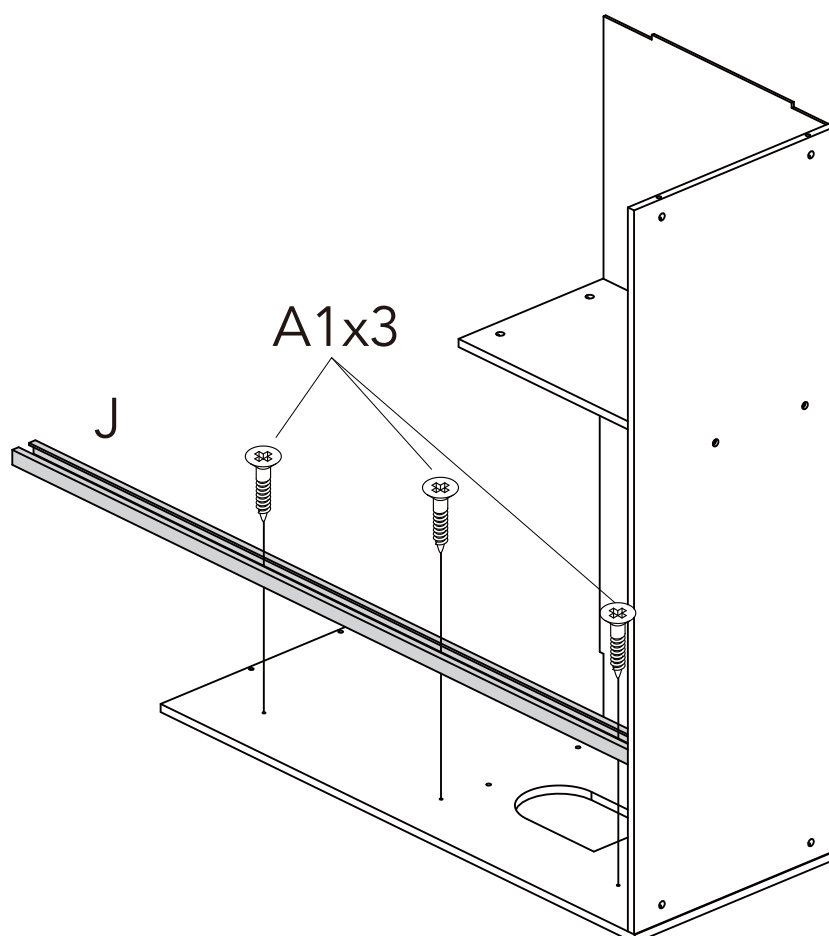 
Step 8



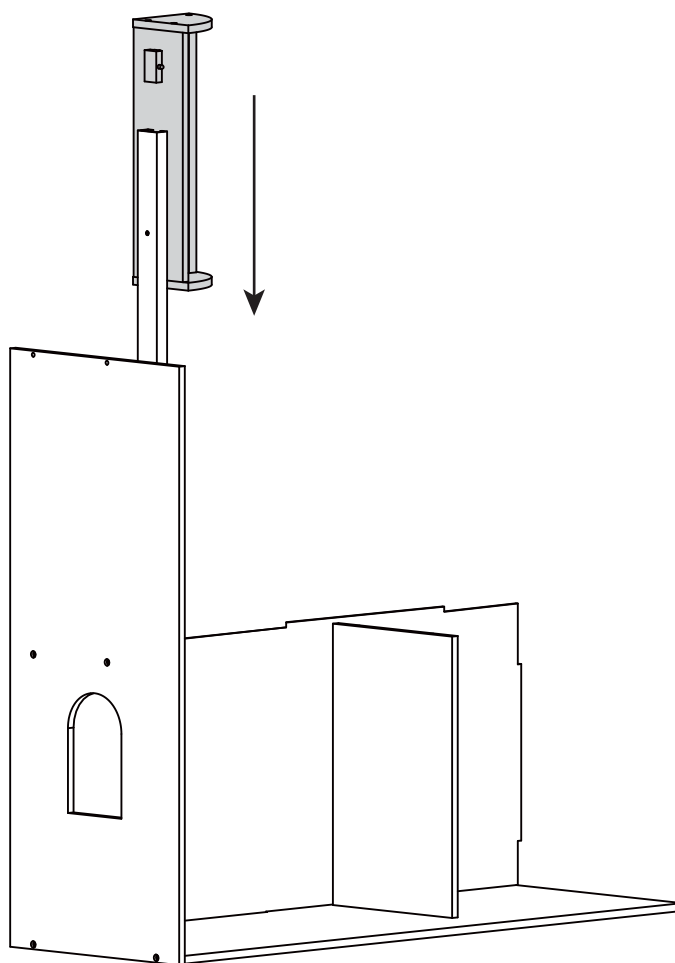 
Step 9



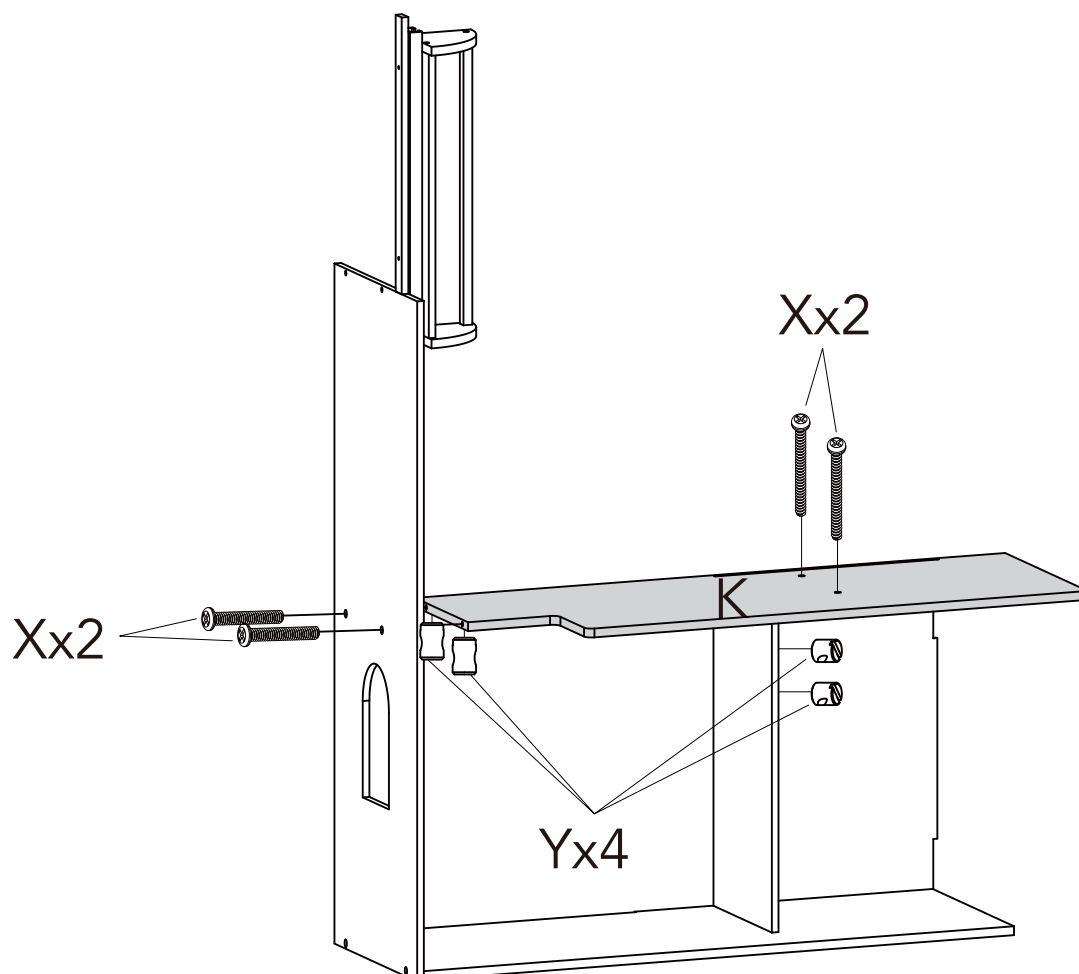 
Step 10



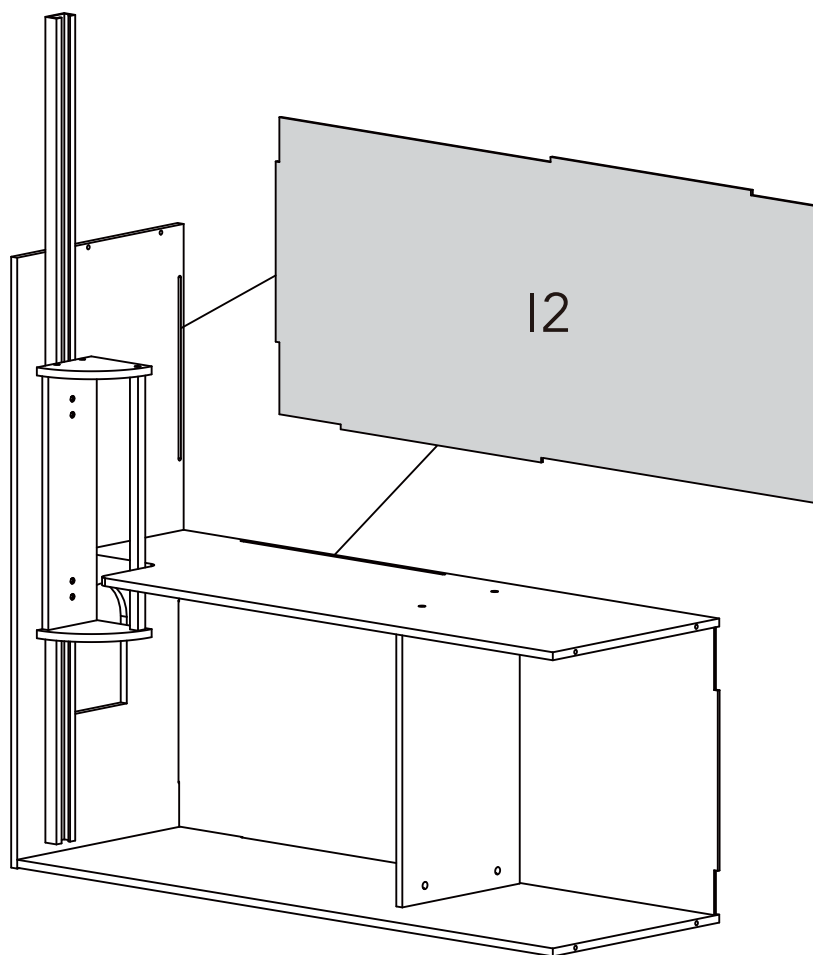 
Step 11



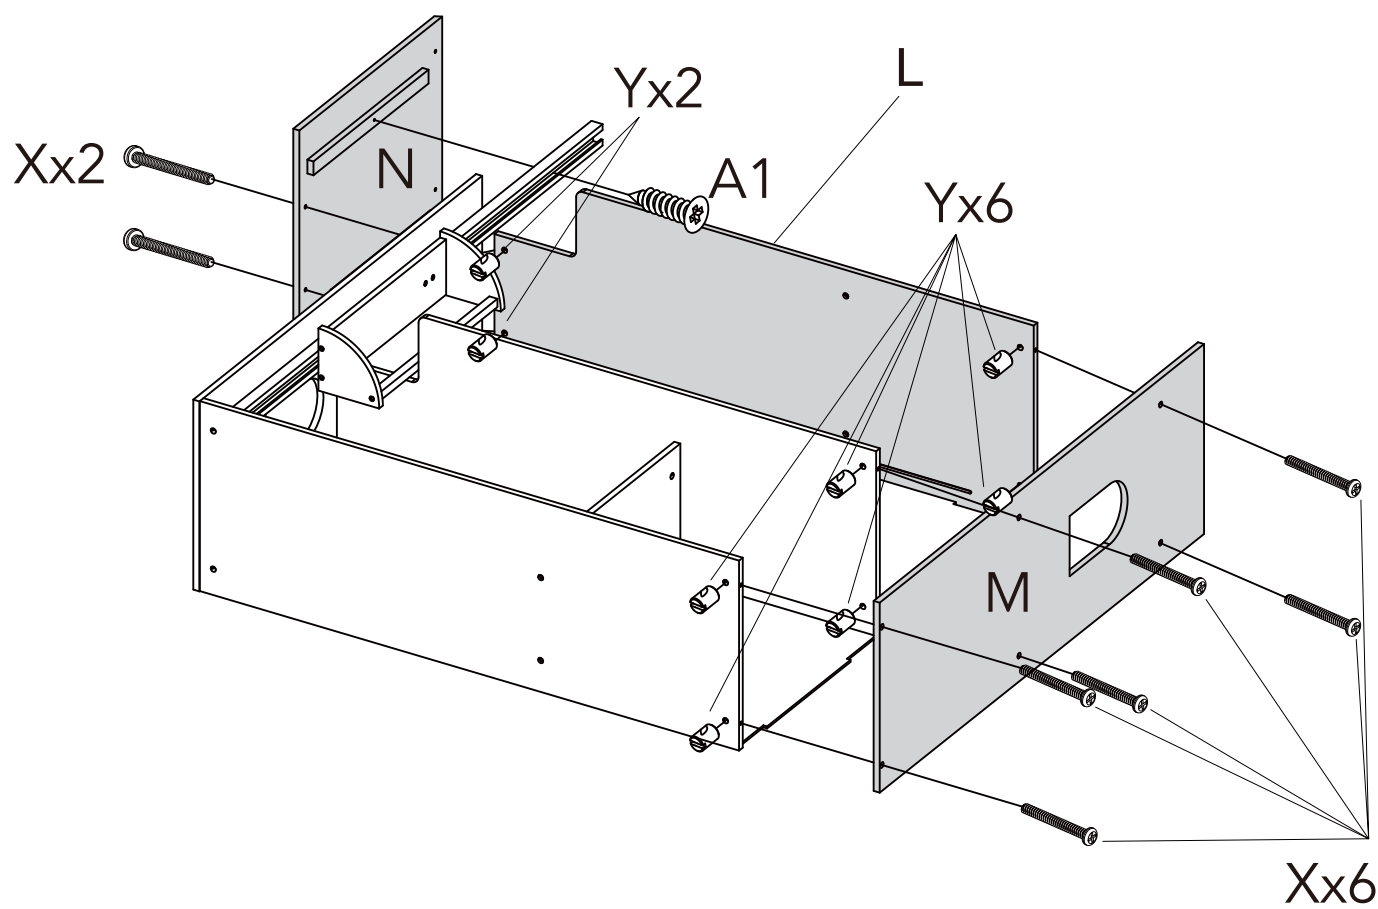 
Step 12



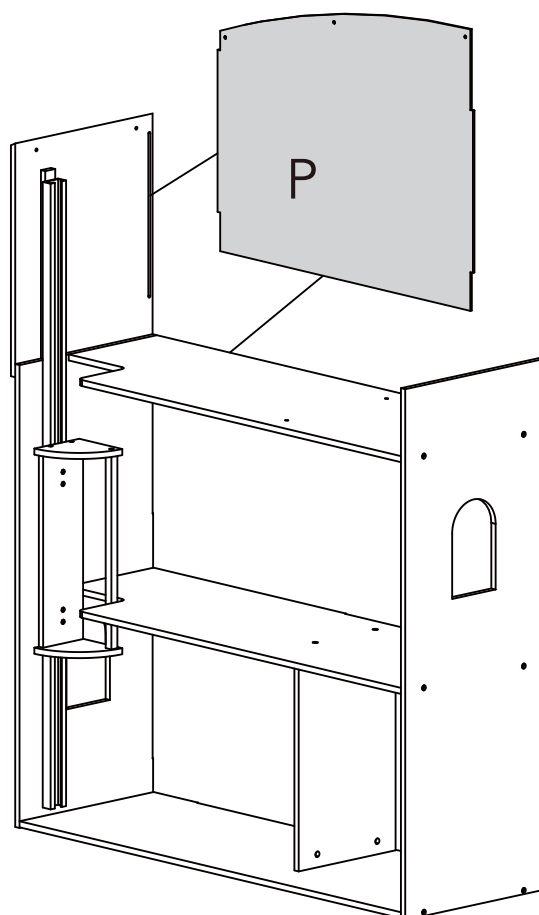 
Step 13



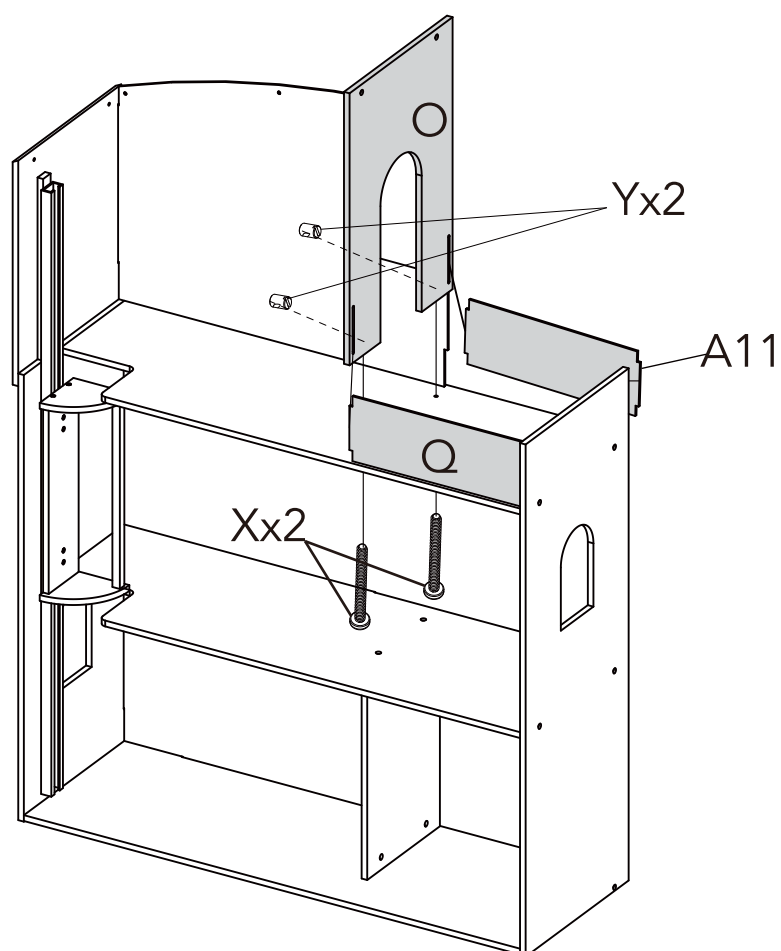 
Step 14



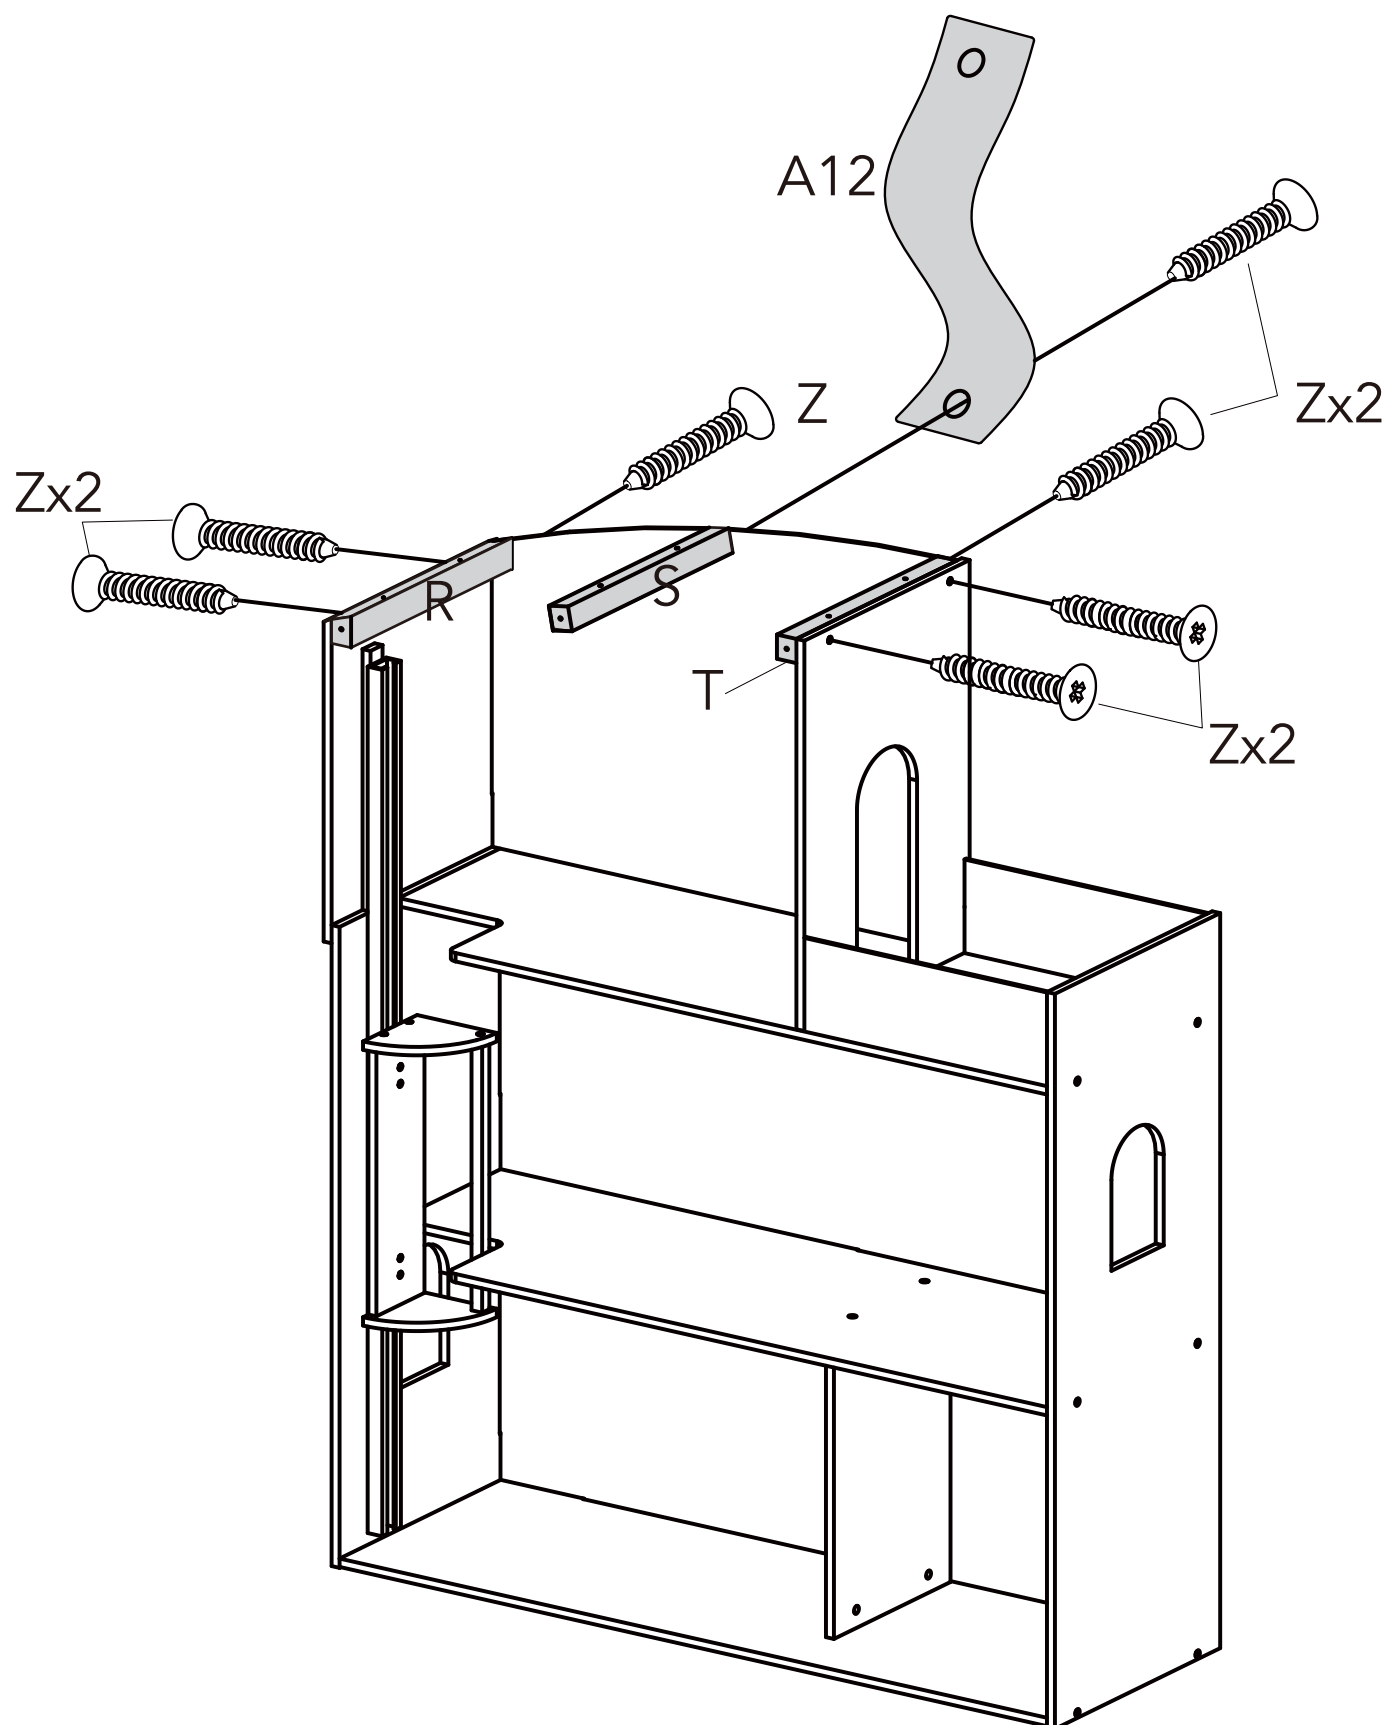 
Step 15




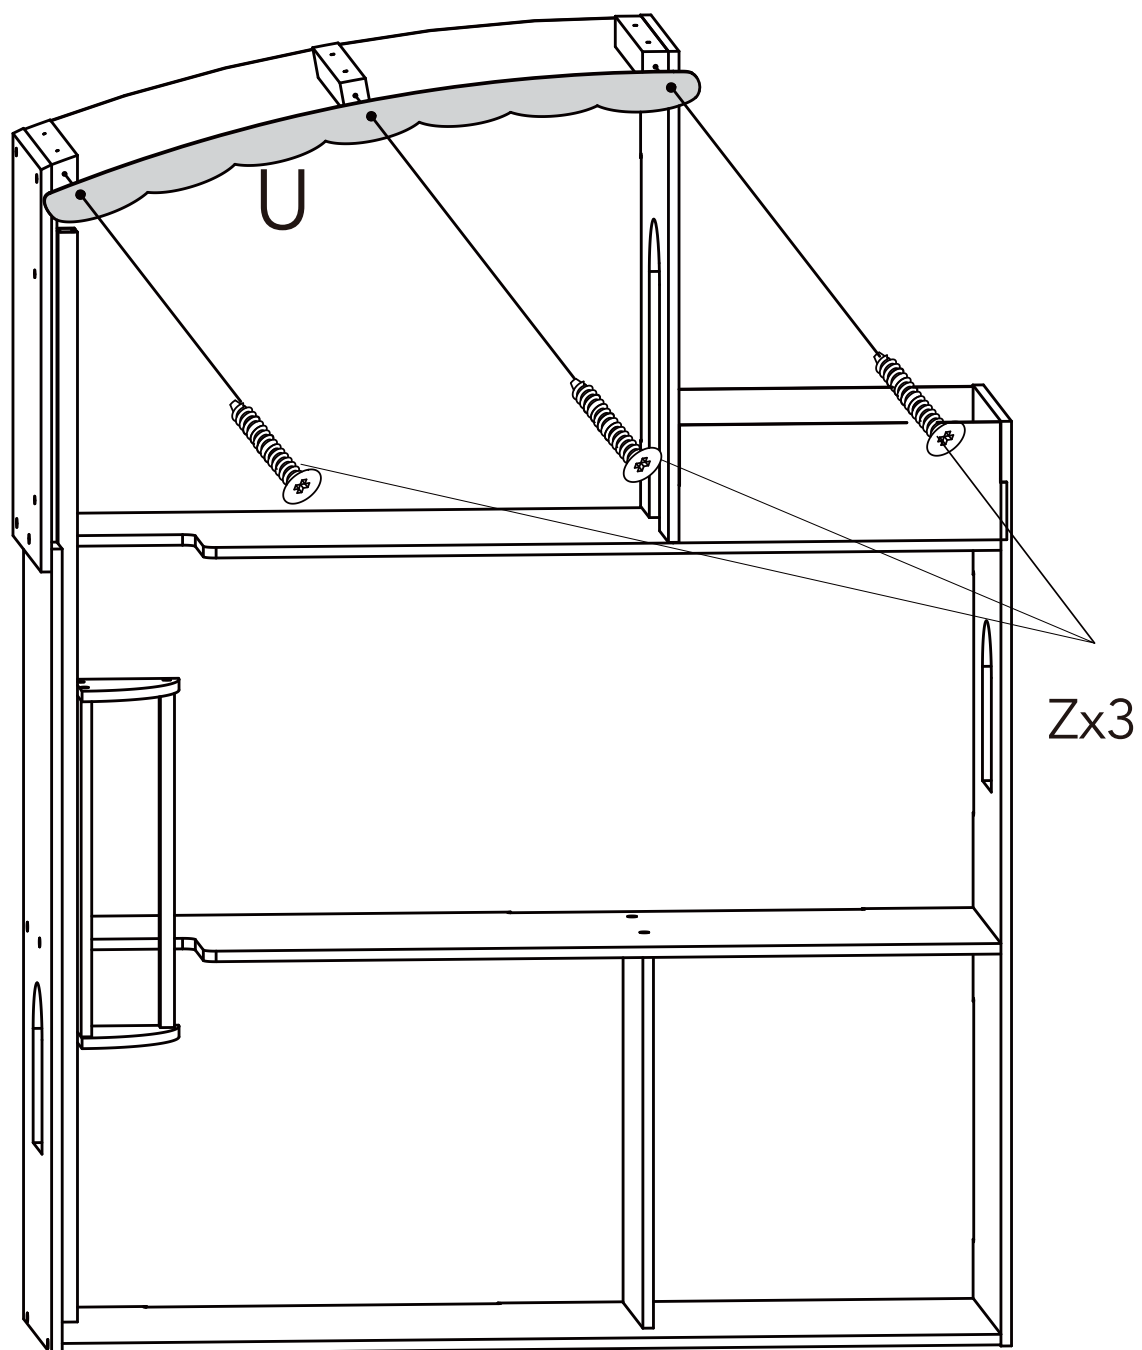 
Step 16



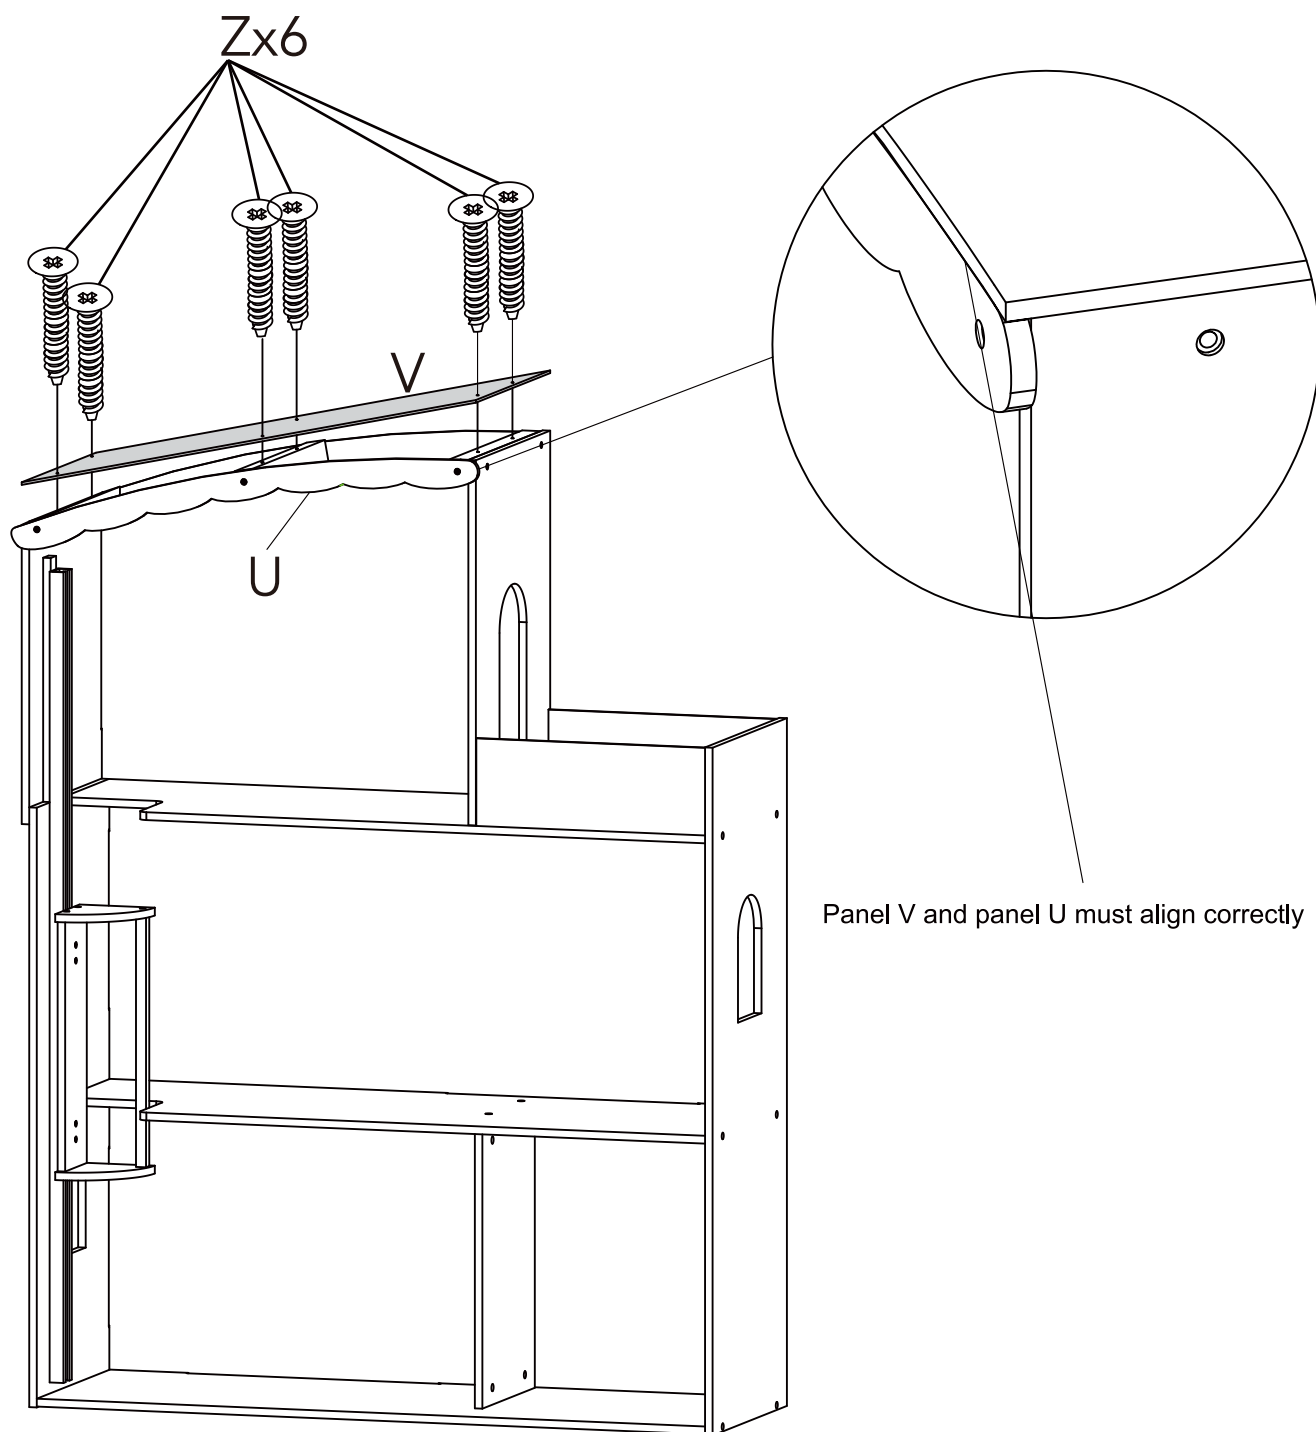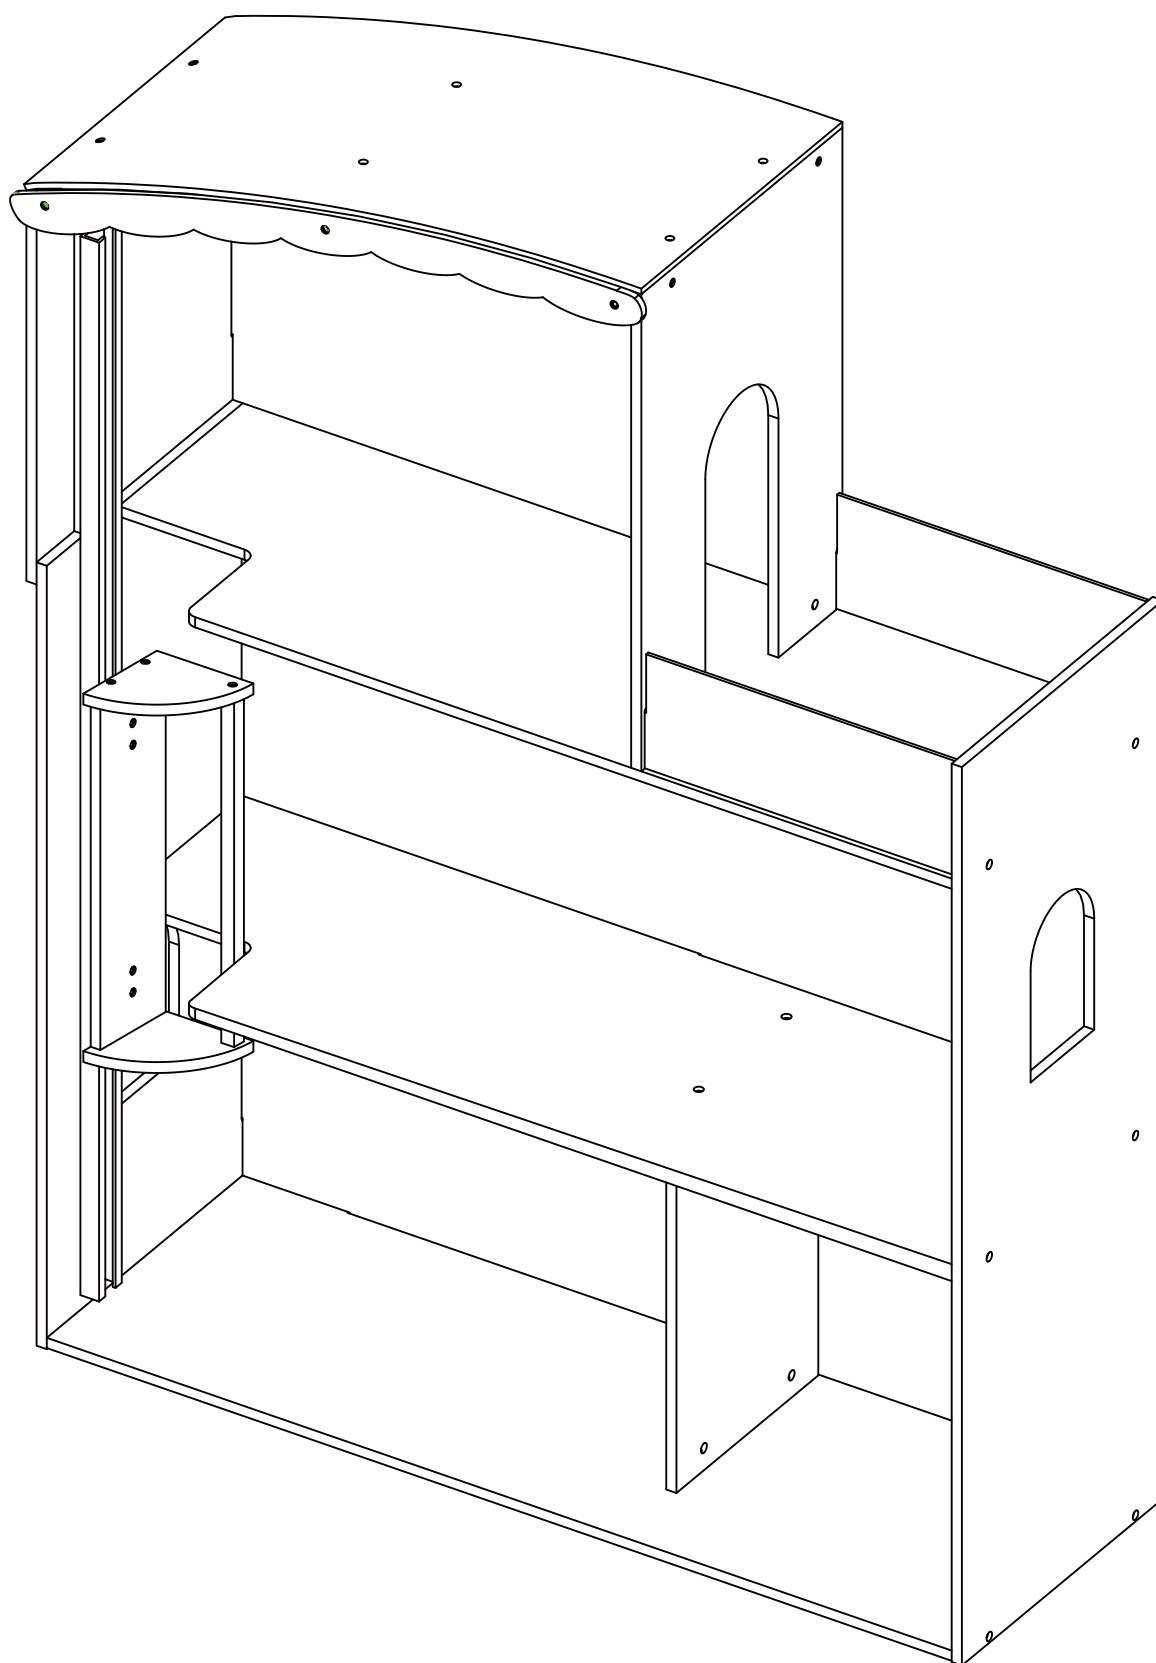   Step 17







There are many more wooden role-play toys to purchase and enjoy

100 DAY
SATISFACTION
GUARANTEE

If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund. UK Mainland stores only. Excludes franchises.

The guarantee excludes flat pack furniture, which cannot be returned if it has been partly or fully assembled unless faulty or mis-described. Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

**Need
something
else?**

www.GEORGE.com

We have a wide range of accessories and other products that can be ordered direct to your door.

Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product name.

Call 0800 952 0101

Write

Asda Stores Ltd. Asda House, Southbank, Great Wilson Street, Leeds, LS11 5AD.

Product name: **54146 Wooden Mansion**

Product spec code: **505717215562.2025**

Copyright

© 2025 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA Stores Ltd. Asda House, Southbank,
Great Wilson Street, Leeds, LS11 5AD.
ASDA, Antrim BT41 4GY.

