
home.

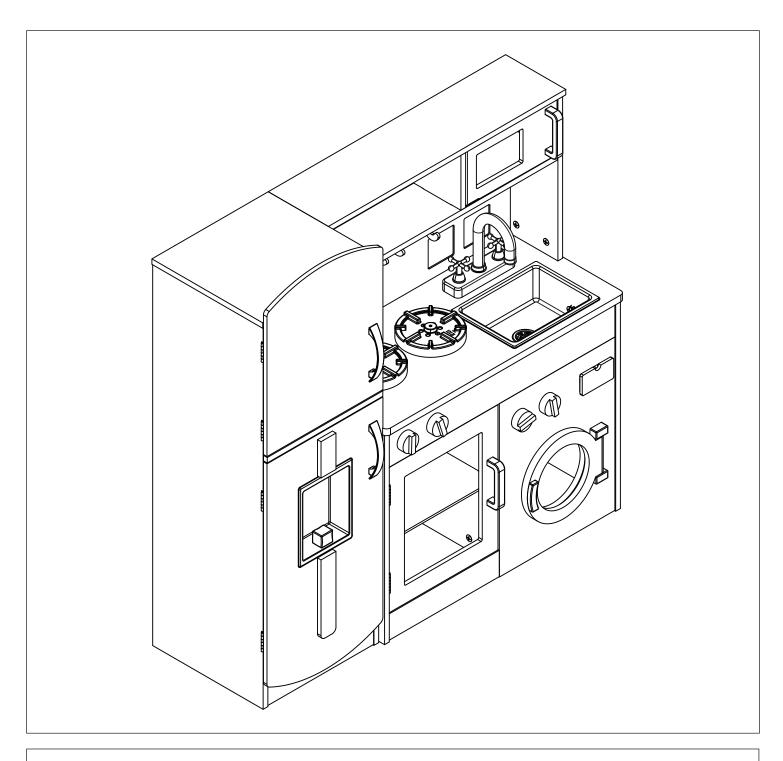

37939
Ultimate Kitchen

Assembly Guide

IMPORTANT: RETAIN FOR FUTURE REFERENCE

WARNINGS:

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND RETAIN FOR FUTURE REFERENCE.

Assembly to be carried out by a competent adult only.

 
- Use under direct adult supervision.
- The hardware contains small screws with sharp points. Keep unassembled parts out of the reach of small children due to possible risk of injury.
- WARNING! Not suitable for children under the age of 3 years. Components of this product may break off into small parts presenting a choking hazard.
- Choking hazard: Unassembled parts may be a choking hazard to children 3 years and younger.
- To avoid the danger of suffocation, keep any bags or packaging away from babies and children. Any packaging or bags are not part of the toy and must be disposed of immediately before assembling the toy.
- Do not allow children to sit, stand, play or climb on the top surface as this may cause the product to become unstable.
- Do not use this item if any components are missing or damaged. Your toy is only meant to be assembled once.
- After you have assembled your toy, do not dismantle it again as this may weaken the joints and screws, leaving the toy unsafe for use.
- Regularly check that all of the screws are fully tightened (but do not overtighten).
- Use the toy on a flat level surface only.
- Please check the assembly of the toy regularly and frequently tighten any screws or bolts. If regular maintenance is not carried out, the product may cease to function properly.

Getting started...

- 1. Unpack the components and check against the list below.
- 2. Place the components on a clean surface to prevent them from being damaged.
- 3. After you have assembled your toy, dispose of all packaging.

You will need...

Cross head / Philips screwdriver suitable for use with the screws provided.




Fitting the batteries

Step 1

Only an adult should replace the batteries. Undo the screw on the battery compartment with a cross head screwdriver.


Slide the cover off the battery compartment.

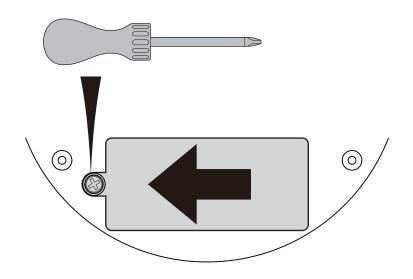

Step 2

Insert two AAA batteries into the battery compartment as shown in the diagram.


IMPORTANT: Ensure the polarities of the batteries are the same as shown in the diagram.

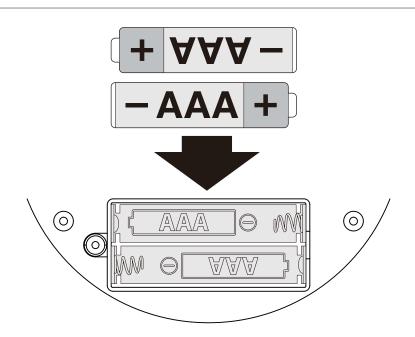

Step 3

Slide the battery compartment cover back into the battery compartment.

Fasten the screw using the cross head screwdriver.

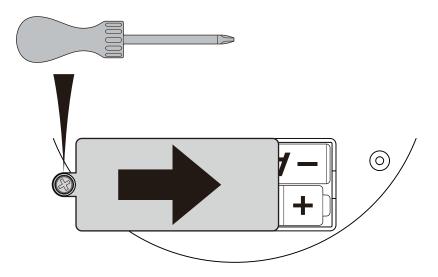


Battery information

- Attention: Please do not let children swallow the small parts.
- Make sure the batteries are inserted correctly and follow the toy and battery manufacturers instructions.
- · Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- · Rechargeable batteries are not to be used with this toy.
- Only batteries of the same or equivalent types as recommend are to be used.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire; batteries may leak or explode.
- · Batteries must be replaced by an adult.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

Using barrel nuts and long bolts

Unscrew the barrel nuts from the long bolts before beginning assembly. Slot the barrel nuts (**L1**) into the larger holes in the rails or bases (**1**), ensure the slot in the top of the barrel nut is facing outwards so you can rotate it with a screwdriver if needed.

 
Align the holes in all of the components then slot the long bolts (**K1**) through the holes (**2**). Tighten the long bolts into the barrel nuts using a cross-head screwdriver.





You may find it easier to assemble your toy if you only half tighten the bolts until the product is fully assembled.


You should have...

Components

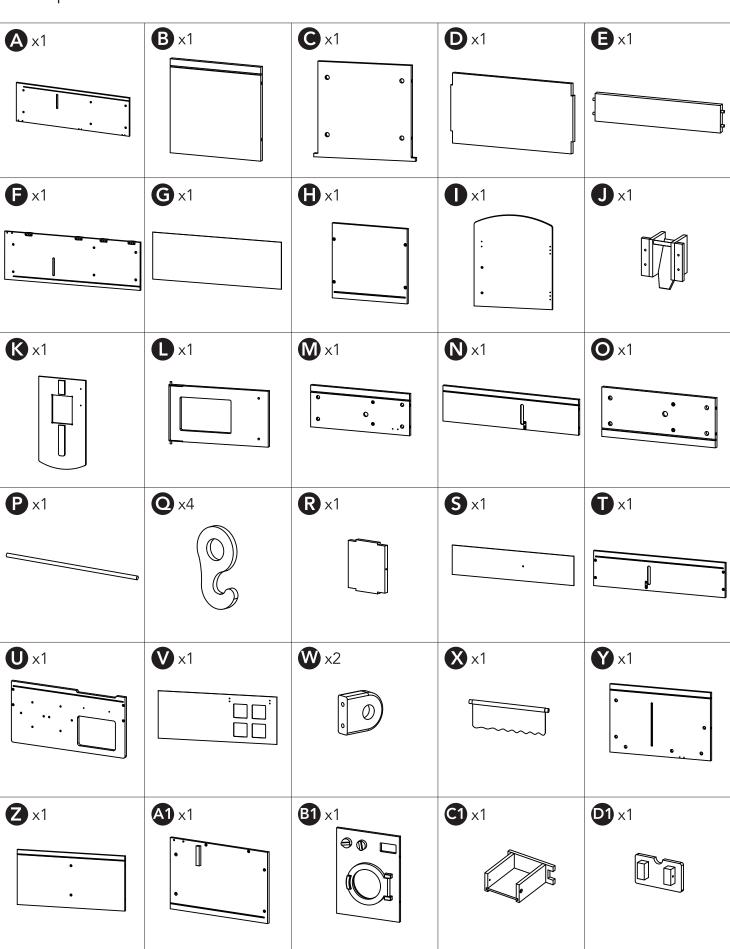


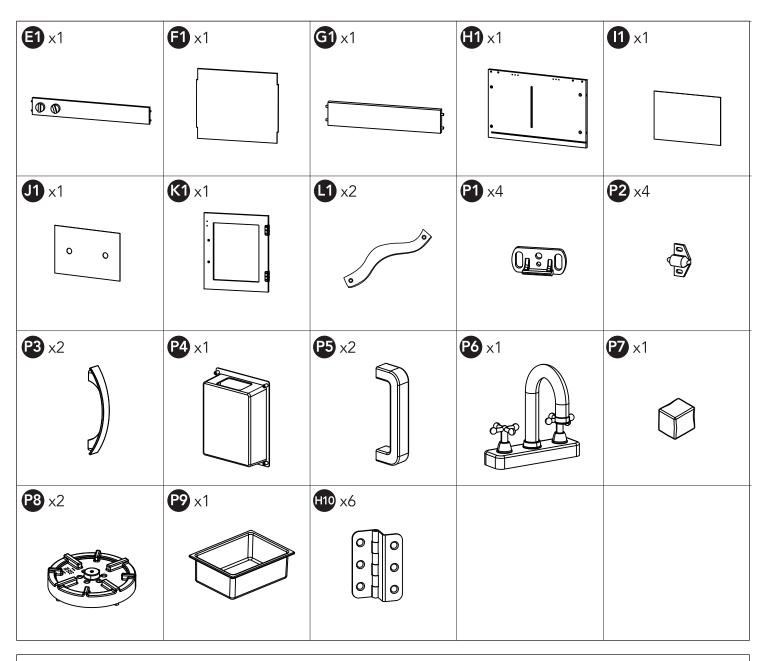

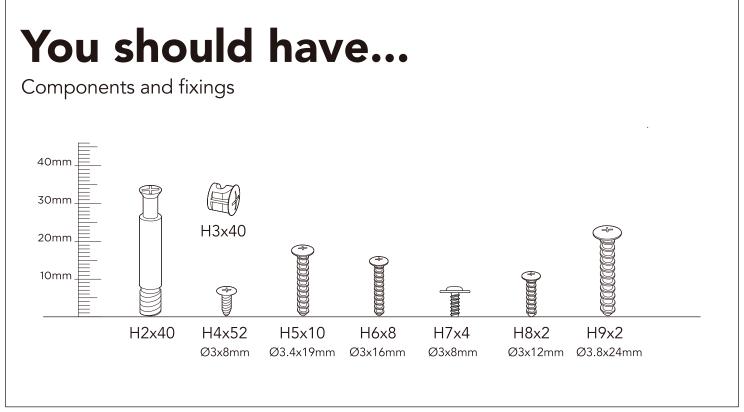


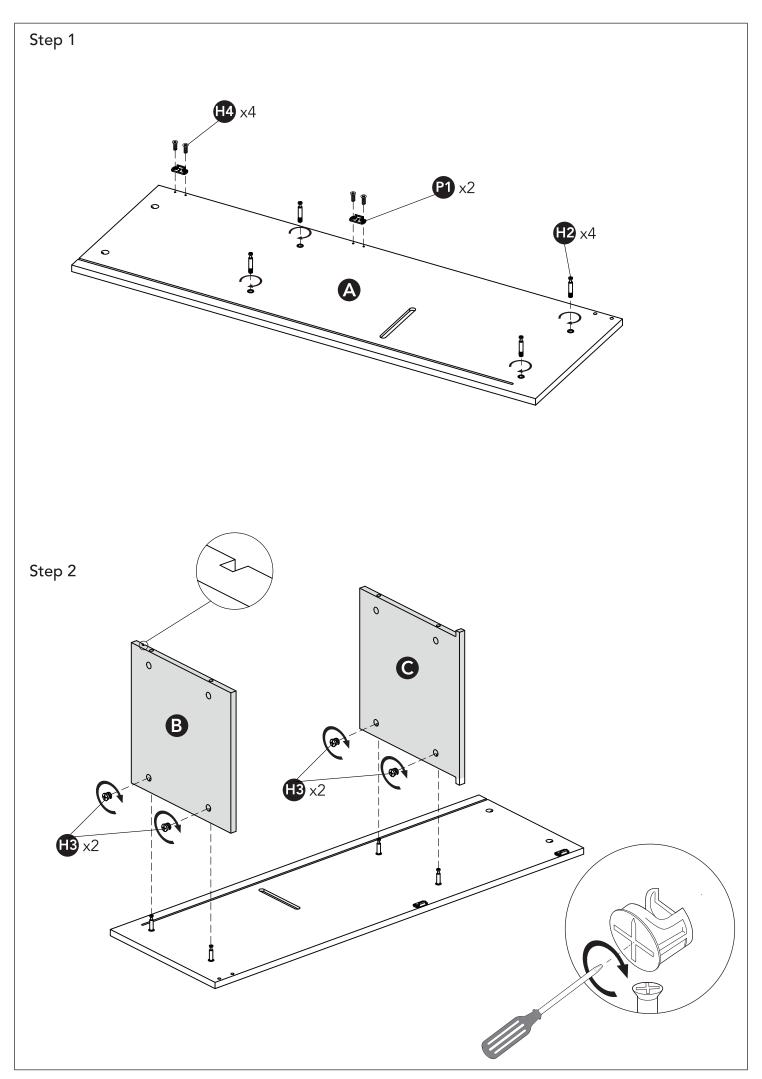



Step 3

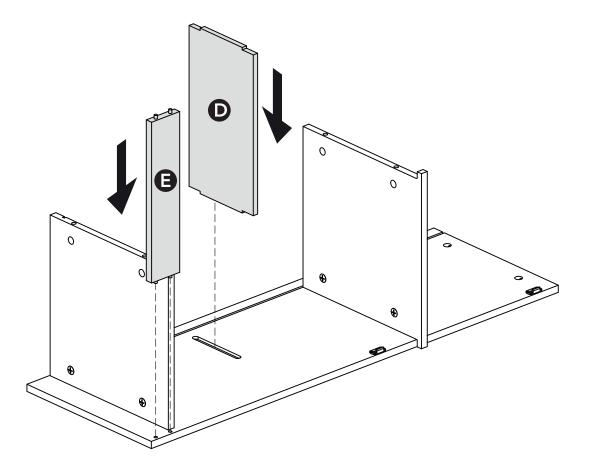


Step 4

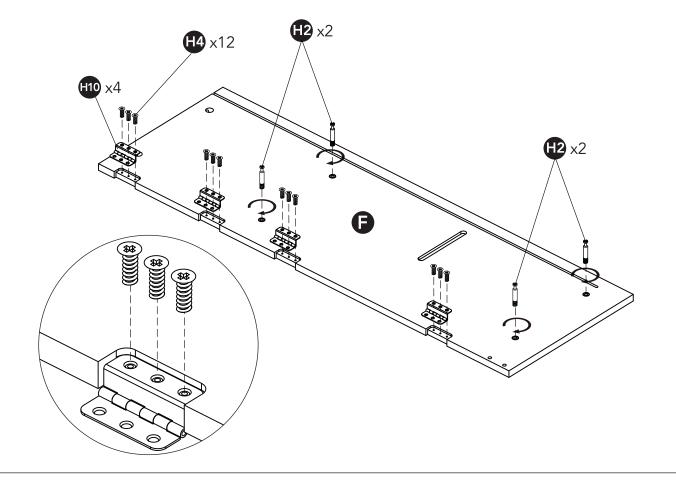

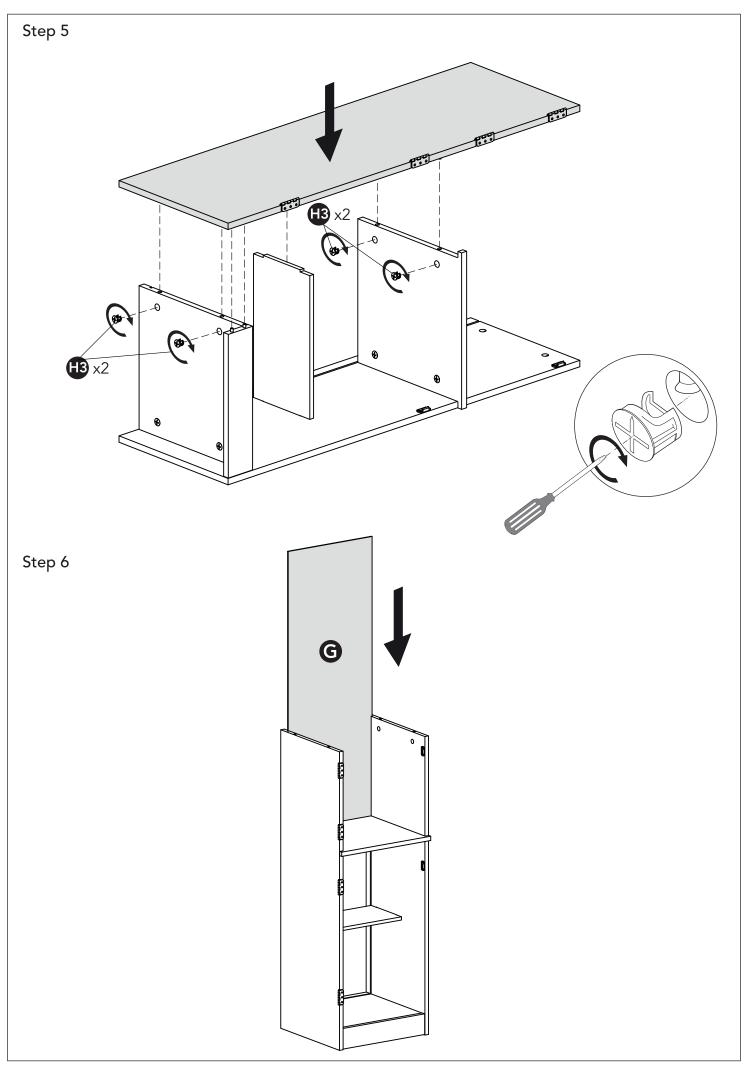


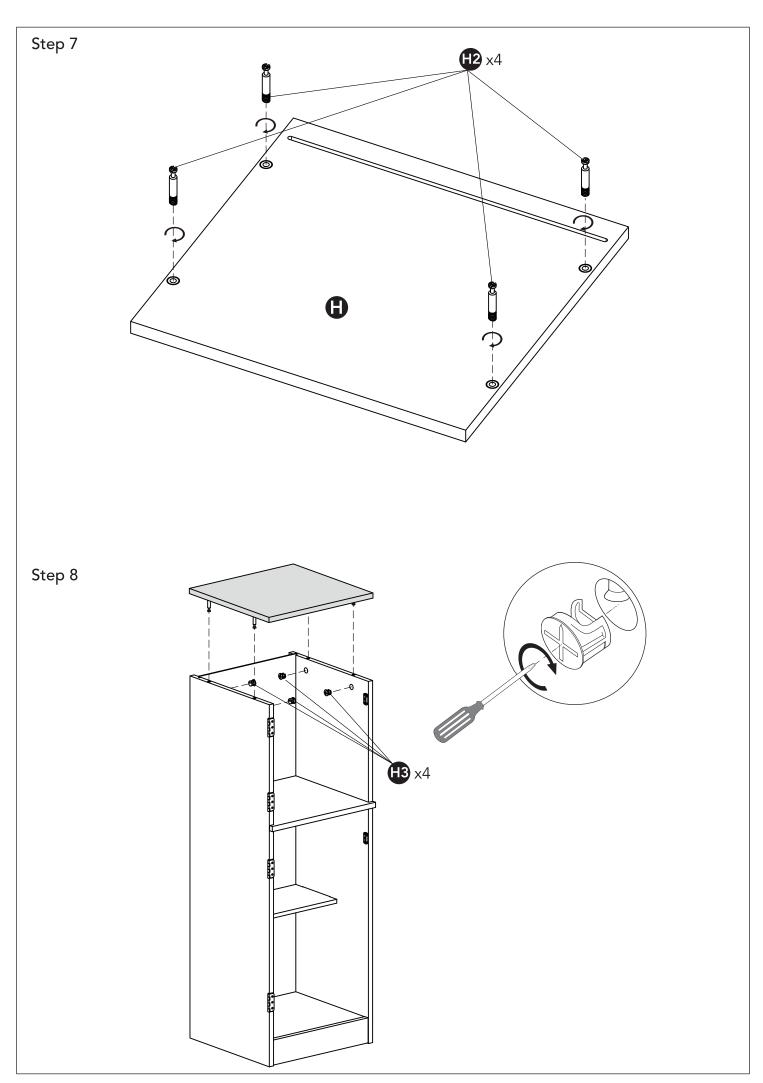



Step 9

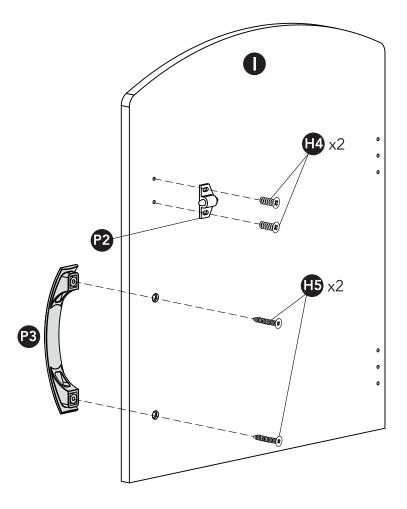


Step 10

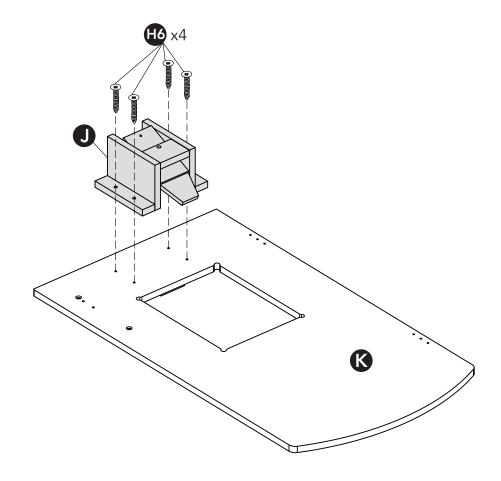

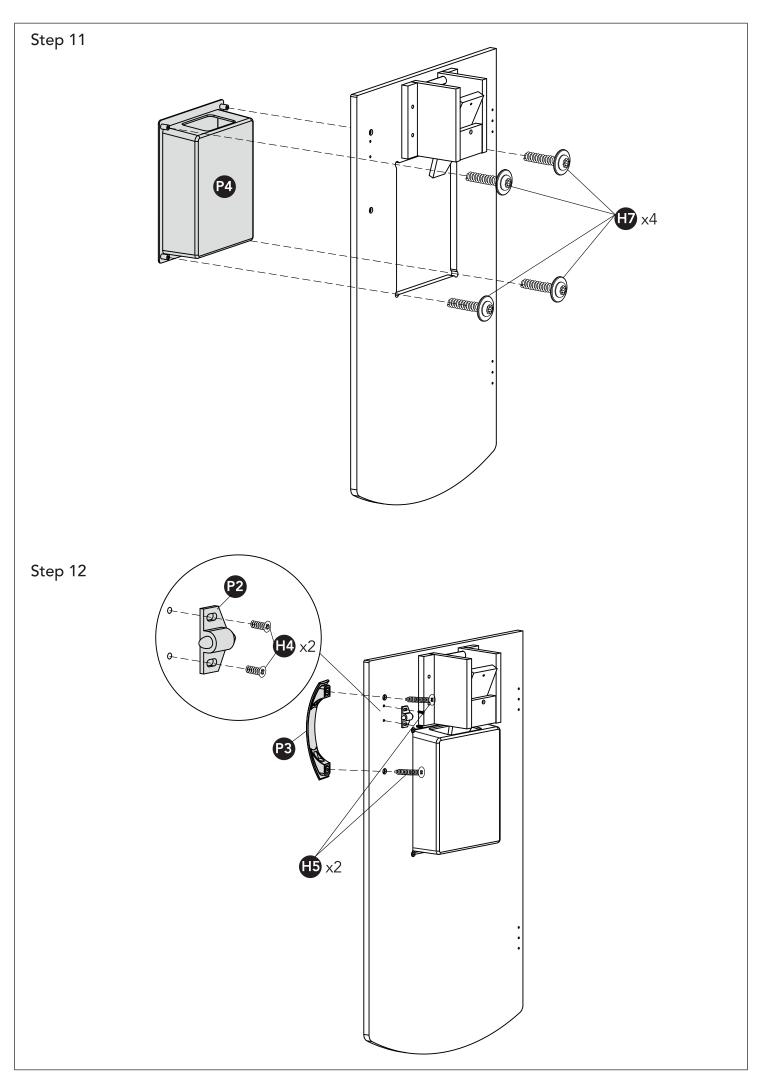


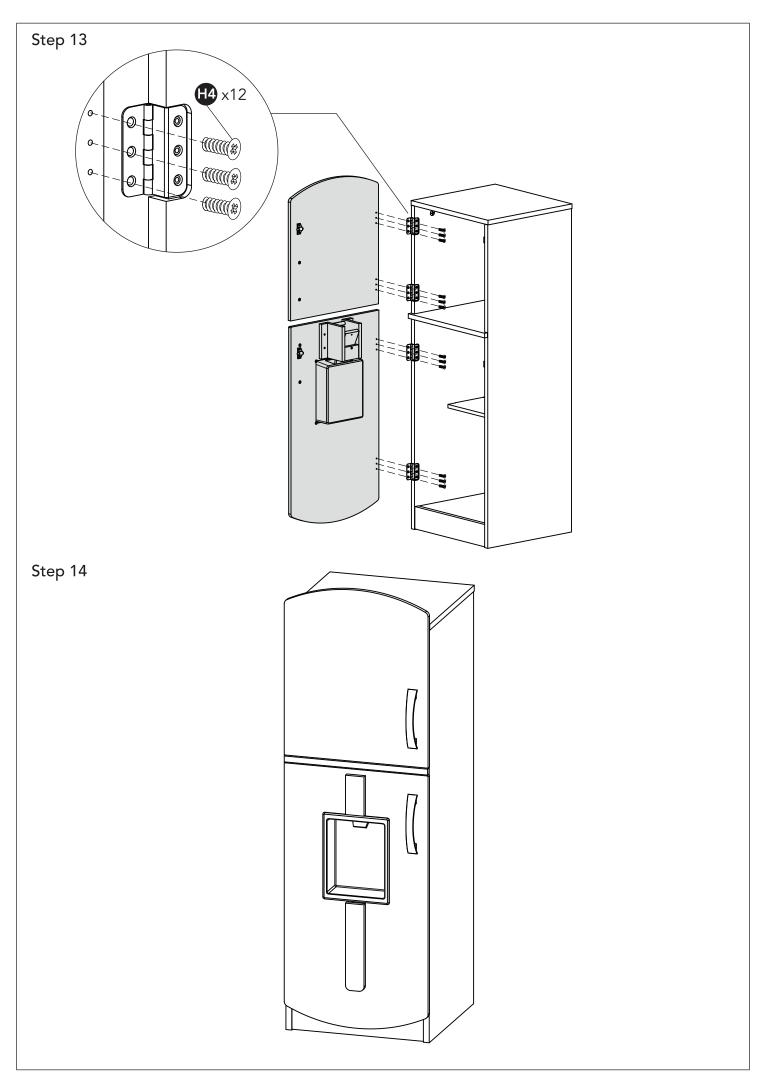


Step 15

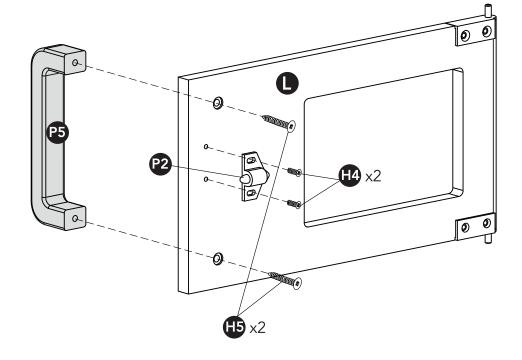


Step 16

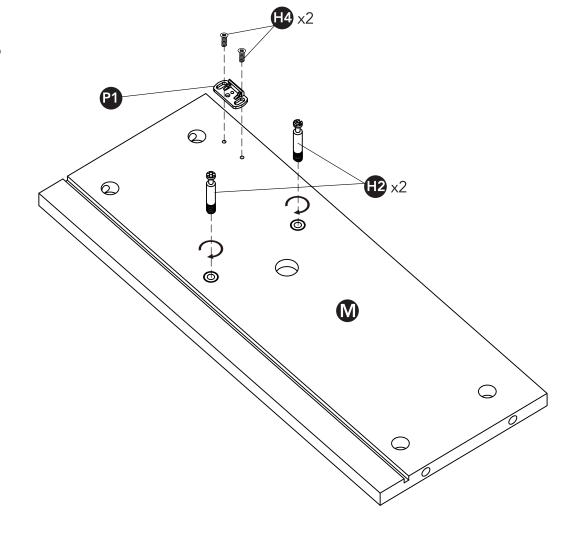



Step 17

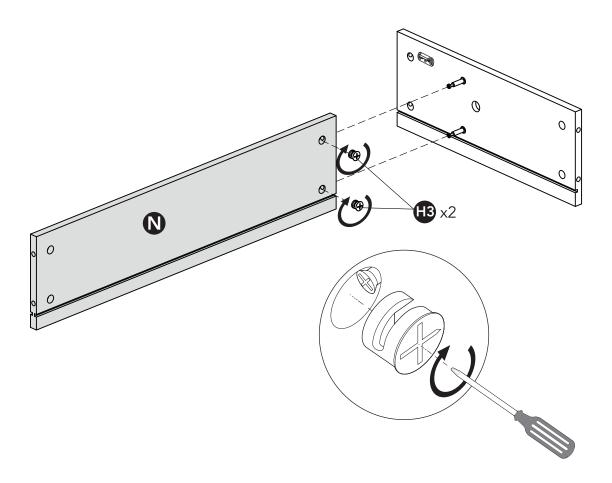


Step 18

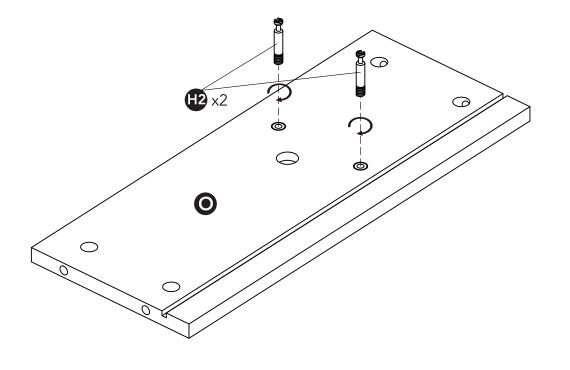

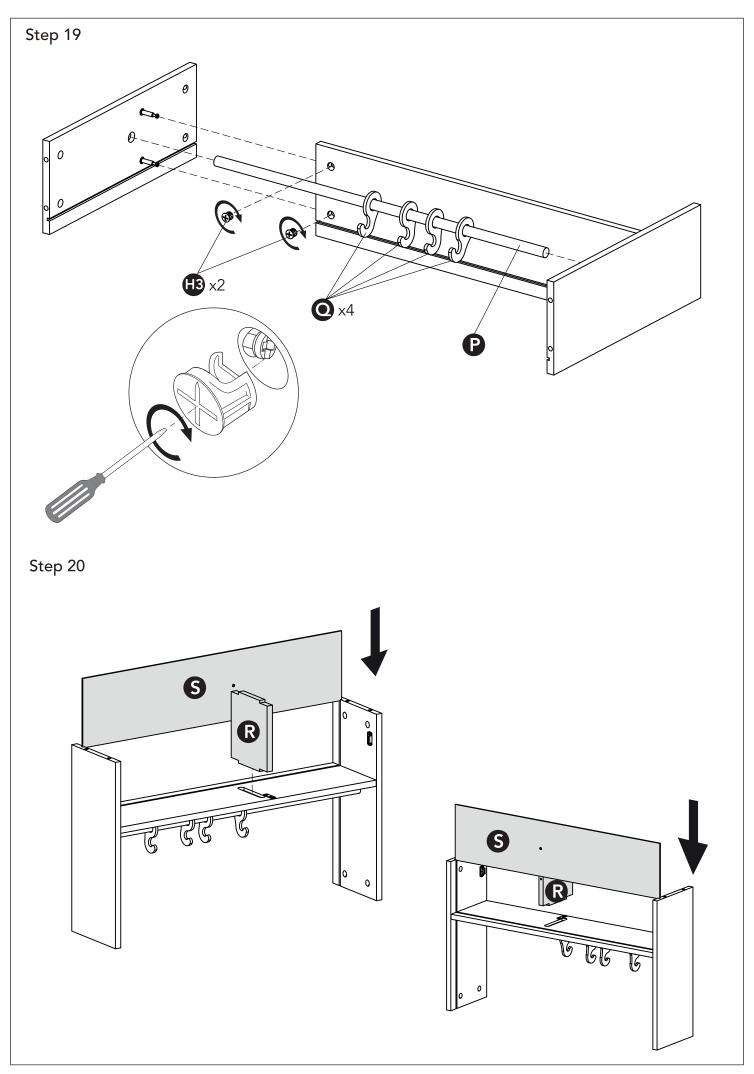


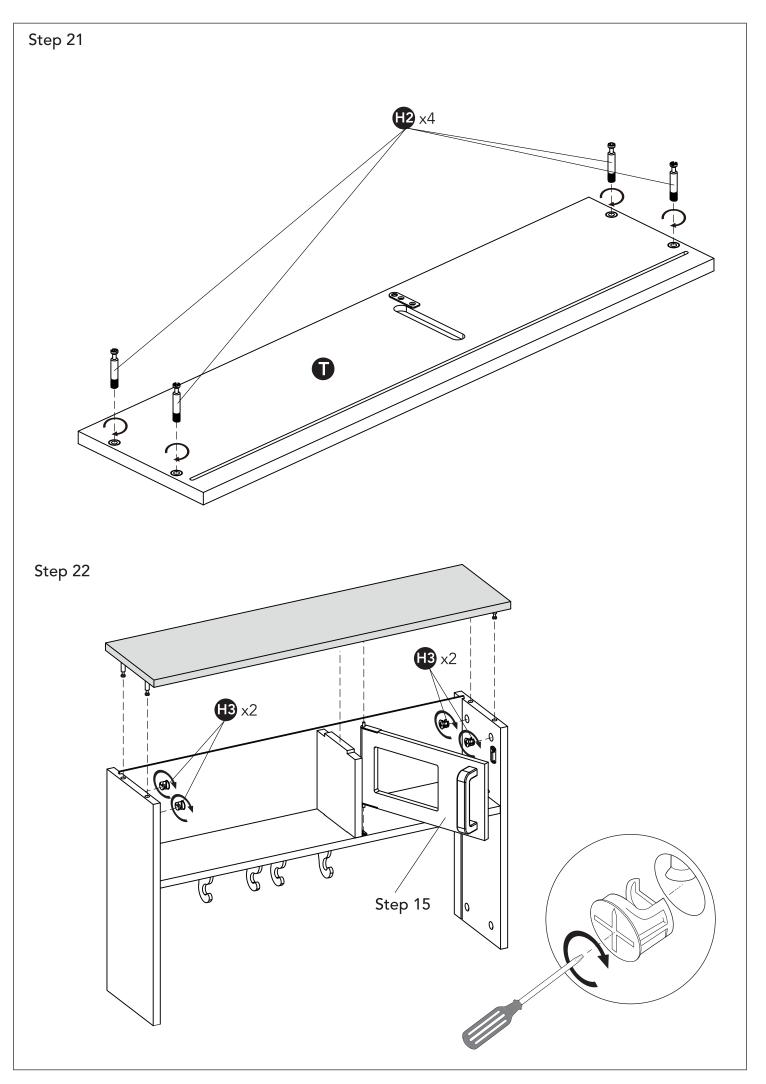


Step 23

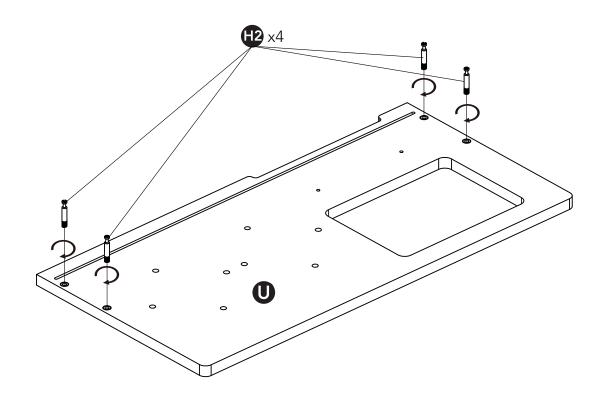


Step 24

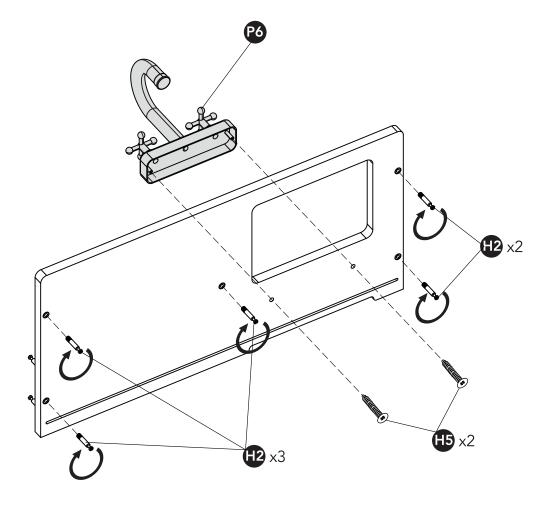


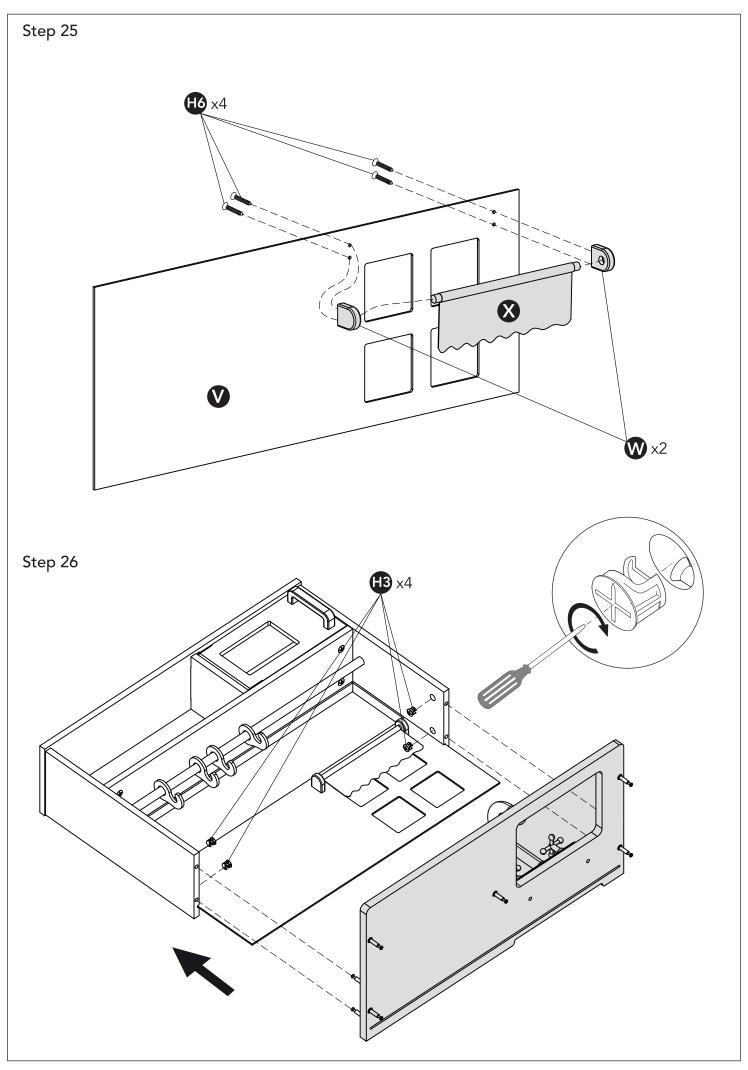


Step 27

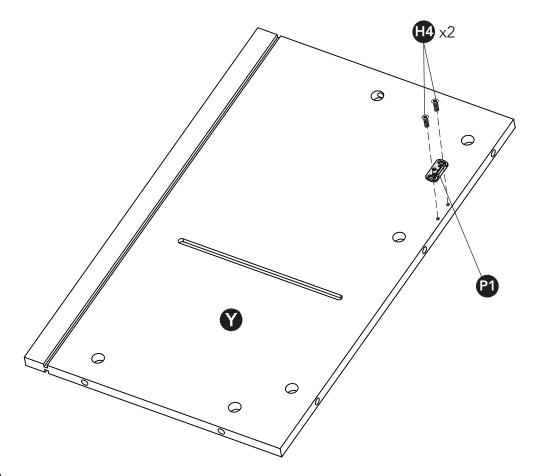


Step 28

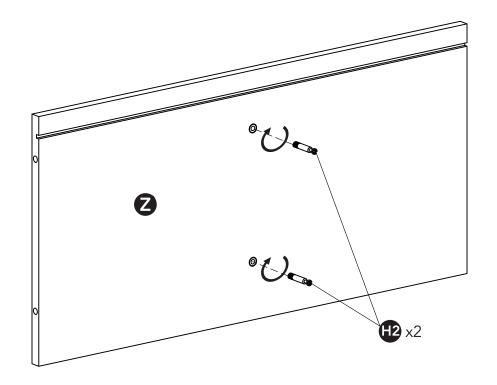


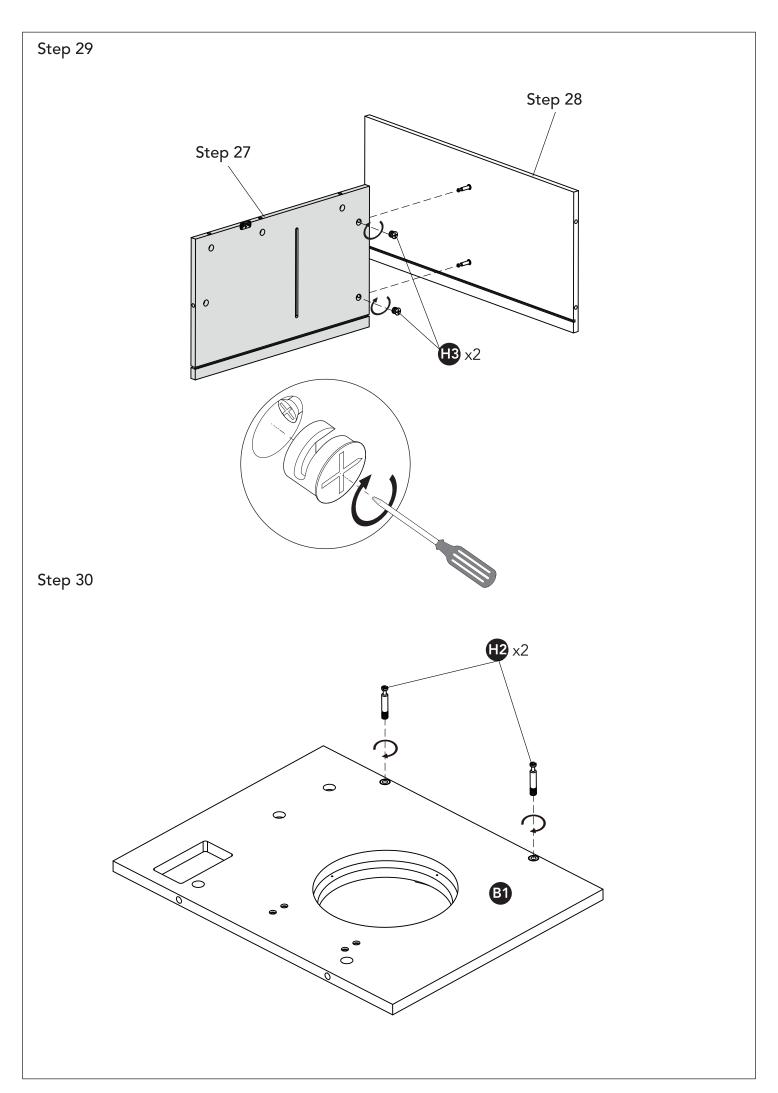



Step 31

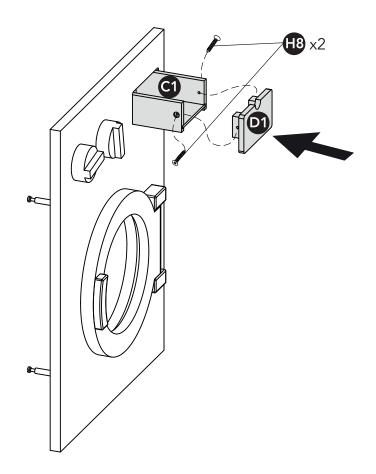


Step 32

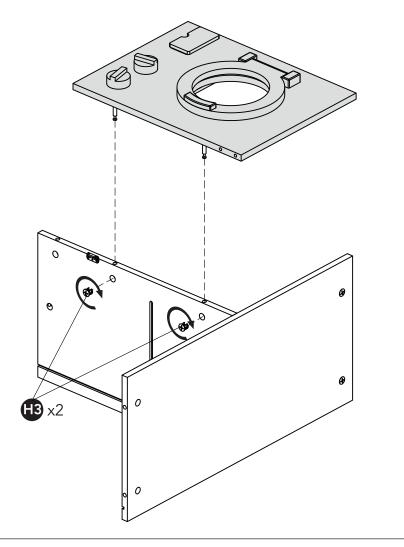


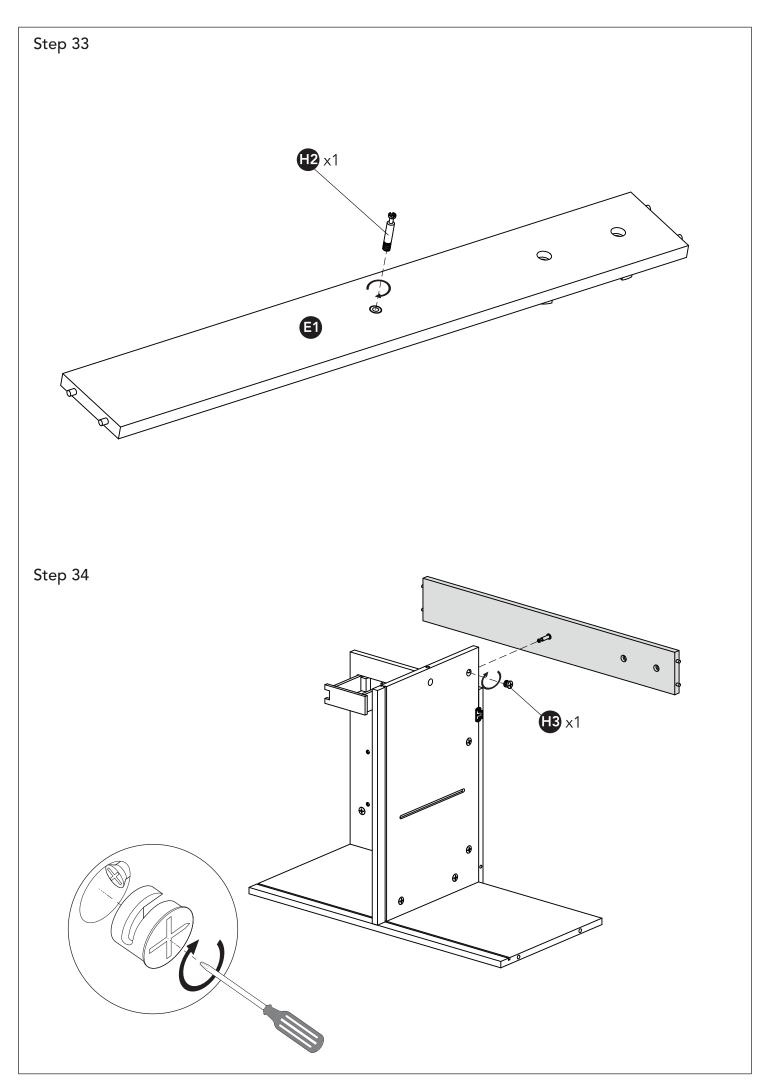

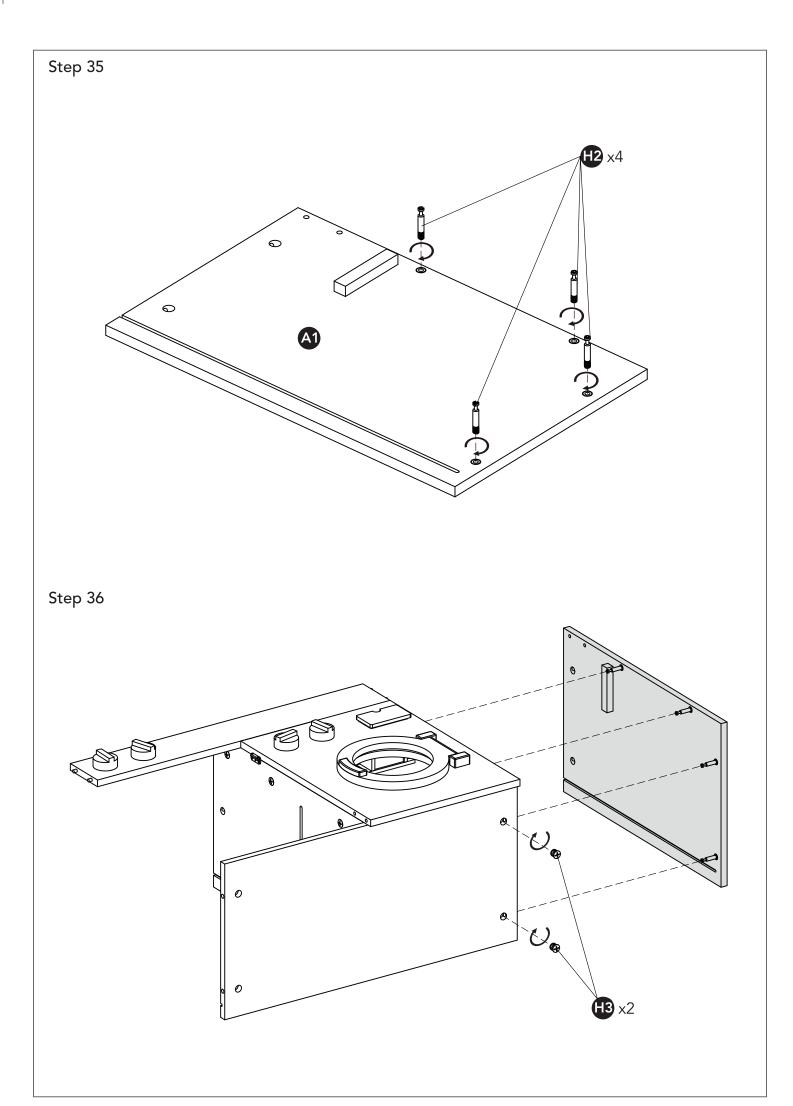


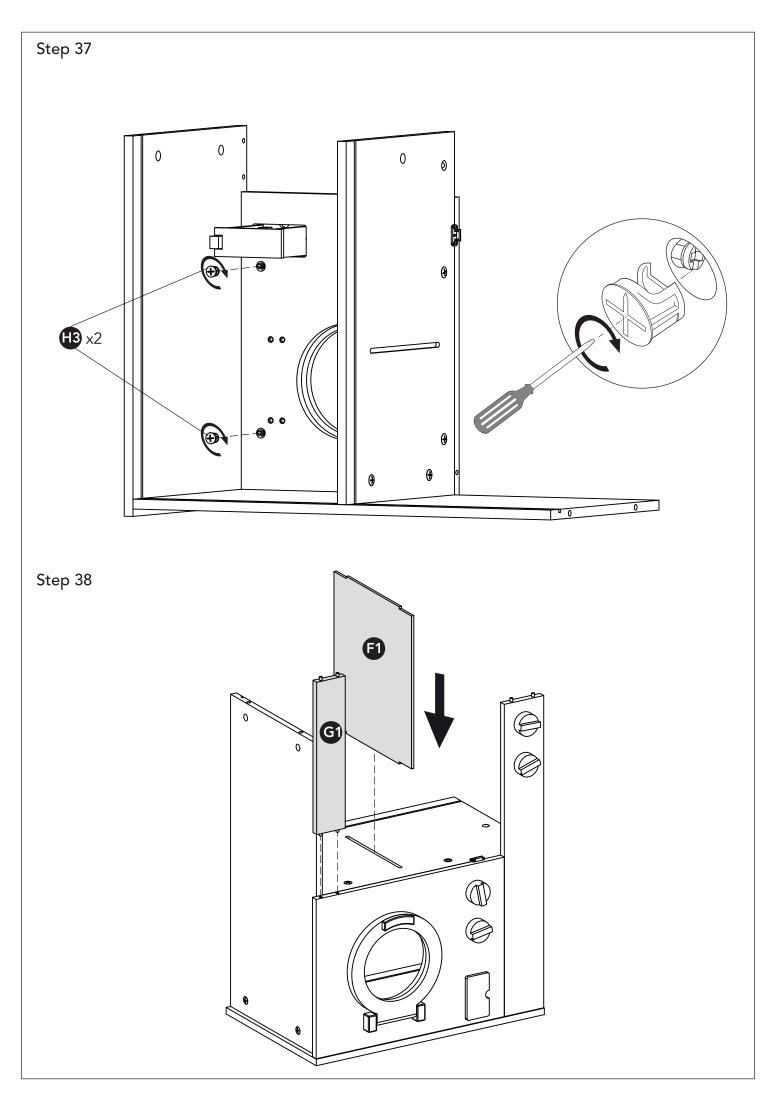





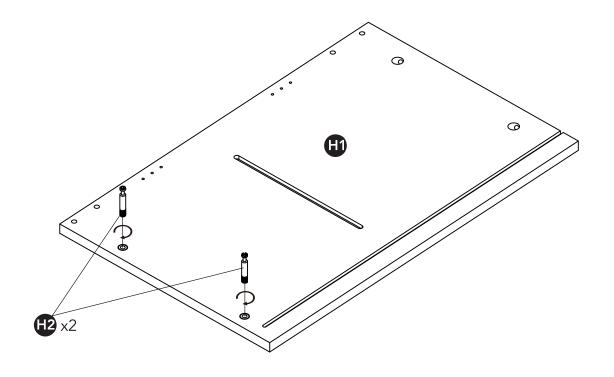



Step 40

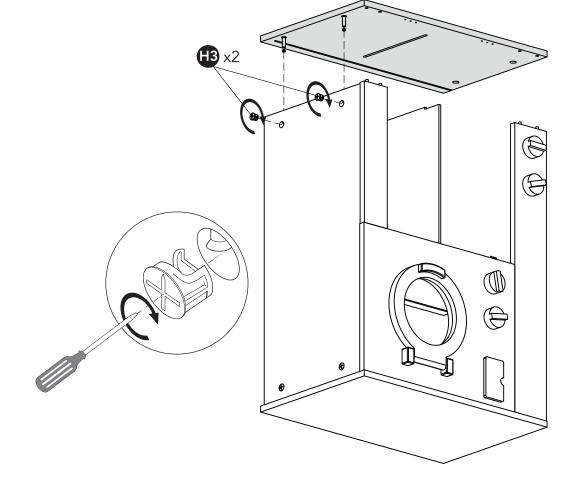


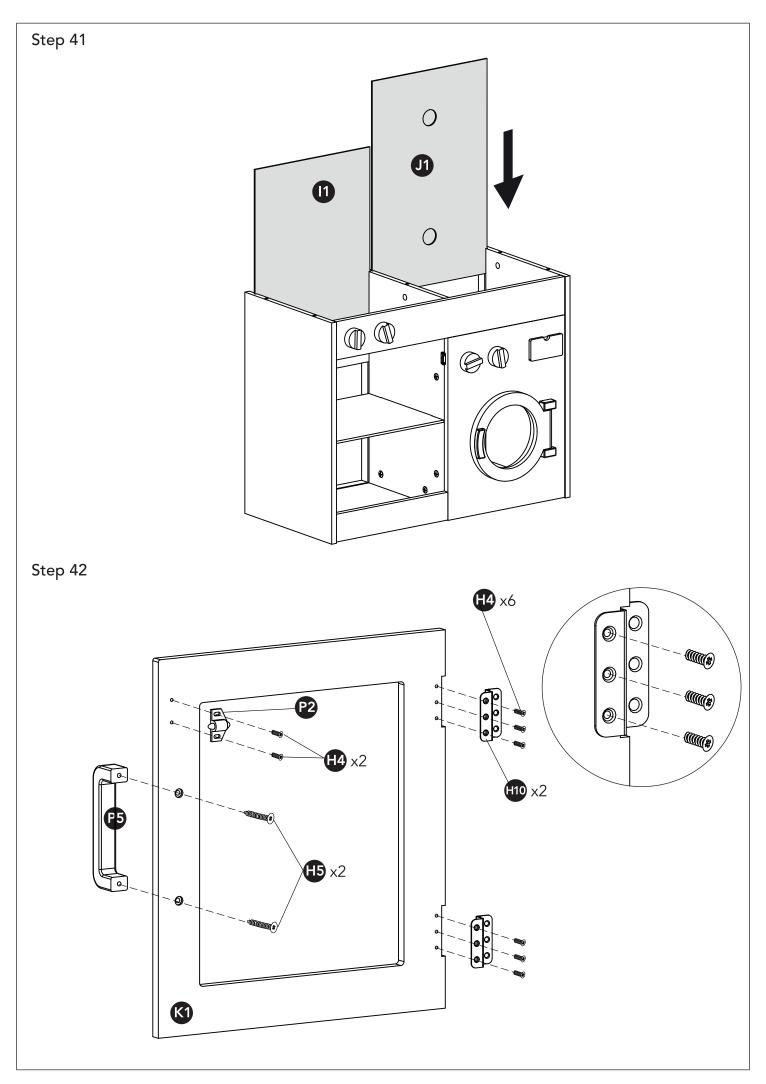

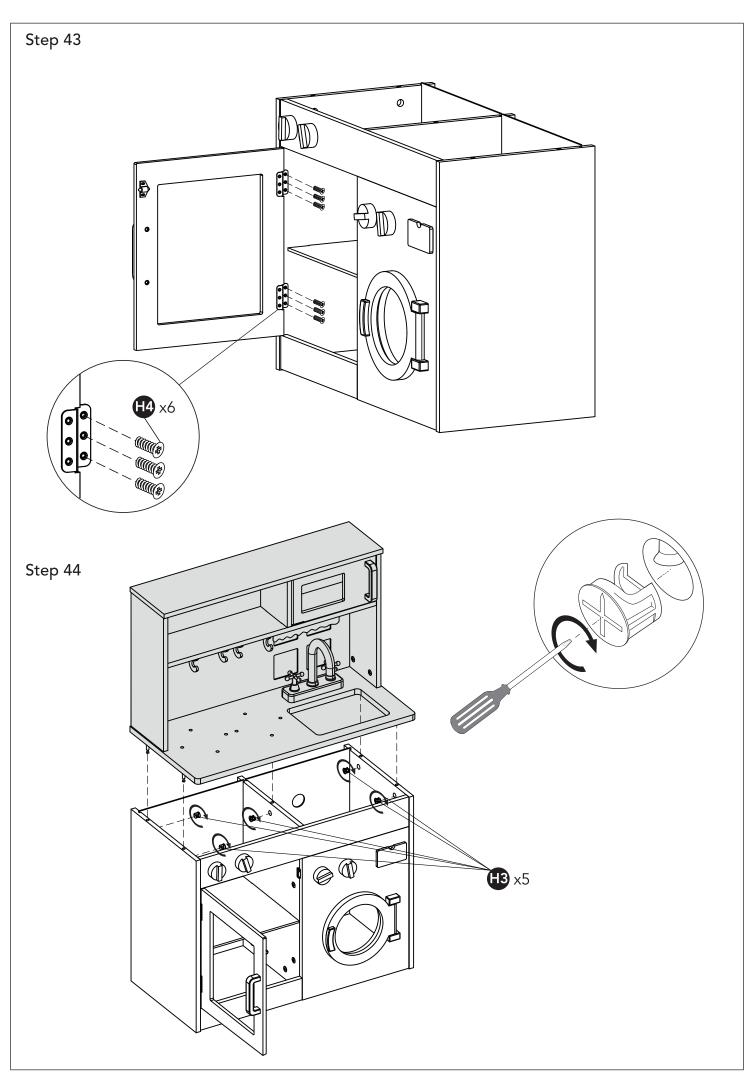

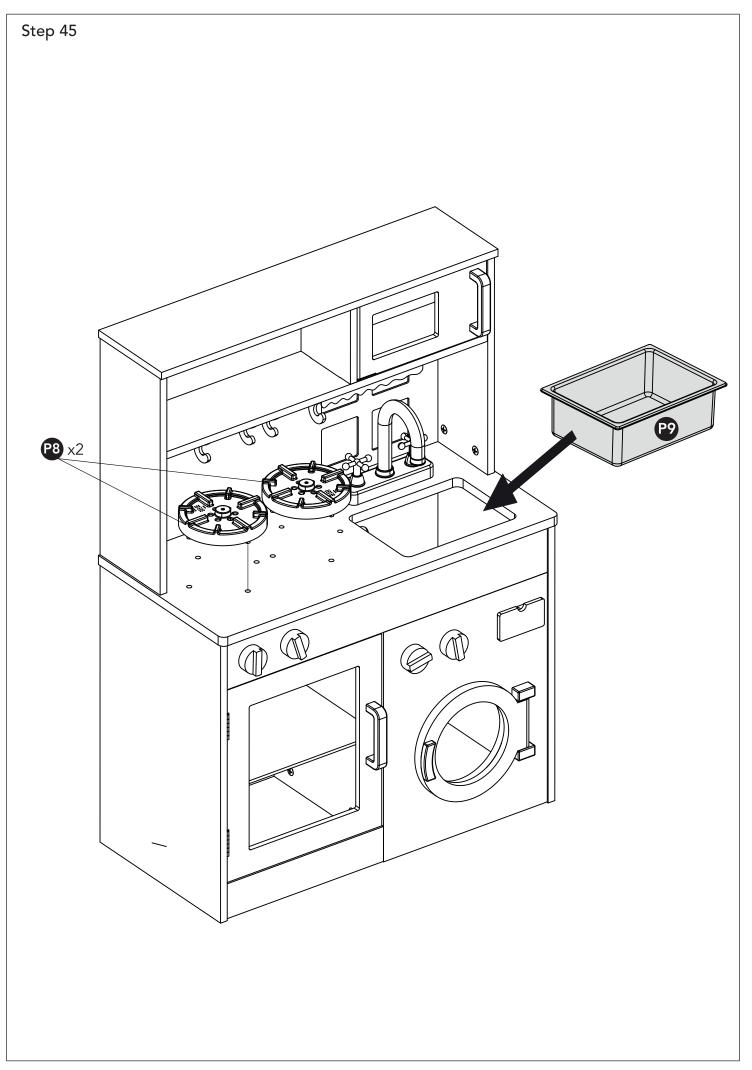

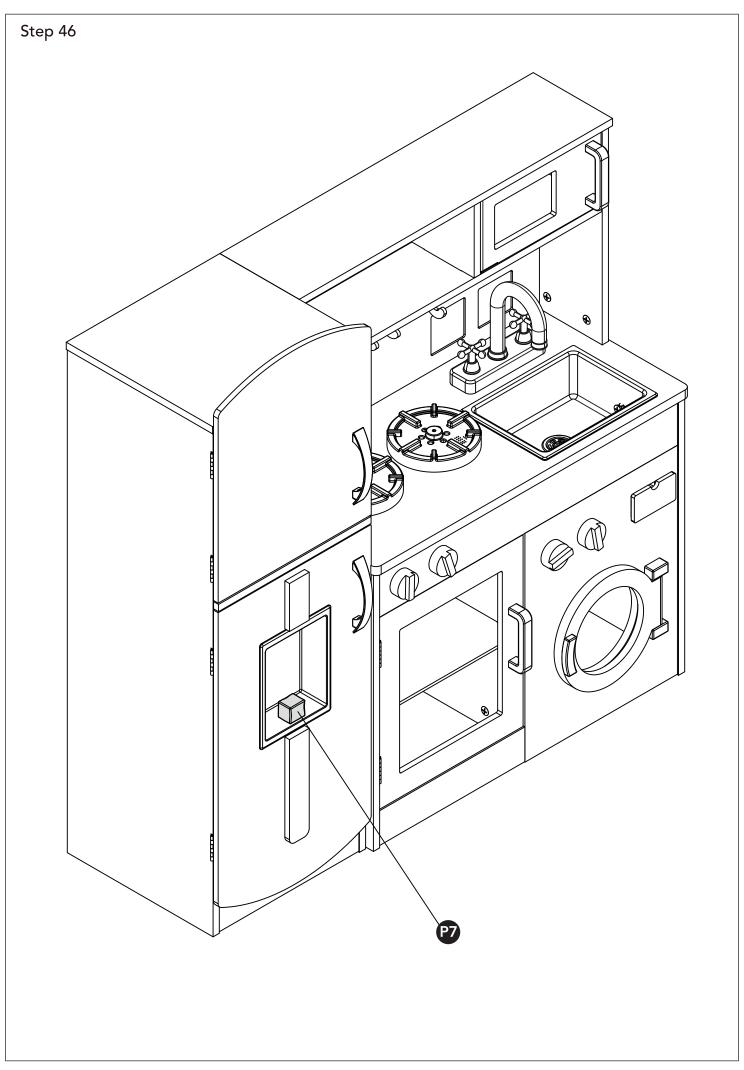

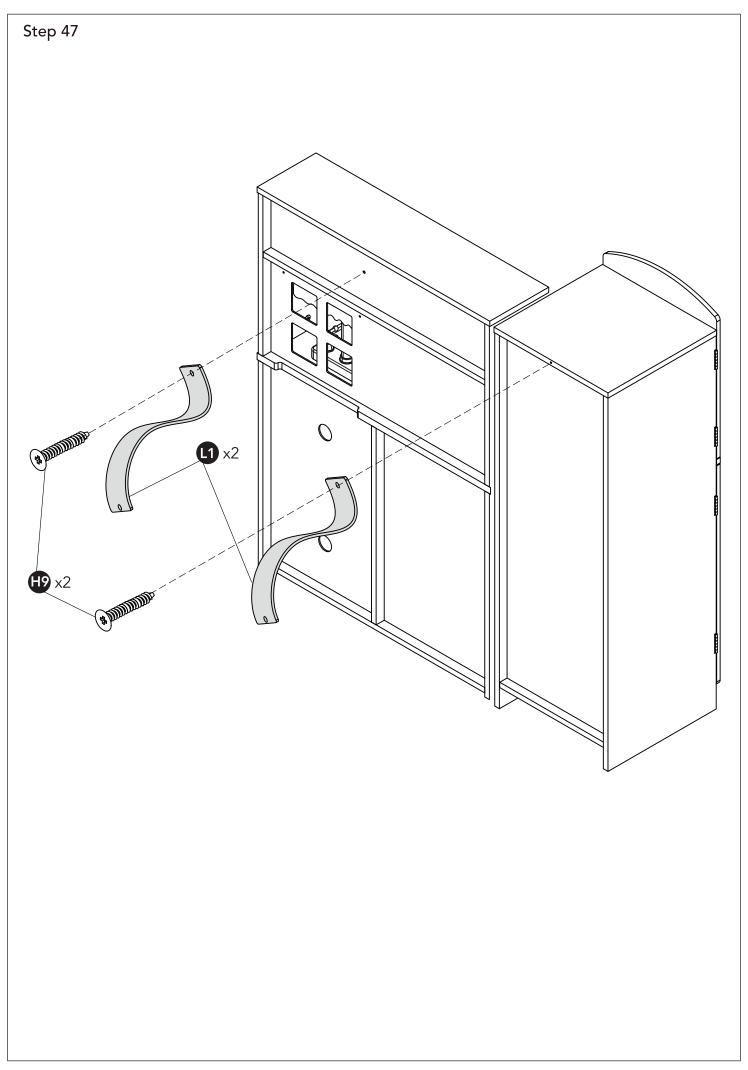

There are many more wooden role-play toys to purchase and enjoy



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund. UK Mainland stores only. Excludes franchises.

The guarantee excludes flat pack furniture, which cannot be returned if it has been partly or fully assembled unless faulty or misdescribed. Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

Need something else?

www.GEORGE.com

We have a wide range of accessories and other products that can be ordered direct to your door.

Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product name.

Call 0800 952 0101

Write

Asda Stores Ltd. Asda House, Southbank, Great Wilson Street, Leeds, LS11 5AD. ASDA, Antrim BT41 4GY.

Product name: 37939-Ultimate Kitchen

Product spec code: 505717288893.2025

Copyright

© 2025 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners.

Specifications are subject to change without notice.

Manufactured for:

ASDA Stores Ltd. Asda House, Southbank, Great Wilson Street, Leeds, LS11 5AD. ASDA, Antrim BT41 4GY.



