


George.

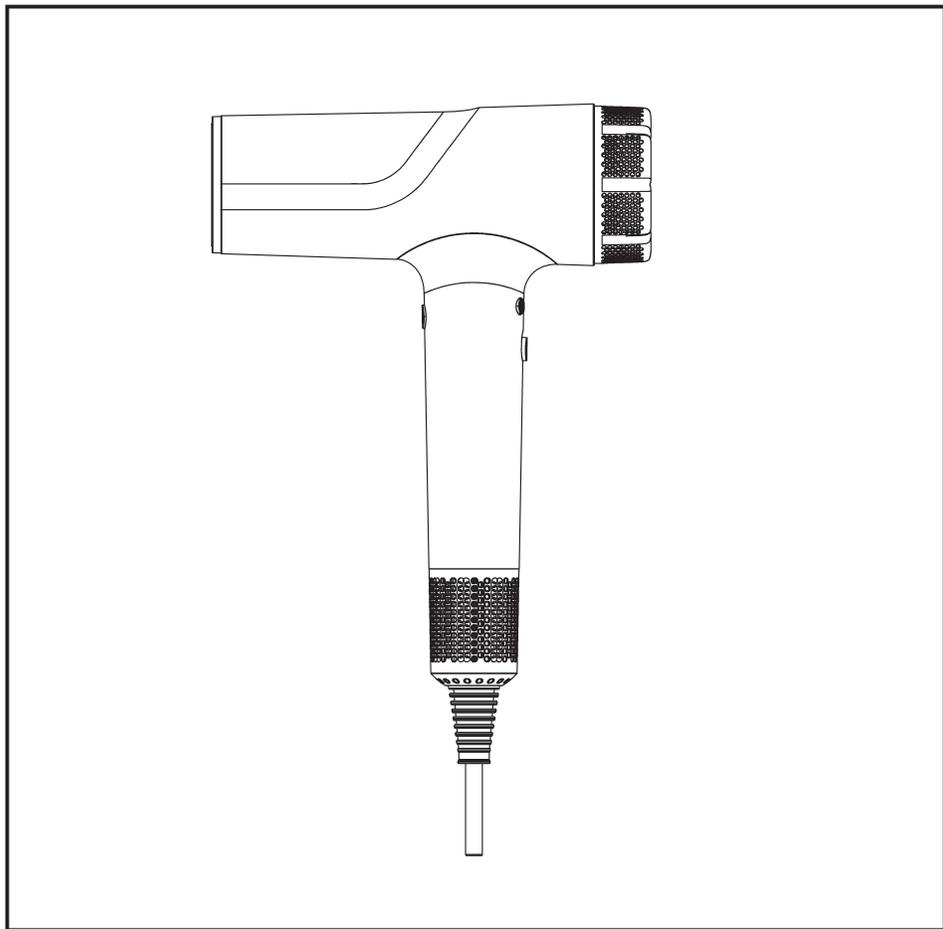

GHBD01B4Z **GH BRUSHLESS DRYER** User Guide

IMPORTANT: RETAIN FOR FUTURE REFERENCE



If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.



For PDF copy of this manual please scan QR code and search for model number



Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product name.

Call
0800 952 0101

Write
ASDA, Leeds LS11 5AD

Product name:
GH BRUSHLESS DRYER

Product site code: 15B.09.24.138

Copyright

© 2024 ASDA Stores Limited.
All other trademarks appearing herein are the property of their representative owners.
Specifications are subject to change without notice.
Manufactured for:
ASDA, Leeds LS11 5AD/
ASDA, Antrim BT41 4GY

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.



About this guide

We've written this manual to help you get the most from your brushless dryer.

Please keep hold of it for future reference


WARNINGS:

1. Read the operating instructions carefully before use.
WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 
When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off;
For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. After use, store the hair dryer in a safe place well away from the reach of children.
Note when unpacking the appliance:
Danger for children!
Danger to life through suffocation.
Keep the packaging material (e.g. poly bags) away from children.
To prevent a life-threatening electrical shock:
3. Water and other liquids represent a danger!
4. Do not use the appliance in vicinity of filled baths, washbasins or other containers filled with liquid.
5. Never immerse the appliance in water or in any other liquid.
6. Do not use the appliance while take a bath.
7. If the appliance falls into water, pull out the mains plug immediately.
8. Have the installation carried out only by an electrical specialist.
9. Make sure that the cable is not pinched in cupboard doors

or pulled over hot surfaces. Otherwise the cable insulation may become damaged.

10. Never cover the fan or intake opening (end cap with filter). Ensure that the intake opening remains free from fluff and hairs. Danger of fire!
11. Keep jewellery chains away from the intake opening so that they are not drawn into the appliance!
12. The cable must not be twisted, pulled, kinked or wound around the dryer. If the cable is twisted, untwist it before use.
13. Never try to repair a defective appliance yourself.
14. Danger of burning! The air outlet and attachments can become very hot. Do not touch them during operation. Allow styling nozzle to first cool before taking it off.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

What's in the box

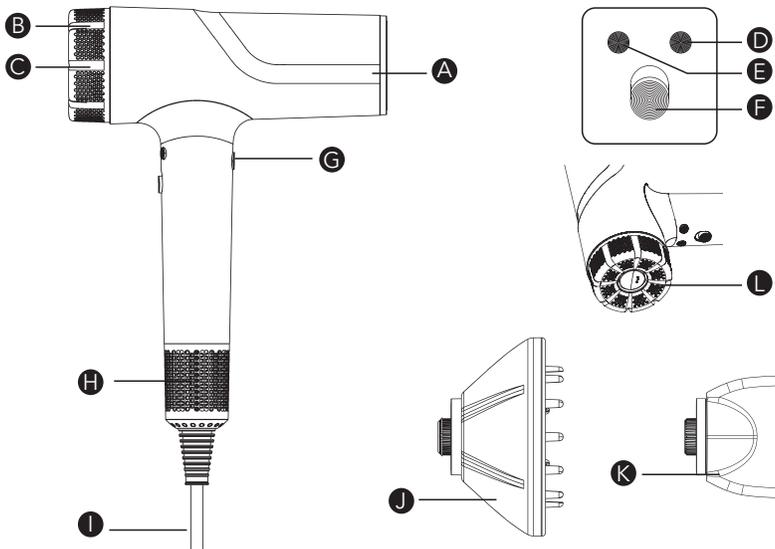

- | | | |
|-----------------------|----------------------|--------------------|
| A. Air outlet | E. Fan speed | I. Power cord |
| B. Air inlet grille | F. On/off switch | J. diffuser |
| C. LED light | G. witch of cold air | K. concentrator |
| D. Temperature switch | H. Air inlet grille | L. Speed indicator |

Intended use

1. This device is intended for indoor use only.
2. The appliance is only intended for drying and styling natural hair. It should not be used with artificial hair.
3. The guarantee becomes void if the appliance is used for any other purpose.

How to use the dryer

- Before using this product, it is recommended to use a dry towel to wipe off the moisture on the hair and use a comb to comb the tangled hair.
- Please fully insert the power plug into the socket.
- Turn on the power switch and start the hair dryer. When used for the first time, the fan speed gear is automatically set to [low speed], and the temperature is automatically set to [cold wind]. Select the appropriate fan speed through the speed button. This product has 3 levels of fan speed and each time the fan speed button is pressed, the fan speed will increase. The three fan speeds are [low speed], [medium speed], and [high speed]. When the fan speed is low, one light appears. When the fan speed is middle, two light appears. When the fan speed is high, three light appears.
- Select the appropriate mode through the temperature button. This product has three modes, and each time the temperature button is pressed, the mode will enter Line switching. The blue light appears to indicate cold fan. The appearance of orange light indicates warm fan. The appearance of red light indicates hot fan
- By pressing the cold air button, cold fan can be obtained for shaping purposes.
- When using this product, please keep your hair away from the air inlet and outlet.
- After use, please turn off the power switch.
- After confirming that the power switch is in the off state, unplug the power plug from the socket. Please place this product on an insulated surface.

- Wait for the product to completely cool before storing.

Note: the concentrator creates focused airflow for fast ,gentle hair drying, hair concentrator are generally used to create sleek, smooth styles, Good for spot drying hair from roots to ends, quickly and evenly.

Diffuser can create hairstyles, including but not limited to the following

- a. Using the comb teeth of the diffuser to contact the scalp, slowly move 3-4 times from the hairline towards the top of the head to make the area around the hairline fluffy.
- b. Use the comb of the diffuser to contact the top of the head, slowly move in a circular motion 3-4 times, maintain for about 3-4 seconds, and then comb towards the back of the hair to make the hair at the top of the head lotus loose.
- c. Using the comb of the diffuser to comb hair from the root to the tip can make the hair hang down smoothly.
- d. After using the diffuser to hold the curly part of the hair, it can maintain the curly shape while drying the hair

Cleaning and care

1. Before cleaning, make sure to switch off the appliance (Set to off) and disconnect it from the electrical outlet and let it cool down completely.
2. Never immerse the appliance in water or other liquids. Clean the appliance with a soft , slightly damp cloth. The air inlet grille can be disassembled and cleaned. Never use corrosive detergents, wire brushed ,abrasive scourers, metal or sharp implements to clean your appliance.
3. Dry the appliance thoroughly after cleaning.
4. Store the appliance in a cool ,dry location, away from children and pets