


Goblin[®]

GOUVN001B5M Pets Upright vacuum cleaner

User Guide

220-240V~ 50-60Hz 400W

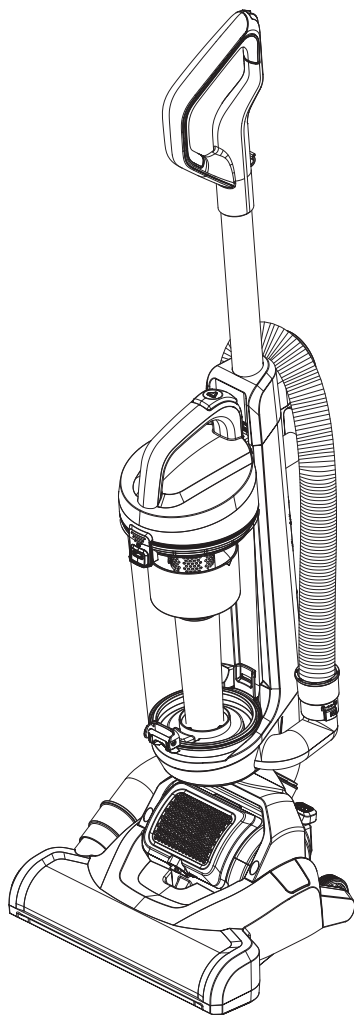

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We're here to help you get the most from your vacuum cleaner, so please keep hold of this manual for future use.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATIONAL PRECAUTIONS YOU SHOULD BE AWARE OF.

1. Read all warnings & instructions in this manual to ensure you get the best out of your product.
2. Don't use the vacuum cleaner for anything other than its intended use. The appliance is not suitable for commercial use. This appliance is only for household domestic indoor use and car cleaning.
3. Do not use if the vacuum cleaner, cord or plug is damaged.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
5. Remove all packaging prior to use. Inspect the product for any damage before use. If damage is found, notify ASDA to exchange the product.
6. Before connecting the vacuum cleaner to the power, check the voltage shown on the appliance corresponds with the voltage in your home. If it doesn't, contact your local store.
7. Keep the vacuum cleaner away from heat sources or direct sunlight.
8. **WARNING:** Keep the appliance dry.
9. To avoid electric shock or injury, never immerse the vacuum cleaner body, cord or plug in liquid or water.
10. Do not handle the appliance with wet hands.
11. Keep away from harsh or abrasive cleaning agents or solvents.

- 12.** Ensure you assemble the vacuum cleaner correctly before use.
- 13.** Do not use attachments not recommended by the manufacturer.
- 14.** Always disconnect the appliance from the power supply before assembling, disassembling or cleaning.
- 15.** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 16.** ASDA does not recommend allowing children to operate this appliance.
- 17.** Cleaning and user maintenance shall not be made by children without supervision.
- 18.** Only carry the vacuum cleaner by the carry handle.
- 19.** DO NOT use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water.
- 20.** Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, pull the cord around sharp corners or edges, or expose the cord to heated surfaces.
- 21.** Ensure fingers and objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped in the vacuum if used improperly.
- 22.** Keep hair, loose clothing, jewellery, fingers, feet and all parts of your body away from openings and moving parts.
- 23.** Keep all air vents clear and free of dust, lint, hair and anything else that may reduce air flow.
- 24.** Avoid directing the vacuum cleaner near naked flames as the air discharged may extinguish gas fires and pilot lights or disturb ashes in an open fire.
- 25.** DO NOT use the vacuum cleaner to suck up large objects or objects that are likely to damage the vacuum cleaner.

- 26.** DO NOT attempt to vacuum long hair, string, pieces of cloth etc., as these may clog the vacuum cleaner.
- 27.** DO NOT vacuum hot items e.g. cigarettes, matches, ashes.
- 28.** DO NOT vacuum fine dust, such as brick dust, plaster dust etc. This may damage the vacuum cleaner.
- 29.** DO NOT vacuum hard or metal objects, nails, pins etc.
- 30.** DO NOT pick up toxic or flammable materials or use in the presence of explosive or toxic dust, liquids or vapour.
- 31.** DO NOT put objects into openings.
- 32.** Use only on dry indoor surfaces.
- 33.** Never use to suck up water or liquids.
- 34.** DO NOT use without all the filters in place or with any filter blocked.
- 35.** DO NOT use the vacuum cleaner to clean animals.
- 36.** Switch the cleaner off before plugging or unplugging the vacuum cleaner into the mains supply, and when attaching or removing accessories.
- 37.** Take extra care when vacuuming stairs.
- 38.** Keep any attachments away from your face and body.
- 39.** This vacuum has a thermal safety device which cuts off the power when overheated. If this happens, unplug the vacuum and allow it to cool down completely before reusing.
- 40.** Wrap the cord loosely on the cable hook behind the main body before storing.
- 41.** The appliance shall not be left unattended while it is connected to the supply mains.
- 42.** Environmental information: If at anytime in the future you should need to dispose of this product, please note that, in the UK, waste electrical products/batteries should not be disposed of with household waste.
- 43.** Some delicate rugs and floor surfaces are not suitable to be cleaned with an upright vacuum cleaner with a rotating brush. For example, some loop pile carpets, loose lightweight rugs, and deep pile carpets or rugs with long fibres. Do not place or use the vacuum on these surfaces.

AUTOMATIC THERMAL CUT OUT


A safety thermostat inside the cleaner protects the motor from overheating if the airways or filters are clogged. If the vacuum cleaner suddenly stops working during operation, switch off and unplug immediately. Allow the motor to cool for an hour, empty the dust canister and thoroughly clean the filters and airways. Plug in the vacuum again and switch on. The vacuum should now operate normally.

This is a vacuum cleaner for general purpose, of which measurement and calculation methods used comply with EN 60312-1 & EU regulation No. 666/2013

What's in the box

- Pet upright main body
- Hose
- Handle
- Turbo brush
- User guide
- Spare HEPA filter


Features

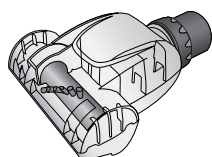

**Small turbo
brush**




**3 in 1
multi-tool**

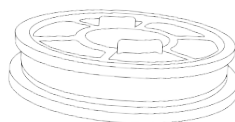


**Spare HEPA
filter**

Features

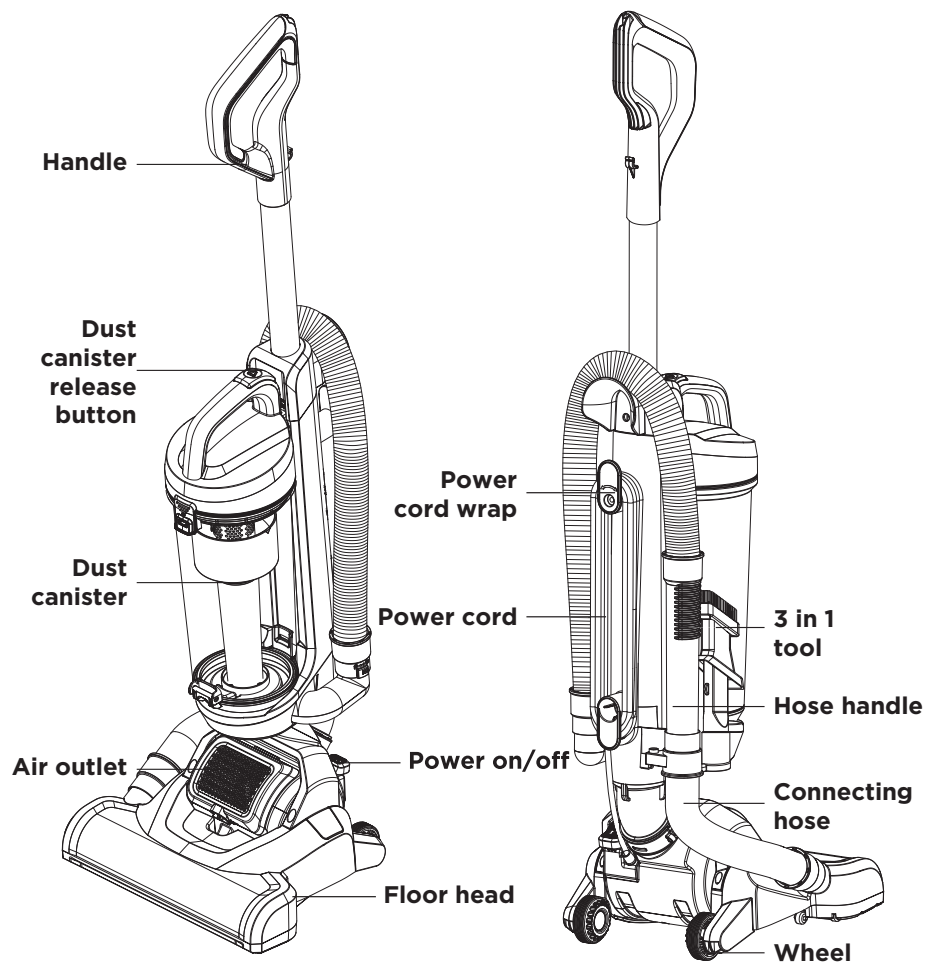


Assembling and using the pet upright vacuum cleaner

Before assembling or disassembling attachments, ensure the vacuum cleaner is not plugged into the mains supply and is switched off.

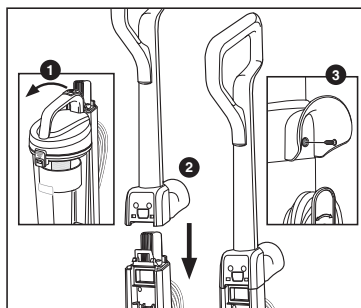


Remove the dust canister before installing handle. Push the handle onto the vacuum body, and use a Phillips screwdriver to secure it with the screw provided.


IMPORTANT: The handle must be inserted first before replacing dust canister.

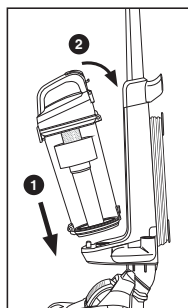


Place the dust canister back onto the machine and push until it clicks into place.

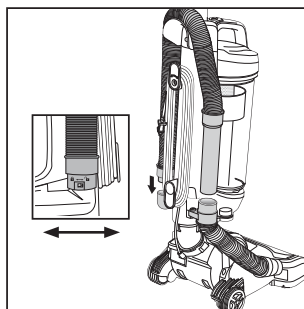


Place the short hose end onto the connector (left hand side if looking at the back of the vacuum), and rotate clockwise to lock.

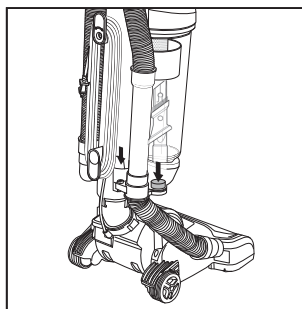


Push the hose handle into the connector, and place the 3-in-1 attachment onto the storage holder in front of the hose handle.

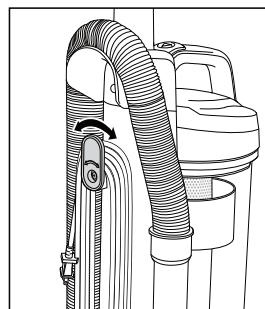


Twist the quick release cord hook to release the power cord.

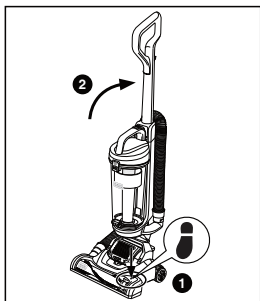

Step on the brush cover and pull back on handle, to engage for operation.

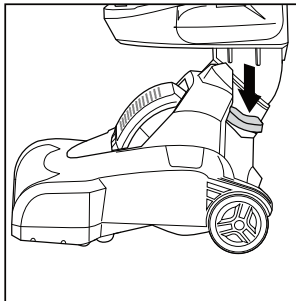

Plug in your machine and push ON/OFF button to switch ON/OFF.

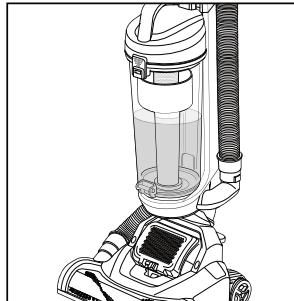


To maintain optimal performance, please empty dust canister when debris reaches MAX FILL line.

Using the attachments

When changing the attachments ensure the pet upright vacuum cleaner is switched off.

3-in-1 Crevice Tool Accessory

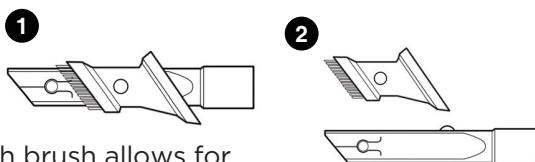


The 3-in-1 crevice tool with brush allows for vacuuming in narrow and hard-to-reach places.

Push the locking tab in to remove the brush accessory.

Use the soft bristles for dusting surfaces, and reverse the attachment to use as an upholstery tool.

Small turbo brush

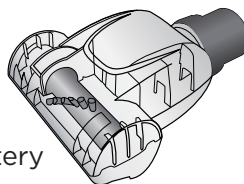

Ideal for carpeted stairs, fabric upholstery and small carpeted areas.

This tool has rubber fins to help lift hair and fibres. Place the tool onto the surface and move towards you. Don't apply downward pressure to the tool.



Not suitable for delicate fabrics or surfaces; please use the 3-in-1 tool for these. Do not use the attachment on animals.

Remove the hose handle from the machine. Always ensure the vacuum is in upright (parked position) when using the hose.

The rotating brush is lifted clear of the floor surface while the vacuum is parked upright. To prevent possible flooring damage, do not tilt the vacuum forwards or sideways while using the hose.


For stairs, position the cleaner with the rear wheels against the stair tread (vacuum cleaner facing away from the stairs), and use the attachments to clean each step.

The hose is ready to use alone, or fit the 3-in-1 crevice tool or turbo tool to suit the cleaning task.

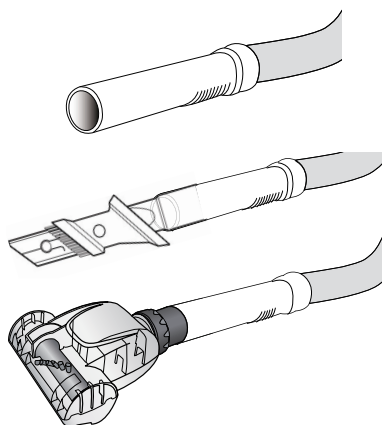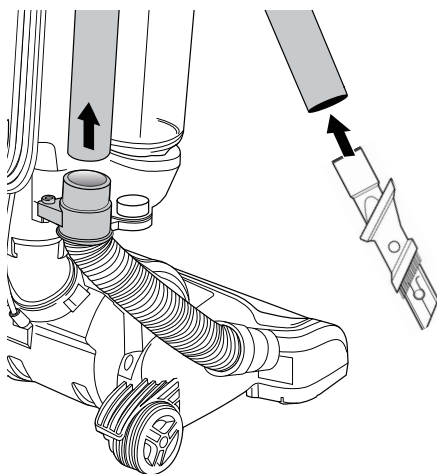


Removing and emptying the dust canister


Ensure the vacuum cleaner is switched off before emptying the dust canister.

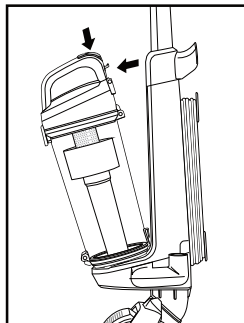

Press dust canister release button to remove the dust canister.

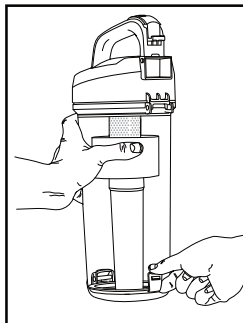

Hold dust canister over rubbish bin and unclip the lock on the bottom of the canister, allowing the dust to empty.

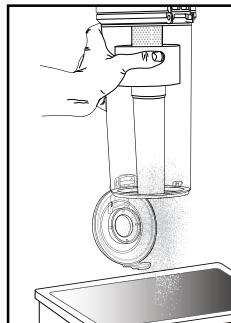

Close the base of the dust canister, align the canister base back onto the machine and push until it clicks back into place.

WARNING: If the filter or hose is clogged, the motor may shut down in order to protect itself from overheating. If this occurs, unplug the vacuum, clean the filter and inspect the hoses and canister for clogging. Allow 1 hour for the unit to fully cool down before resuming use.


Checking for blockages

Inspect the lower tube and nozzle and remove any dirt and debris.

The lower hose can be removed from the nozzle if needed.

Remove the main hose by rotating the connector to unlock, and check for blockages in the hose and elbow connector.


Remove the dust canister, and follow the steps on the next page for cleaning.

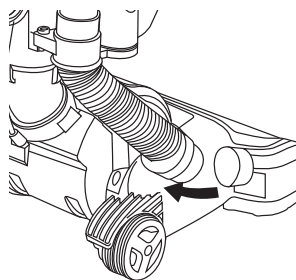


Cleaning the filters

Before starting any cleaning, ensure the vacuum cleaner is not plugged into the mains supply and is switched off.


Wash with water every month, allow at least 24 hours to dry and make sure it is dry thoroughly before re-using

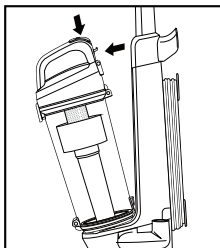


1. Remove the dust canister.

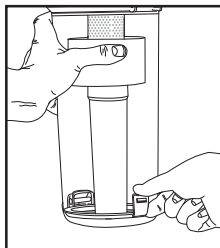


2. Push the release button, open the dust canister and clean all parts of the dust canister.

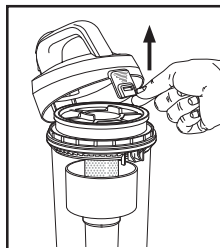


3. Open the dust canister filter lid located on top of the canister.

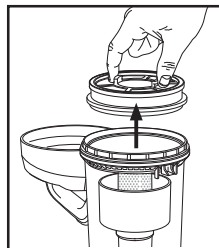


4. Remove the dust canister foam and HEPA filter. Shake and tap the foam and HEPA filter over a bin to remove any excess dust.

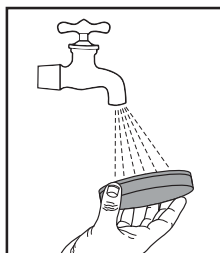

5. Use cold running water (no detergents) to wash both parts of the filter.

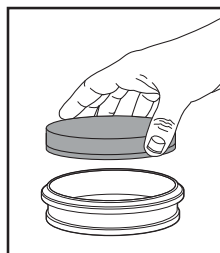

6. Allow filter to dry for 24 hours before putting back into vacuum cleaner.

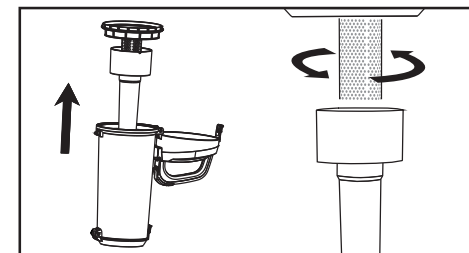

7. Lift the assembly from transparent dust canister, and then untwist filter from the central tube to remove for cleaning dirt and debris as needed. Follow steps in reverse to reassemble.


DO NOT operate without filter installed
DO NOT wash dust canister in the dishwasher
DO NOT install filter if it is damp

CAUTION: Do not turn the appliance on when the dust canister is removed. In order to keep the suction force optimised, the dust canister and filters must be cleaned regularly.

WARNING: Turn off and unplug vacuum cleaner before performing maintenance to the vacuum cleaner.


CLEANING BRUSH ROLL

Carefully remove any string, hair or debris located on the brush roll. You can use a tool such as a small knife or scissors to remove and cut any hair or string.

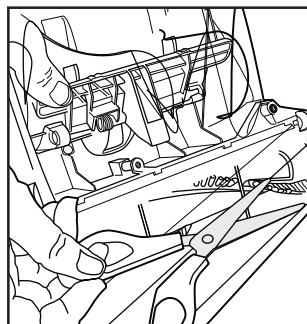


MAINTENANCE


Small turbo brush

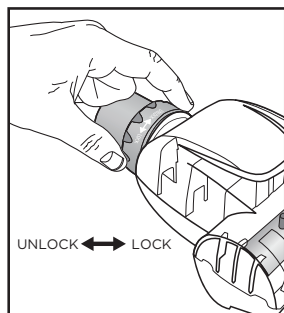

1. To release the turbo tool transparent cover for cleaning, twist the locking ring to the unlock position and remove it.

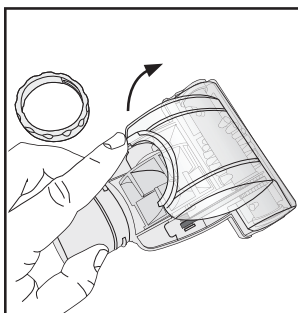

2. Pull up on the plastic upper cap of the pet tool as shown.

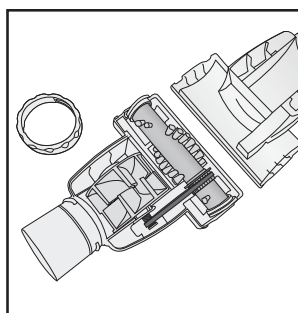






3. Remove plastic upper cap and clean, removing pet hair and debris.

- Do not clean the vacuum cleaner, components or accessories using petrol or any other flammable liquid or solvents, etc.
- Clean only the outside of the vacuum cleaner.
- Use only a moist cloth and mild detergent for cleaning the vacuum cleaner, components and accessories.
- After cleaning, wipe off the moisture on vacuum cleaner, components and accessories with a dry cloth.
- Do not place accessories, tools or components in a dishwasher.

Bush Roll

You should check your cleaner's brush roll and drive belt regularly for wear or damage. You should also clean the brush and brush ends by removing string, hair and carpet fibres. These can wrap around the brush and hamper its ability to effectively clean your carpet. Also remove any debris that has accumulated under the brush cover.

- Turn off vacuum and unplug from electrical outlet.
- Place vacuum upside down with brush roll facing upwards.
- Remove the six screws as shown with a small Phillips screwdriver (see image 1).
- Lift off brush cover(see image 2).It will unclip from the securing lug on the front of the housing.
- Grasp floor brush at both ends and remove by lifting out(see image 3).
- Clean string, hair and other debris from floor brush, motor pulley, and drive belt(see image 4).
- Check air passageway for obstructions. Remove debris from this area.
- When finished cleaning, reposition floor brush and drive belt. Turn floor brush by hand several times in the direction of the motor pulley. If properly installed, the drive belt will align itself on floor brush. Then replace the brush cover and re-install the six screws (see image 5)

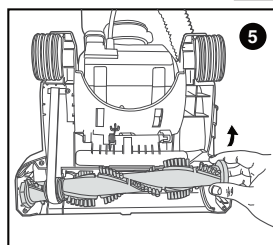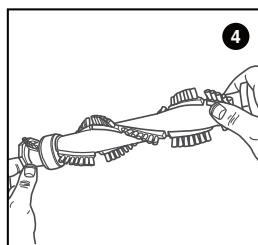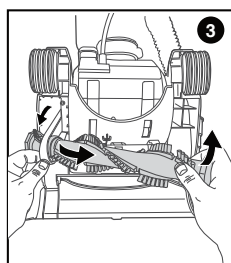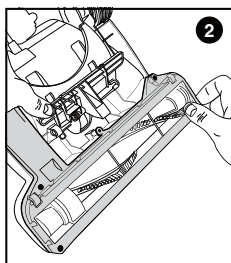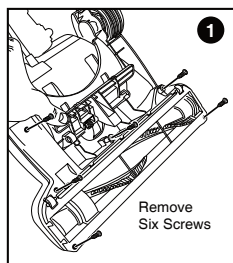





Replacing The Drive Belt

The drive belt is not included as spare part, contact Technical Helpline on the back page if a replacement is needed.

Make sure the vacuum is switched off and unplugged first.

Check the drive belt carefully for wear, cuts and stressed areas. If the drive belt appears worn, you will need to replace it. To remove the drive belt, read the instructions and follow the drawings below:

1. Grasp the old drive belt and remove from motor shaft. Discard old drive belt.
2. Loop new drive belt over motor shaft and stretch other end over floor brush in the space provided between the bristles.
3. Place ends of floor brush down into slots on sides as shown. Turn floor brush by hand several times in the direction of the motor shaft. If properly installed, drive belt will align itself on floor brush.
4. Replace brush cover and six screws.

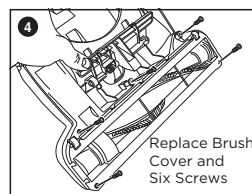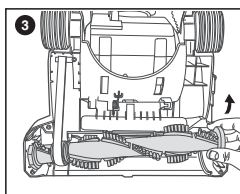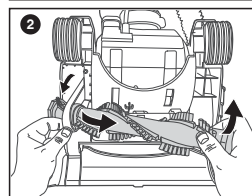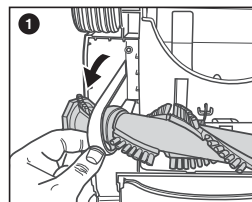

Replace Brush
Cover and
Six Screws

ENERGY CONSUMPTION

Information for power consumption and maximum time to reach applicable low power condition:

Off mode:

0.0W

The maximum time needed to reach the applicable low power condition:

At once after power switch was turned to OFF

Goblin®

Your 28 day no quibble refund

If you're not delighted with your product, simply bring it back within 28 days for a no quibble refund. Don't forget to include all of the product's original components (for example remote control, power cable or stand) and packaging, along with your receipt or other proof of purchase.

1 year guarantee

This product is covered by a full 1 year Asda guarantee from the day you buy it. In the unlikely event that your product is faulty or you are simply struggling to set it up, don't worry - here's what you should do.

1. First call our Customer Helpline as they may be able to help you with the problem 2. If the problem can't be resolved, you will receive a reference number. 3. Take the reference number, along with the item, all its components and your receipt, to your nearest store for a full refund.

Customer services information

If you require further information, spare parts or advice regarding your product, or if you are experiencing any problems, please contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please quote the product site code.

Call
0333 600 7700

Write
ASDA, Leeds LS11 5AD

Product name: **GOUVN001B5M Pets Upright vacuum cleaner**

Product site code: **15A.06.25.059**

Troubleshooting

Problem	Solution
Low suction power	1. Empty the dust canister and clean the filters. 2. Check for blockages in the airpath: nozzle hose and connector, main hose, and the elbow connector between the hose and dust canister. 3. Remove any hair/threads from the brushroll, and check it is rotating correctly.
Vacuum is difficult to push on certain carpets	There is a flexible sealing strip on the floorhead behind the brushroll opening. Pinch one end to lift it slightly, and slide out of the floorhead sideways from one end to remove. This will make the cleaner easier to push over plush carpet.
Vacuum cleaner switches off during use	The thermal cutout has activated as the airflow is restricted. Unplug the vacuum, empty the dust canister, clean filters and check for blockages. Allow the motor to cool for 1 hour before resuming use.
Strange sound/smell	Switch off and unplug. Check that nothing has become caught in the brushroll in the floorhead. If the brushroll is jammed by an object or built up of hair or debris, this may damage the belt. Remove the cover and inspect the belt; replace if needed.

Copyright

© 2025 ASDA Stores Limited.

All other trademarks appearing herein are the property of their representative owners. Specifications are subject to change without notice.

Manufactured for:

ASDA,
Leeds LS11 5AD/ASDA,
Antrim BT41 4GY

Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK.

For more information, please contact the local authority or your retailer where you purchased the product.



For PDF copy of this manual please scan QR code and search for model number

Goblin®



ASDA
technical support
0333 600 7700